



CASTER INSTALLATION INSTRUCTIONS

- **REMOVE THE BULLET FOOT ON THE LEGS**
- Install caster into 1 5/8" leg.
- Tighten the caster using a 3/4" open end wrench. Tighten the bolt to expand the expander inside the leg until it is tight and can not be removed from the leg.
- The caster should be secure and the table should be ready to use.

