

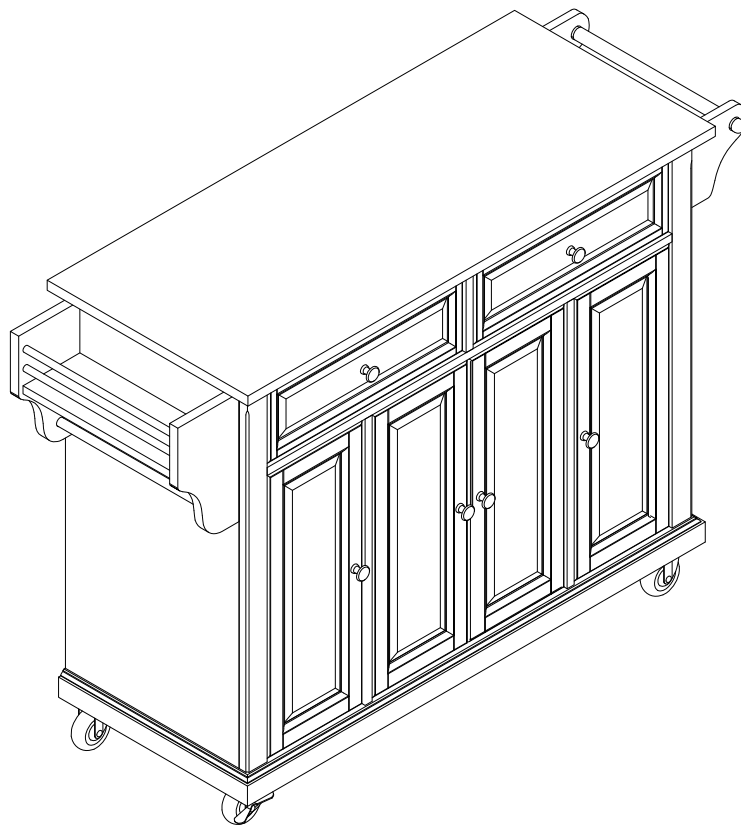
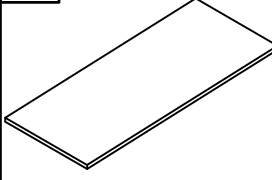
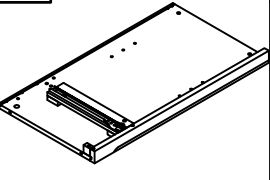
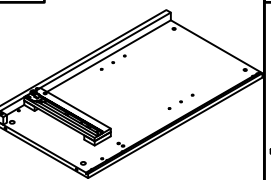
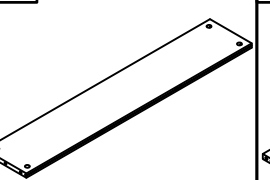
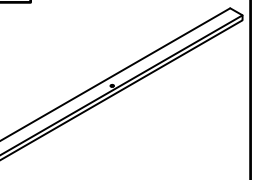
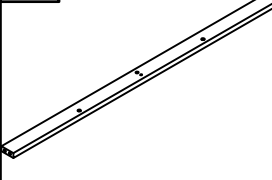
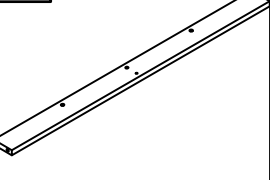
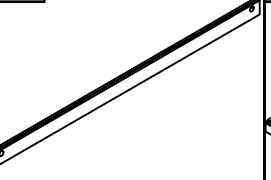
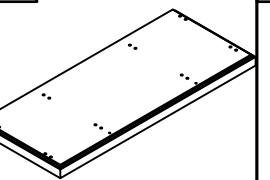
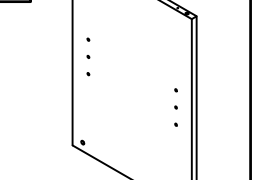
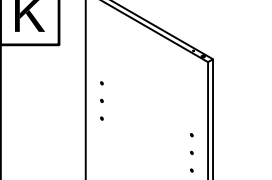
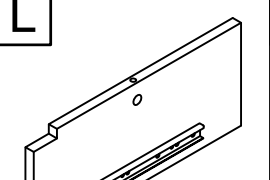
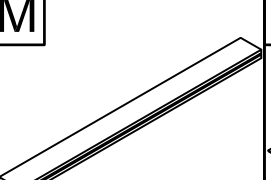
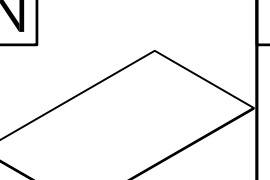
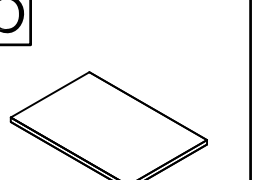
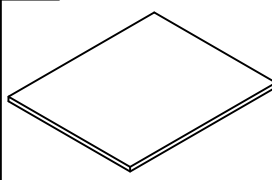
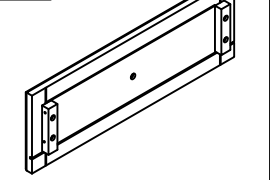
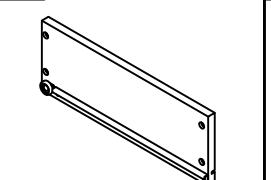
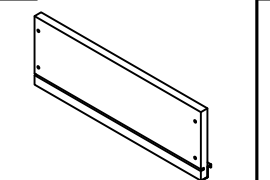
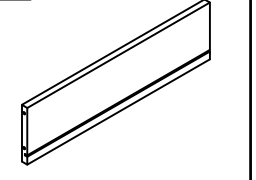
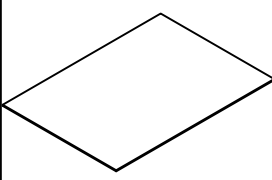
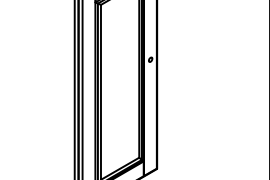
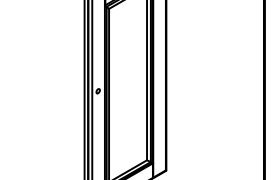


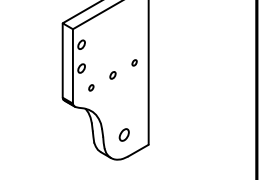

 



 
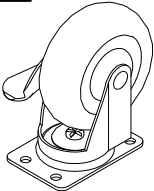
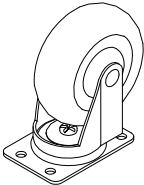
 
Kitchen Cart / Island CF3020

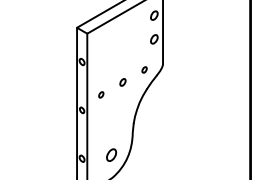




 

 
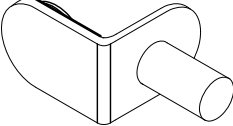
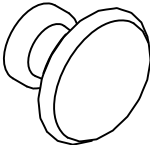
 
 
 
 

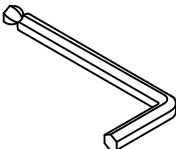

 


 
 
PART LIST

A  (Ships Separately) Top Panel 1 PC	B  Left Panel 1 PC	C  Right Panel 1 PC	D  Back Top Panel 1 PC	E  Front Top Rail 1 PC
F  Back Top Rail 1 PC	G  Front Middle Rail 1 PC	H  Back Bottom Rail 1 PC	I  Bottom Panel 1 PC	J  Left Partition Panel 1 PC
K  Right Partition Panel 1 PC	L  Top Vertical Panel 1 PC	M  Back Partition Panel 2 PCS	N  Back Panel 3 PCS	O  Adjustable Shelf 2 PCS
P  Middle Adjustable Shelf 1 PC	Q  Drawer Front Panel 2 PCS	R  Drawer Left Panel 2 PCS	S  Drawer Right Panel 2 PCS	T  Drawer Back Panel 2 PCS
U  Drawer Bottom Panel 2 PCS	V  Left Door Panel 2 PCS	W  Right Door Panel 2 PCS	X  Towel Bar Left Panel 1 PC	Y  Towel Bar Right Panel 1 PC

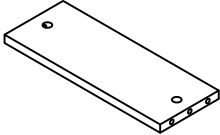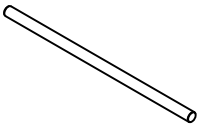PART LIST


<div>Z</div> 	<div>ZA</div> 	<div>ZB</div> 	<div>ZC</div> 	<div>ZD</div> 
<div>Support Bar</div> <div>2 PCS</div>	<div>Support Panel</div> <div>1 PC</div>	<div>Towel Bar</div> <div>1 PC</div>	<div>Small Towel Bar Panel</div> <div>2 PCS</div>	<div>Small Towel Bar</div> <div>1 PC</div>
<div>ZE</div> 	<div>ZF</div> 	<div>ZG</div> 		
<div>Locking Caster</div> <div>2 PCS</div>	<div>Caster</div> <div>2 PCS</div>	<div>Leg</div> <div>4 PCS</div>		

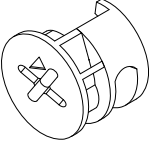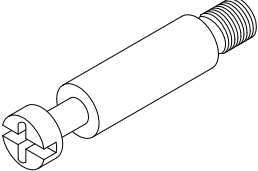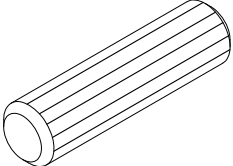HARDWARE LIST

#1 	#2 	#3 	#4  2"×Ø1/4"×D11mm	#5 
Cam Lock 19 PCS (Extra 2)	Cam Bolt 19 PCS	Wood Dowel 55 PCS (Extra 1)	Long Bolt 14 PCS	Screw 16 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
Barrel Nut 8 PCS	Shelf Holder 12 PCS	Knob 6 PCS	Round Head Bolt 6 PCS	Large Round Head Screw 16 PCS (Extra 1)
#11 	#12 	#13 	#14 	#15 
Double Magnet 1 PC	Magnet 2 PCS	Round Head Screw 6 PCS (Extra 1)	Allen Wrench 1 PC	Long Screw 7 PCS (Extra 1)
#16  1-1/2"×Ø5/16"×D13mm	#17 	#18 	#19 	 (Spare Part)
Short Bolt 4 PCS (Extra 1)	Flat Washer 4 PCS (Extra 1)	Spring Washer 4 PCS (Extra 1)	Adjustable Leveler 4 PCS	Pin Hinge (Extra 4)

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.

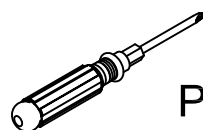


Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #2) into top panel (part A), left panel (part B), right panel (part C), towel bar left panel (part X) and towel bar right panel (part Y) using phillips head screwdriver.

NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

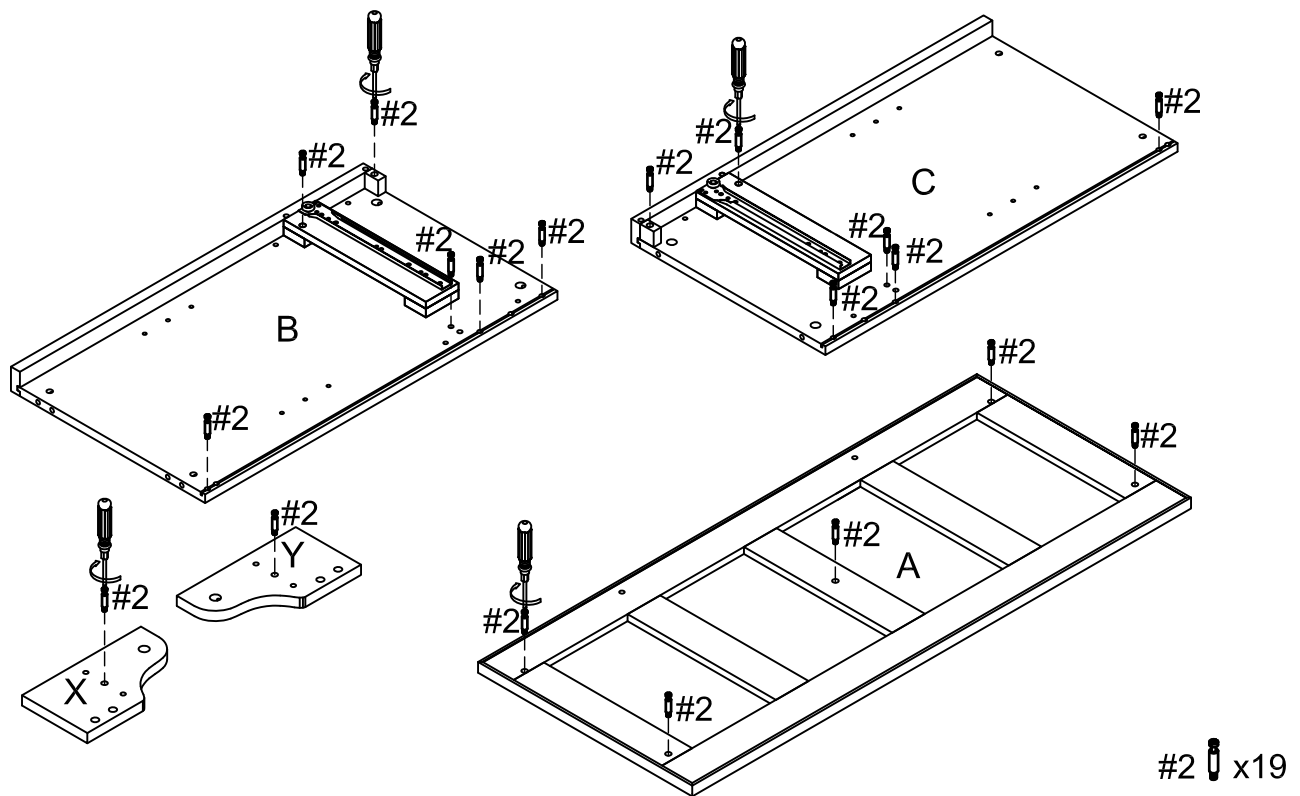


Step 2. Attach knobs (part #8) to drawer front panels (part Q), left door panels (part V) and right door panels (part W) using round head bolts (part #9) and phillips head screwdriver. Attach drawer left panel (part R) and drawer right panel (part S) to drawer front panel (part Q) using screws (part #5) and phillips head screwdriver. Slide drawer bottom panel (part U) into grooves of assembled unit (parts Q, R & S). Attach drawer back panel (part T) to assembled unit (parts R, S & U) using screws (part #5) and phillips head screwdriver. Repeat for remaining drawer.

NOTE: Be sure drawer glide wheels are facing back panel.

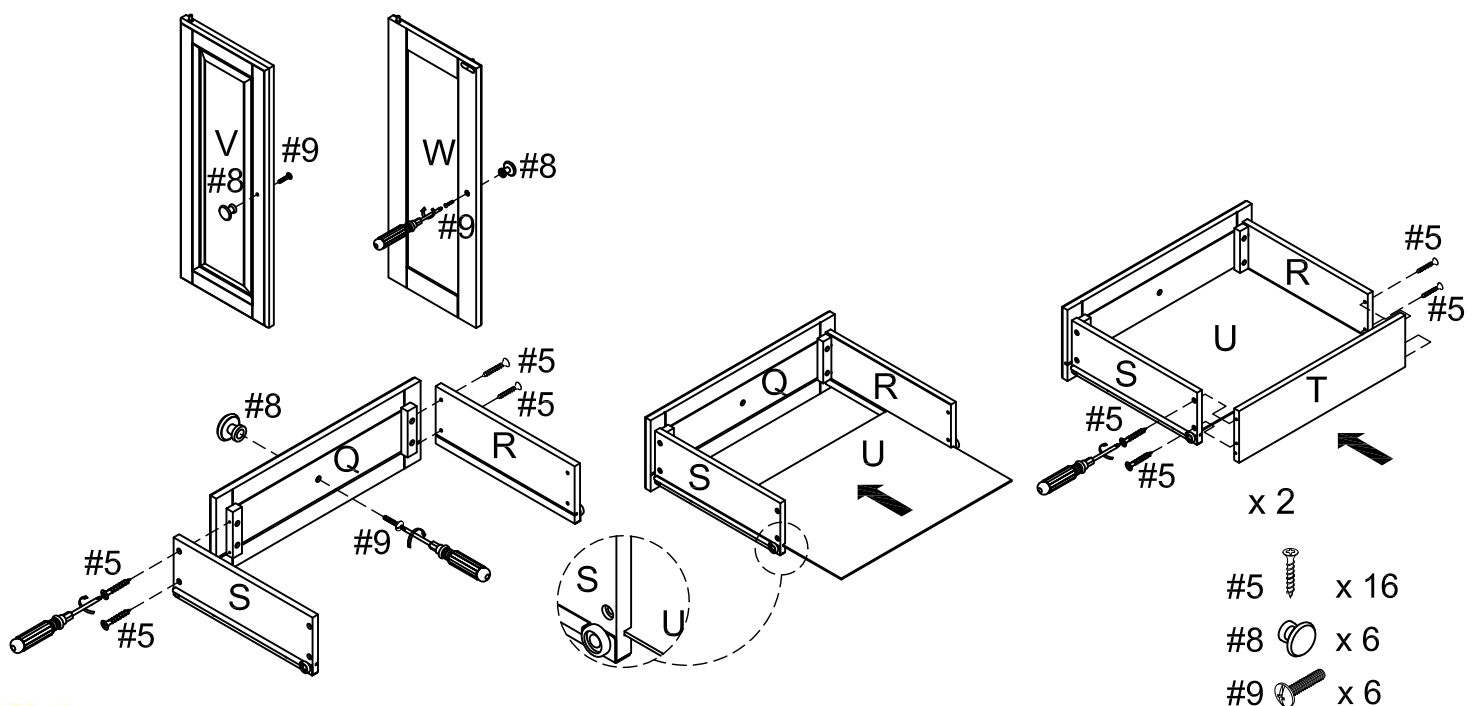

Step 3. Attach front top rail (part E) to top vertical panel (part L) using wood dowel (part #3), long screw (part #15) and phillips head screwdriver. With front top rail (part E) flat on ground, attach front middle rail (part G) and back top rail (part F) to top vertical panel (part L) using wood dowels (part #3), long screws (part #15) and phillips head screwdriver.

NOTE: Please ensure screws are aligned with the pre-drilled holes in top vertical panel (part L) before tightening.

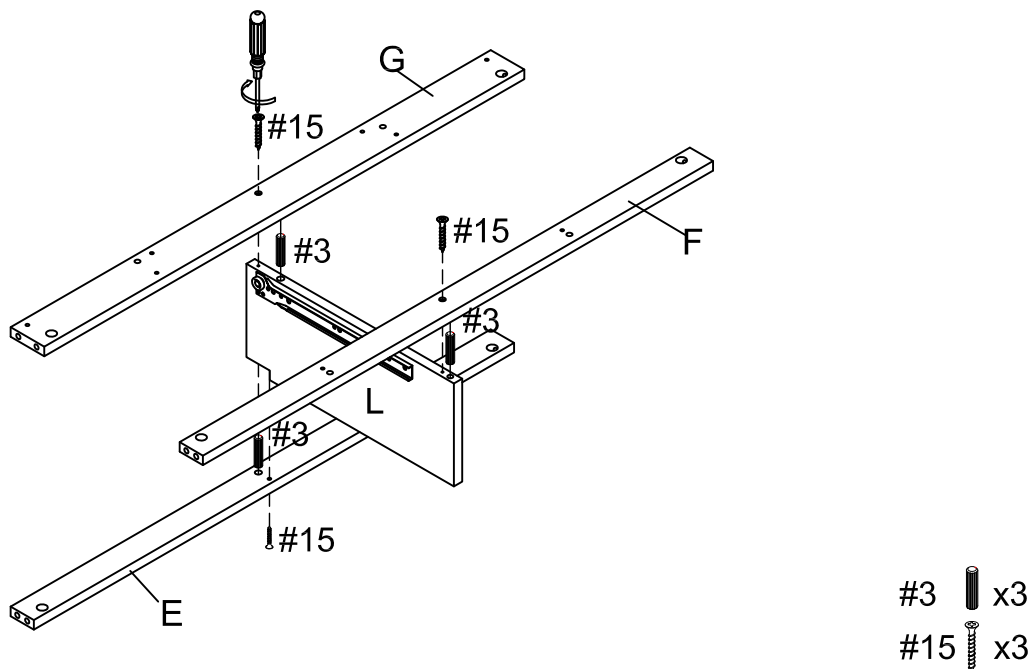

Step 4. Attach assembled unit (parts E, F, G & L) to right panel (part C) using wood dowels (part #3) and cam locks (part #1). Attach back top panel (part D) to right panel (part C) using wood dowel (part #3) and cam locks (part #1).

NOTE: Cam locks must rotate a full 180°. See pictured insert.

