



Troubleshooting

1. To erase memory and start over
 1. Unplug the unit (cut power) wait 30 seconds and plug back in.
 2. Press the very small button on top of motor on left side with ink pen once
 3. Press an up or down key on the remote within 3 seconds. Make sure no other remotes are in operation at that time.
 4. Reset the limits (follow previous instructions)

YOU MUST KEEP SWITCHES PAIRED WITH MOTORS (“A” Switch with “A” motor)

To set motor pack to factory setting and erase all switch pairings hold small white button on motor for 3 beeps(hold 10 seconds) then unplug and replug and go to step 1 above