

# 4WP Series Installation Instructions



## • Swing Out Unit (25" tall version shown)

### Contents

- 1- Pantry Unit with Piano Hinge
- 1- Magnetic Catch and Strike Plate
- 4- Wire Fence pieces for top shelf (if needed)
- 8 - Wood plugs for top shelf (if wire fence is not used)
- 2- 1/4" spacers
- 1- Screw pack

### Items needed for installation

- Phillips Head Screw Driver
- 3/4" wood spacer

**Note:** If adequate clearance is available, install top shelf wire fencing. If clearance is not available install wood plugs into holes


**Step 1.** Set Swing Out unit in cabinet with 3/4" spacer underneath for floor clearance.

**Note:** For opposite-hand installation, remove pantry shelves and chrome rails from bottom shelf. Turn pantry unit over. Reinstall shelves and chrome rails.

**Step 2.** Swing Piano Hinge around to inside of cabinet where unit is to be installed.

**Step 3.** Place the 1/4" spacers between unit and center divider of cabinet. One at top and bottom of unit

### Top View

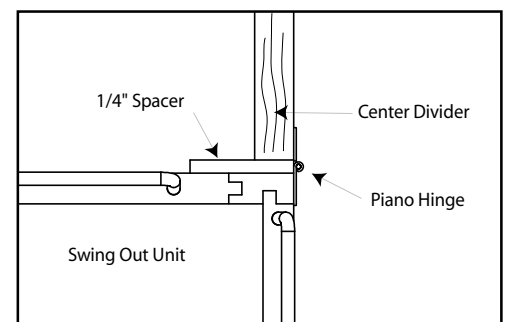

# 4WP Series Installation Instructions



## • Swing Out Unit

**Step 4.** Screw Piano Hinge into cabinet using screws that came packaged with hinge & install magnetic catch and strike plate using screws provided then remove and discard spacers.

