



UC-PS16-30


1. Round Vertical Adapter

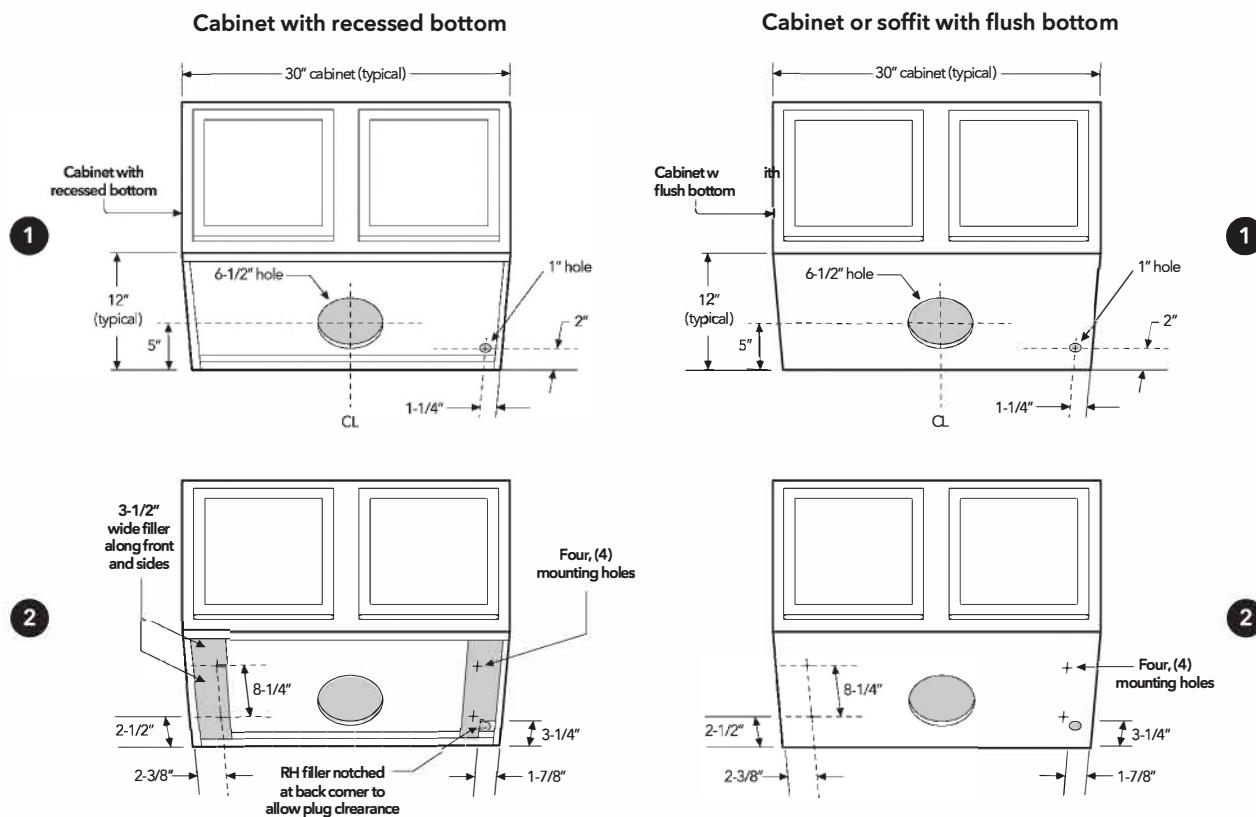

2. Rectangular Vertical Adapter

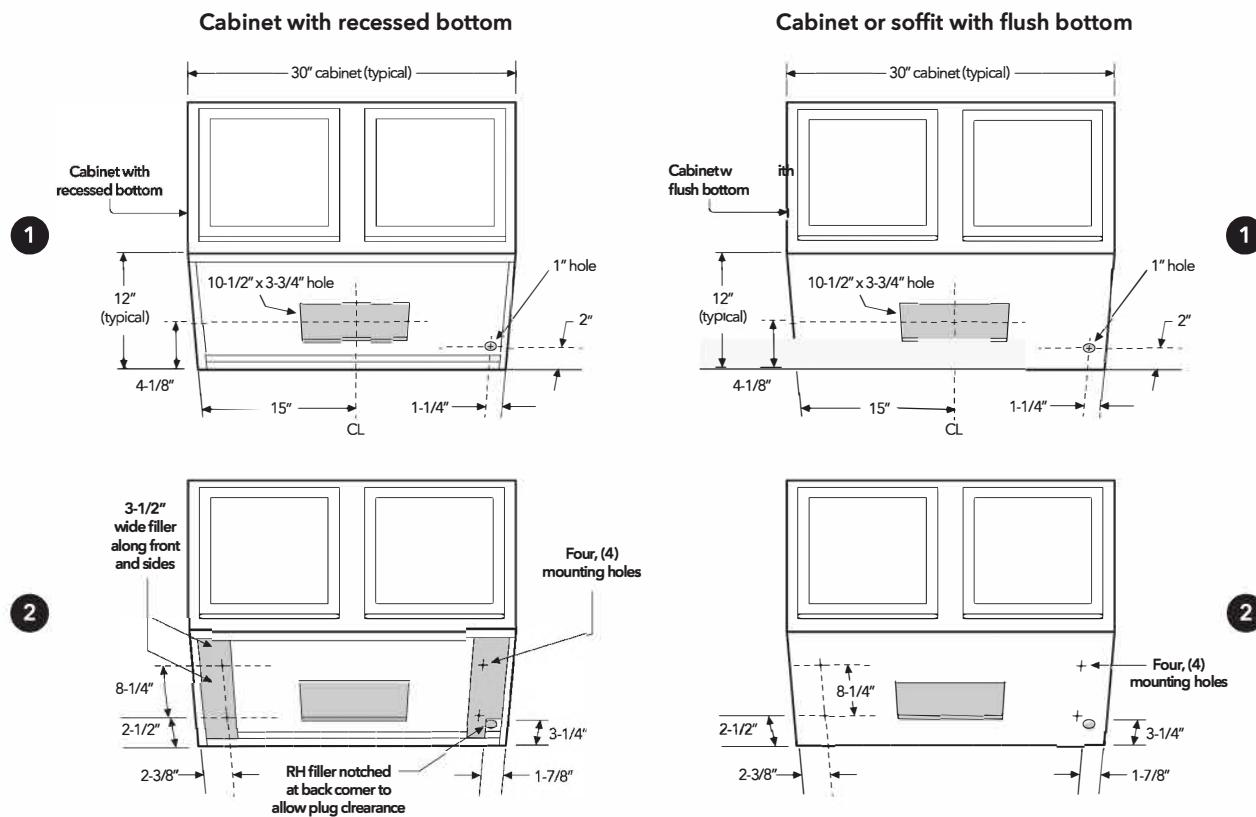


3. Rectangular Horizontal Adapter

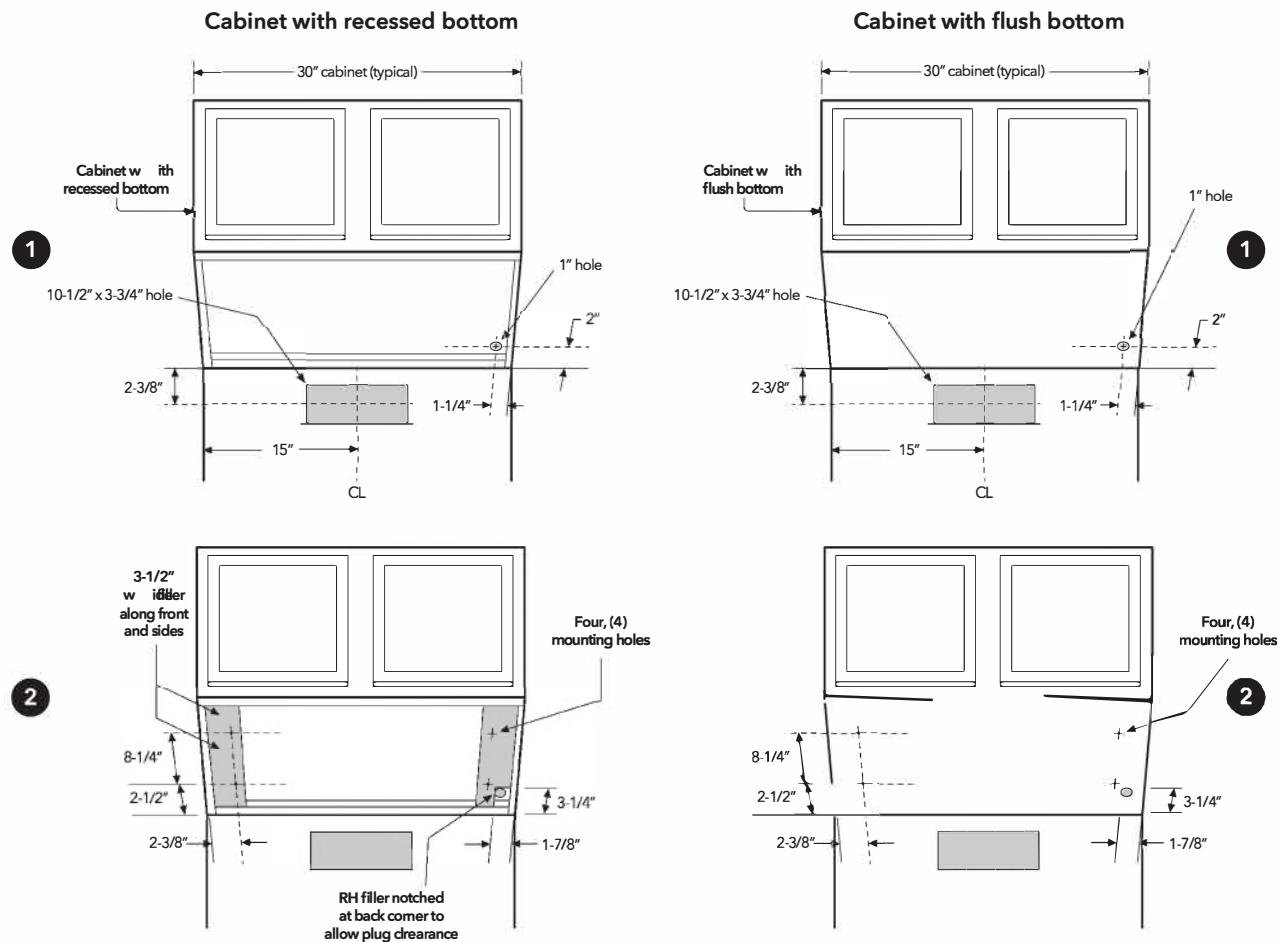




UC-PS16-36

1. Round Vertical Adapter

Cabinet with recessed bottom

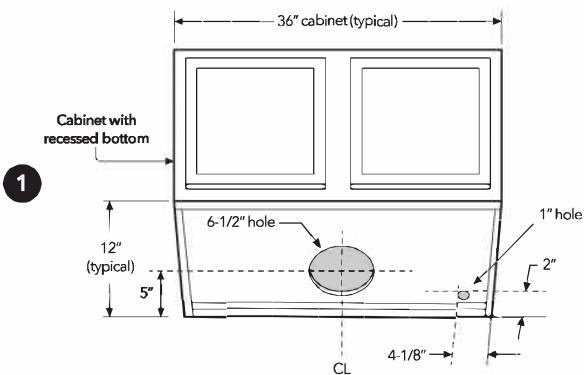


Cabinet or soffit with flush bottom

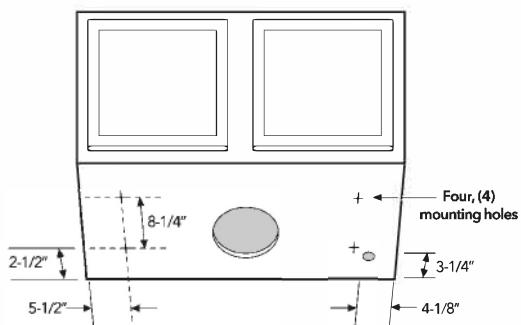
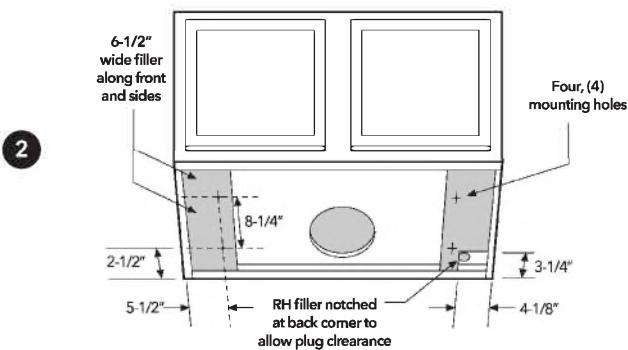
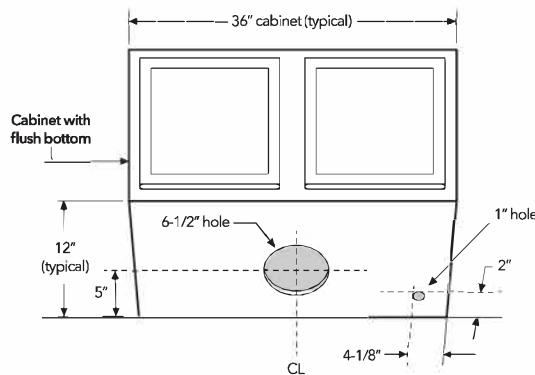


2. Rectangular Vertical Adapter


Cabinet with recessed bottom

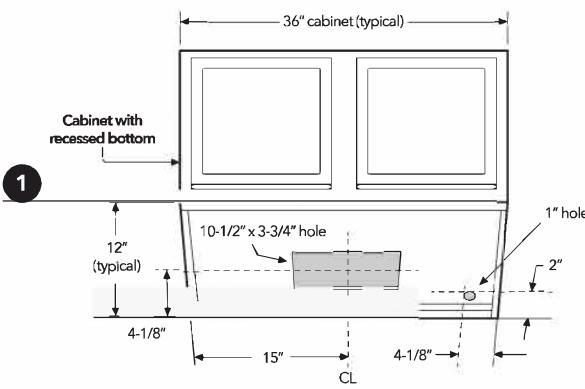


Cabinet or soffit with flush bottom

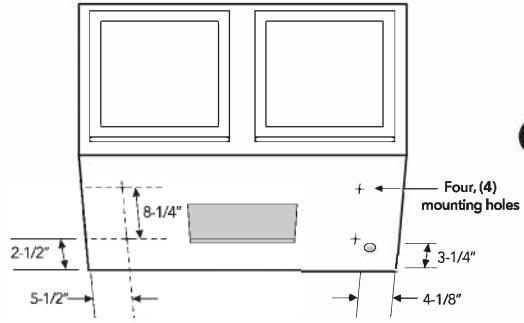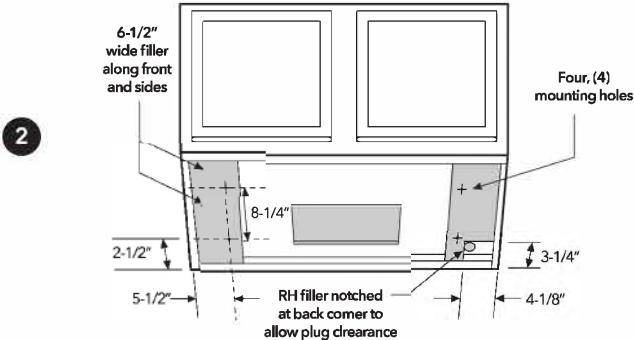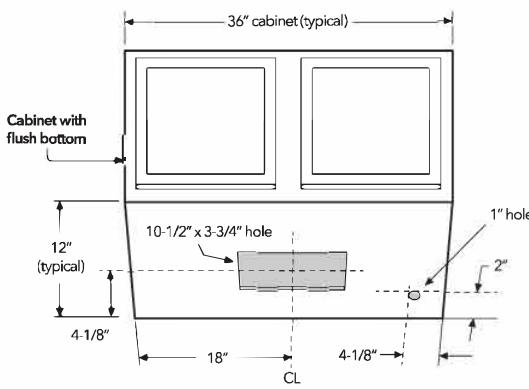

3. Rectangular Horizontal Adapter

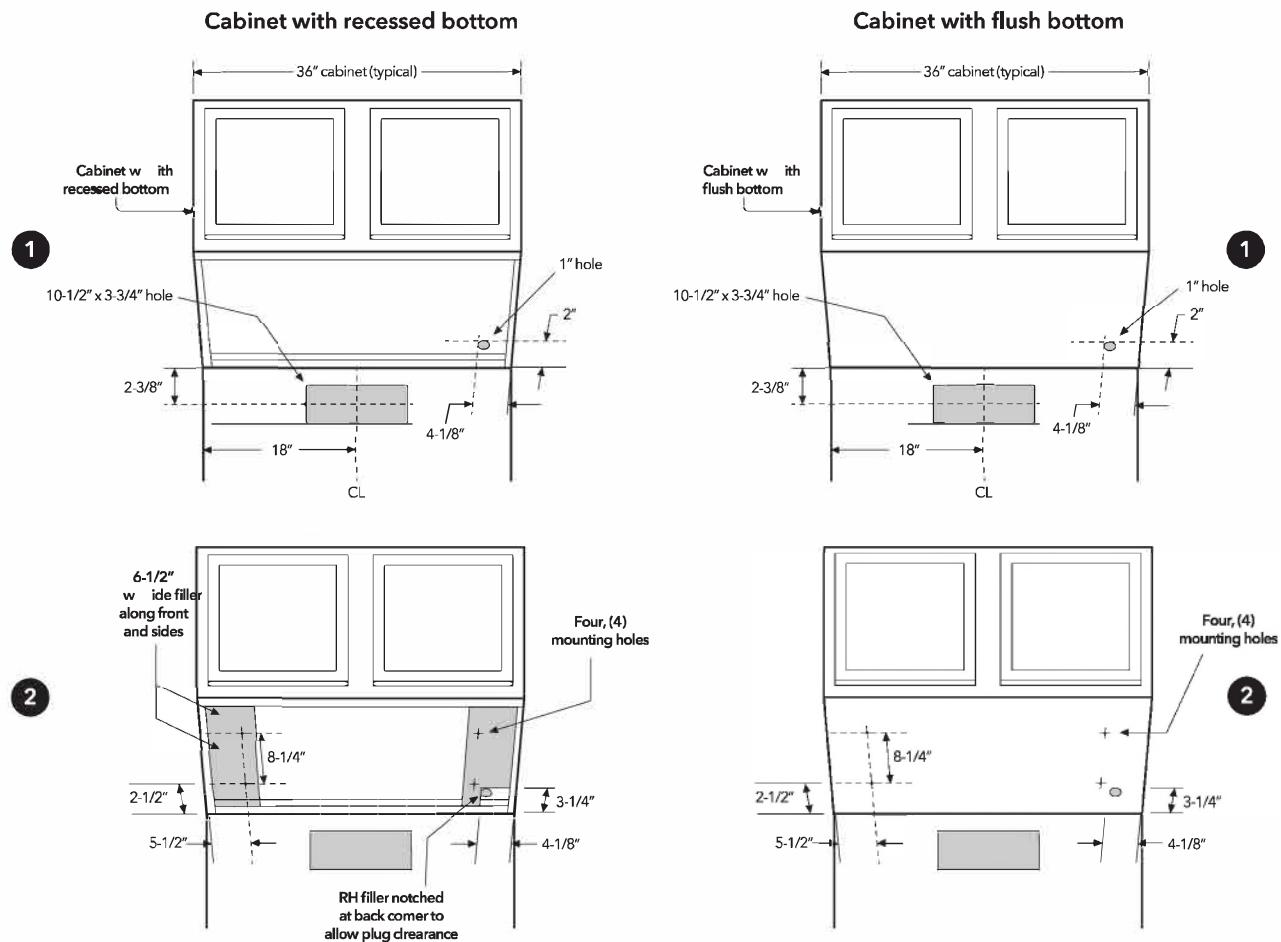


Ductless Version

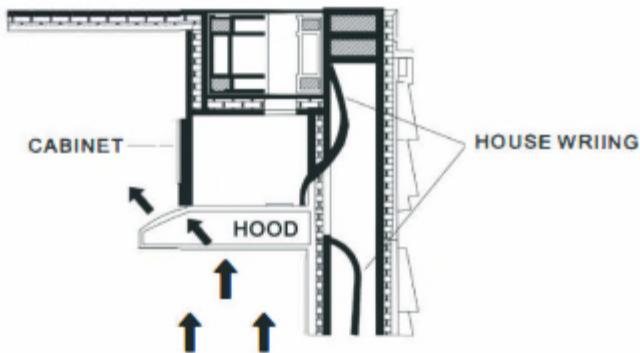

1. It can be modified to ductless version(re-circulates the air back into the kitchen) with addition of Charcoal Filter (sold separately).
2. For ductless version, no need to install a duct.

Grill Plate for Ducted Version

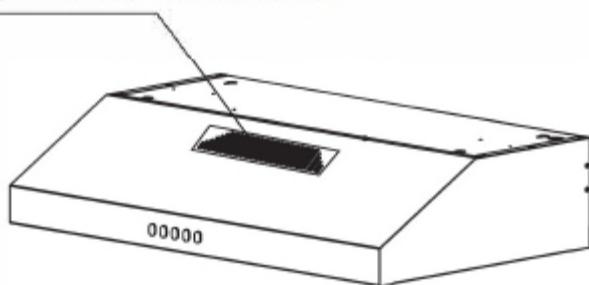

3. Charcoal filter must be installed on the hood (sold separately).

How to Install the Charcoal Filter

NOTE: The charcoal filter should only be installed if you are not using an external venting system

1. Turn over the range hood (A) and place its top on a protective surface.
2. Remove the filters.
3. Unhook the charcoal filter support (1) from the support hook (2) and pull the charcoal filter support up.
4. Place the charcoal filter (B) under the charcoal filter support (1). Ensure that the filter is placed horizontally, or the charcoal filter support (1) will not close properly.
5. Slide the charcoal filter support (1) to the left or right in its braces (3) until you can re-hook it on its support hook (2).

