

USING YOUR COUNTER TOP WASTE SYSTEM

Opening Lid on Waste System:

When the lid is closed, **press** the front center portion of the lid to activate lift mechanism. This should require a *firm* push in order to limit accidental activation.

Once lid is released from the frame, complete the opening by lifting the lid to the upright position where it will stay open until you are ready to close it.

A special feature of this waste system is the ability to move the lid lift lever out of the way by pushing the lift lever down until it catches and stays in place. In such a scenario, you would be able to slide a cutting board over the outer rim to gain direct access to the basket in order to push the cuttings directly into the waste bin.

Closing Lid on Waste System:

Bring lid down until it contacts the lid lifter lever, then push it down the same way as in opening. This downward push will reset the lid lift spring and hold the lid in place. If you have already lowered the lid lift level as stated in the “special feature” above, then just close the lid.

Tip: Most produce department plastic bags fit nicely in the 9 qt. waste basket and can be used as a liner to keep your basket clean.

Cleaning:

For ease of cleaning, remove basket from the frame and use a damp cloth or paper towel to wipe around the basket rim and the inside of the lid and rubber gasket, being careful of the metal edges while doing so to avoid injury. In addition, you may also use cleaners made for stainless steel on the metal parts. Replace waste basket to prepare for next use.