CROSLEY
FURNITURE

# Console
# CF6130

::kitchensource.com
☎ 1.800.667.8721

# PART LIST

| A | B | C | D | E |
|---|---|---|---|---|
| 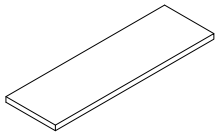 | 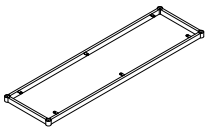 |  | 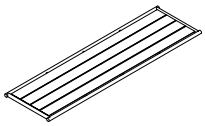 | 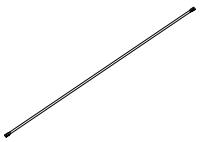 |
| Marble Top<br>1 PC | Top Frame<br>1 PC | Side Panel<br>2 PCS | Shelf Panel<br>2 PCS | X Rail<br>2 PCS |

# HARDWARE LIST

| #1 | #2 | #3 | #4 | #5 |
|---|---|---|---|---|
| <br>1/4' x 1/2"L |  <br>1/4' x 5/8"L |  <br>1/4' x 1"L |  <br>1/4' x 1-1/2"L | |
| Short Bolt<br>4 PCS (Extra1) | Bolt<br>6 PCS (Extra 1) | Medium Bolt<br>4 PCS (Extra 1) | Long Bolt<br>8 PCS (Extra 1) | Allen Wrench<br>1 PC |



::kitchensource.com
☎ 1.800.667.8721

Step 1. Attach top frame (part B) to side panels (part C) using medium bolts (part #3) and allen wrench (part #5).

Note: The predrilled holes on top frame (part B) and side panels (part C) should be facing the same side. Please do not fully tighten bolts at this time.

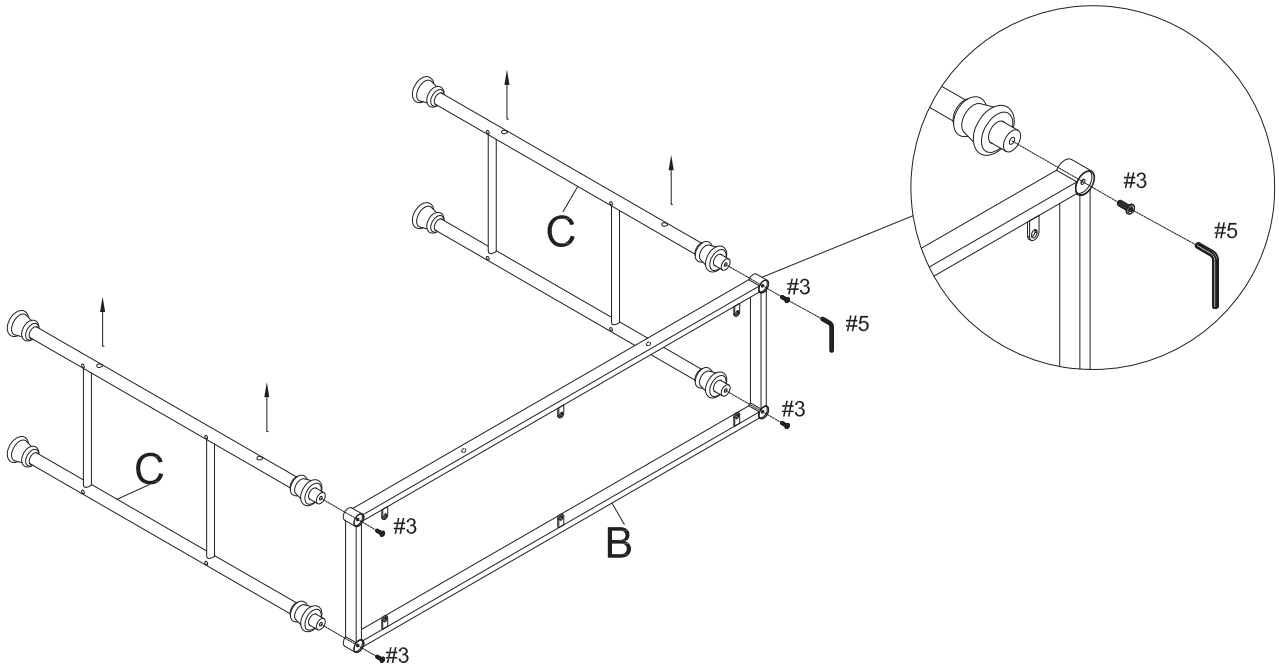


#3 x 4

#5 x 1

Step 2. Attach shelf panels (part D) to side panels (part C) using long bolts (part #4) and allen wrench (part #5).

Note: Please fully tighten all bolts at this time.

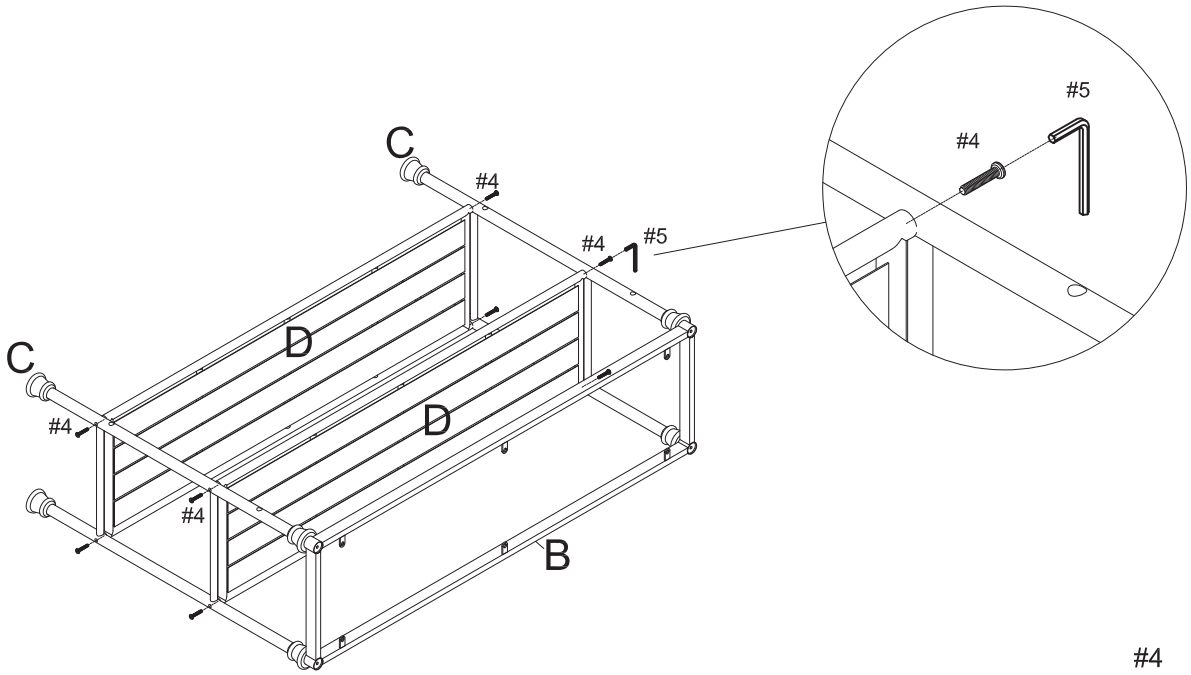


#4 x 8

#5 x 1



::kitchensource.com
☎ 1.800.667.8721

Step 3. Carefully lay marble top (part A) upside down on a flat, soft surface, such as carpet. Attach assembled unit (parts B, C & D) to marble top (part A) using bolts (part #2) and allen wrench (part #5).

Note: Please fully tighten all bolts at this time.

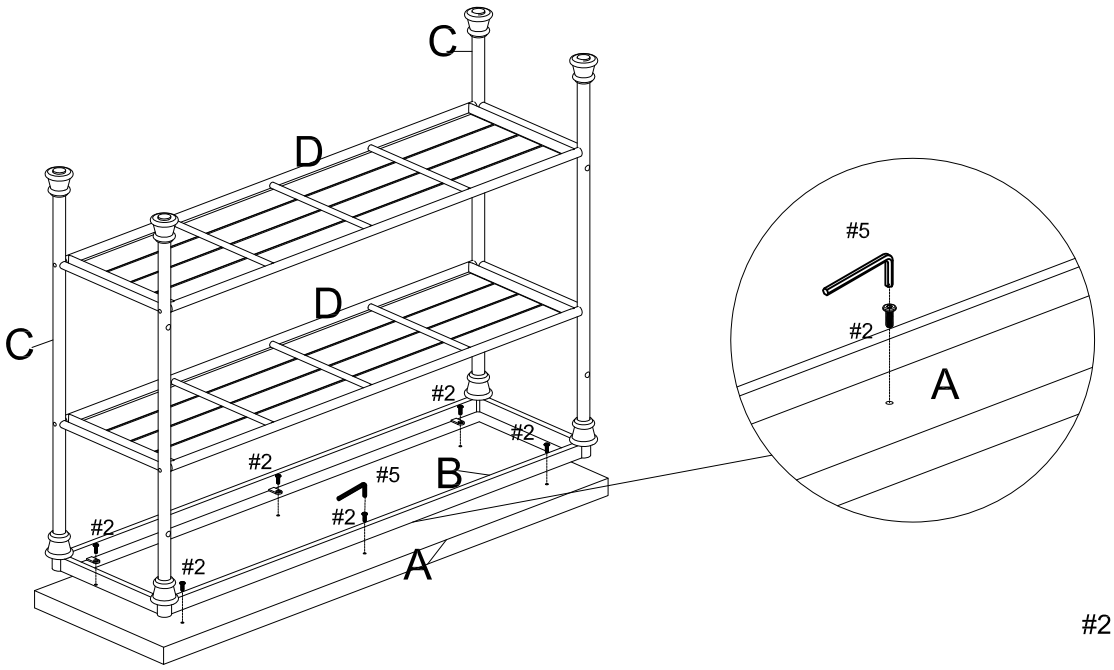


#2 x 6

#5 x 1

Step 4. Carefully turn unit upright. Attach X rails (part E) to back of unit using short bolts (part #1) and allen wrench (part #5).

Note: Please fully tighten all bolts at this time.

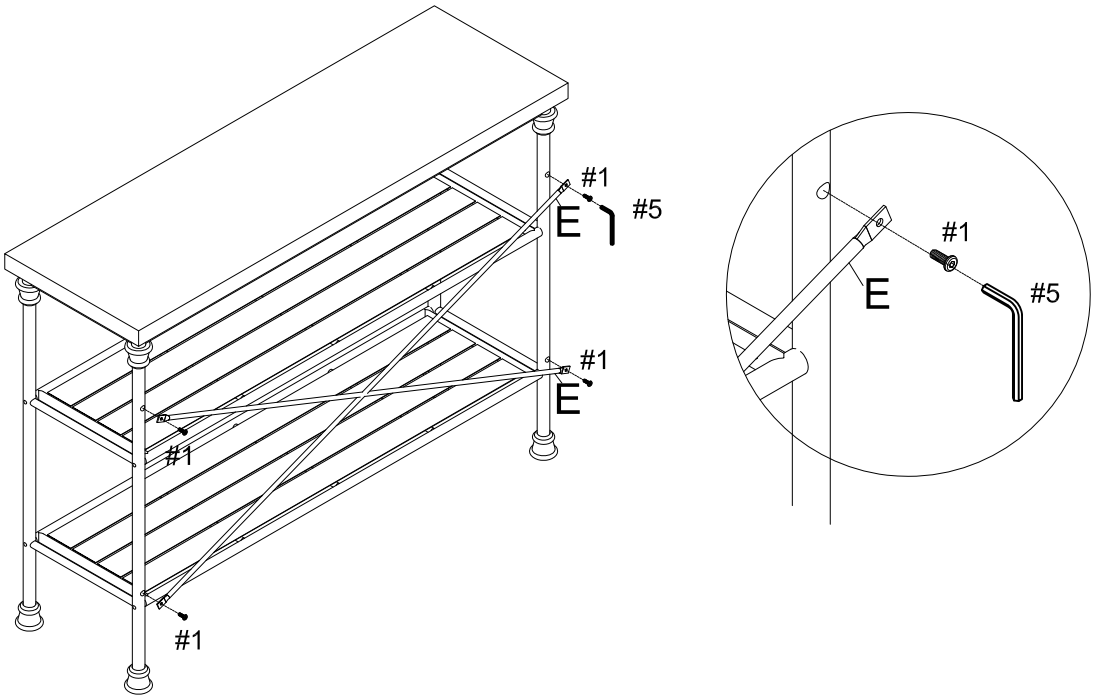


#1 x 4

#5 x 1



::kitchensource.com
☎ 1.800.667.8721