

BASE CABINET ROLL-OUT

Installation Instructions


Inspect all parts and read all instructions prior to beginning assembly and installation.

Parts Included

A. Frame sub-assembly

B. Mounting screw package

Note: Baskets sold separately

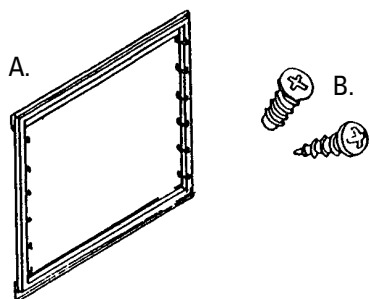

Tools Required

- Phillips screwdriver
- Drill with 1/16" bit for pilot holes (optional)


Product Assemblies

BC020E


BC02456

BC02456DM

Step 1 This unit can be mounted on either side of your cabinet. Determine which side is the most convenient. Locate frame inside the cabinet and align the first hole in each slide with the cabinet front frame. Fasten with two wood screws (sharp point). (Optional step; mark with pencil and pre-drill holes). For system 32mm cabinets, locate frame inside the cabinet and align the first hole in each slide with the pre-drilled holes. Fasten with the two euro-screws (blunt point) provided.

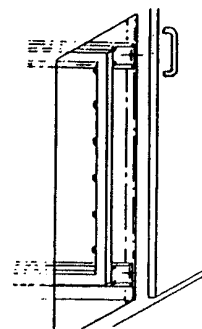

Step 2 Slide frame out to expose the back mounting holes in the slides. If spacers are needed (not supplied), place between the cabinet wall and slide as shown. Fasten with wood screws (sharp point). You may need to use longer screws than provided if a spacer is used. For system 32mm cabinets, slide frame out to expose the holes which align with the pre-drilled holes in the back of the cabinet. Fasten with two euro-screws (blunt point) provided.

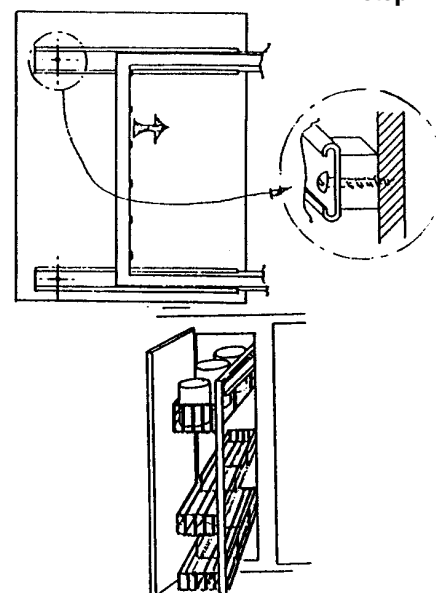

step 1

step 2



Real Solutions
For Real Life.™