




Federal Brace
BEAUTIFULLY CRAFTED CONFIDENT SUPPORT

VANITY SUPPORT BRACKET | Sento

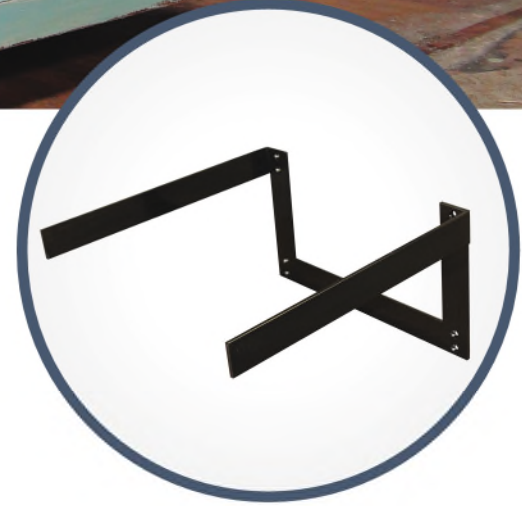

SENTO FLOATING VANITY SUPPORTS INSTALLATION INSTRUCTIONS

Every successful vanity installation begins with good planning and action. Do not wait until the last minute to order your vanity support, fasteners or adhesives for installation. Make sure that all aspects of the support substructure are considered and discussed to ensure that your countertop installation will be smooth and that your

Note this installation document should not be considered a specific recommendation for your particular application. Federal Brace cannot provide installation guidelines to meet the particulars of every application. This document should be considered a help sheet that provides considerations about the general characteristics of a particular type of support and installation.

Characteristics of the Sento Floating Vanity Support Bracket

Our Sento Vanity Brackets are designed to provide the support strength necessary to wall mount a standard vanity in a bathroom setting. The material thickness of the Sento Floating Vanity Support Bracket is 1/4".

Preparations for the Sento Vanity Support Bracket

The Sento Support comes in both brushed stainless steel and black powder coat painted steel materials. If you have ordered

your Sento Brackets unfinished (without paint) you will need to finish them before installation. Make sure you clean the bracket of any machine oil or rust preventative before painting. Once clean and dry apply a metal compatible paint to the bracket completely. Let the first coat dry and do at least 1 more coat. Before installing the brackets the paint should be allowed to dry completely.

Considerations when Installing Sento Floating Vanity Support Brackets

Whenever installing the Sento Brackets make sure that you provide the thickest possible substructure (at least 3/4") on which to fasten the bracket. You will want the fasteners to have as much "biting" material as possible. This will provide with a secure fastening of the brackets. Also, the substructure must be

Note: The Sento Floating Vanity Support is designed to tie into the stud wall and be hidden behind the fascia of the wall with only the support arms extending under the vanity for support.

∴kitchensource.com

☎ 1.800.667.8721

With the substructure in place and sturdy, measure out your bracket pattern. We suggest that you space the Sento style bracket no greater than 16" apart. Once you have your bracket support pattern set up you can attach your first bracket to the substructure. Make sure that when you fasten the bracket that you check for level in all directions. The bracket should be straight up and down and be level across the top flange as well as down the top flange. This will give the best possible support results to your countertop.

You should position the Sento Support Bracket at such a height that it places vanity at the desired height. Once the bracket is in place you will want to wipe them down to get rid of any hand prints or other debris. Just before installation of your vanity you will want to apply adhesive or silicone to the top of the bracket to adhere it to the vanity.

Final step is to enjoy your work and your new kitchen counter! We are thankful that you chose to support your beautiful counters with Federal Brace bracket. We would be thankful if you would send us images of your new kitchen and our brackets under your counters. We enjoy seeing Federal Brace supports at work.

Also, know that the highest compliment Federal Brace can be given is a reference from our customers to friends and family. If you have enjoyed your buying experience with Federal Brace please let someone know.

