




# FVN93-361236 SENZA INSTALLATION GUIDE


|||kitchensource.com  
1.800.667.8721




FVN93-361236  
Vanity Front

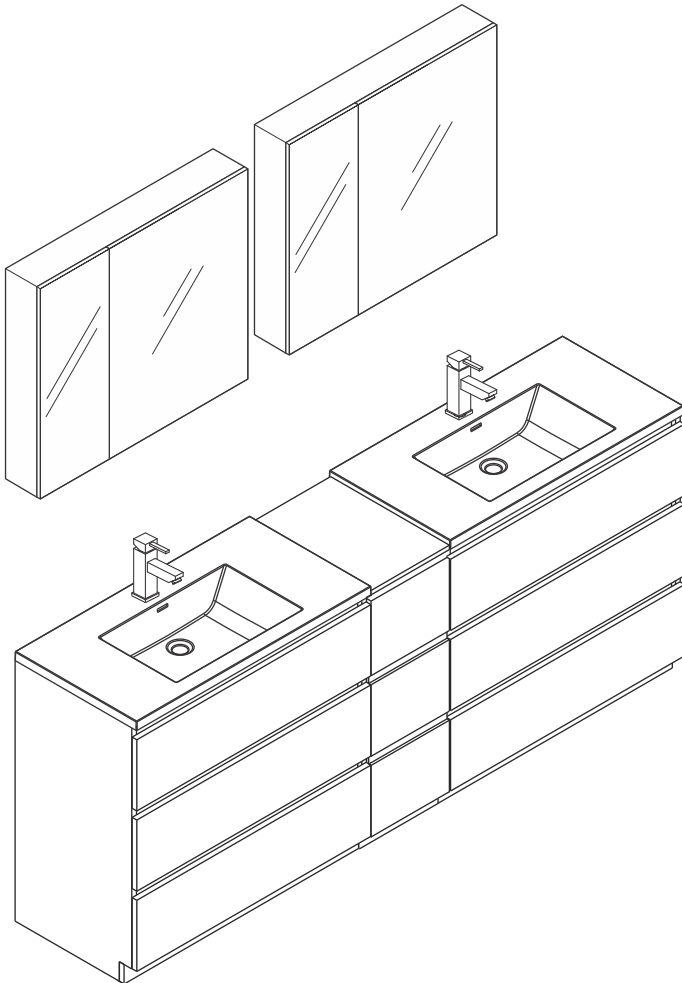


FMC8090 (X2)  
Medicine Cabinet Front

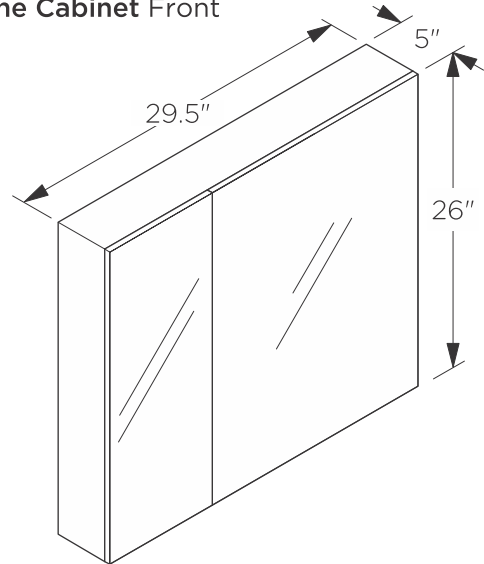


FVS9336WH (X2)  
Counter Top Front

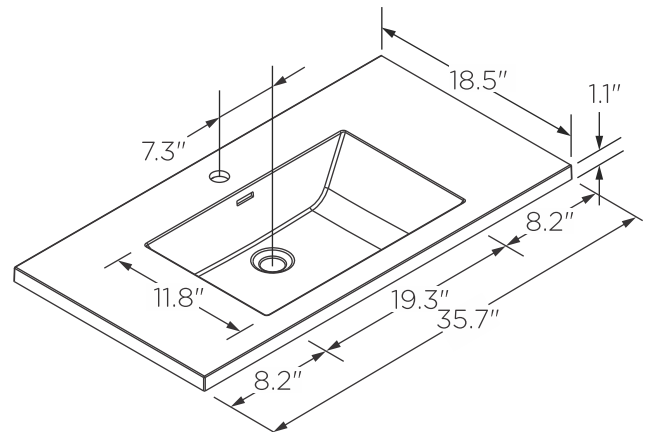

FCB93-361236  
Cabinet Front

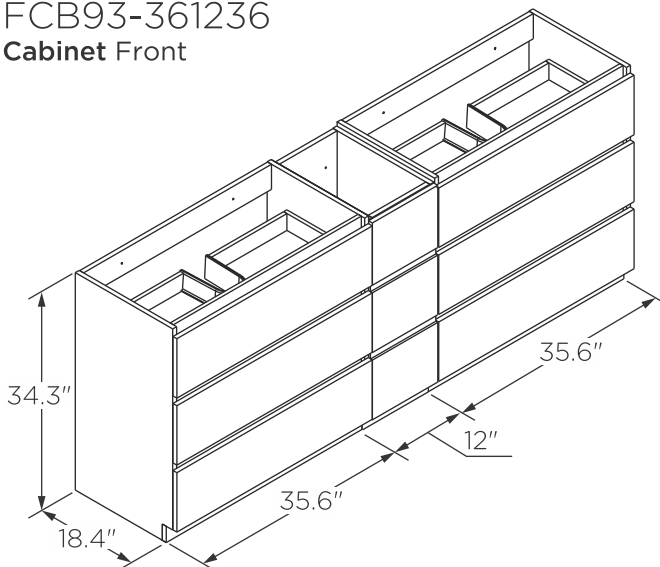

FCB93-361236  
Cabinet Back

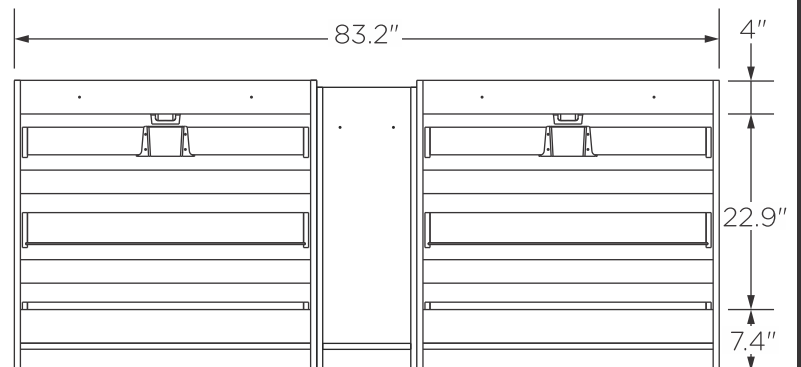

**NOTE:** All dimensions & specifications are approximate and subject to change without notice.



**FVN93-361236 | SENZA | INSTALLATION GUIDE**

PAGE 1