


FVN9040 SENZA INSTALLATION GUIDE

|||kitchensource.com
1.800.667.8721





CABINET INSTALLATION


1 Locate cabinet & mark location on the wall

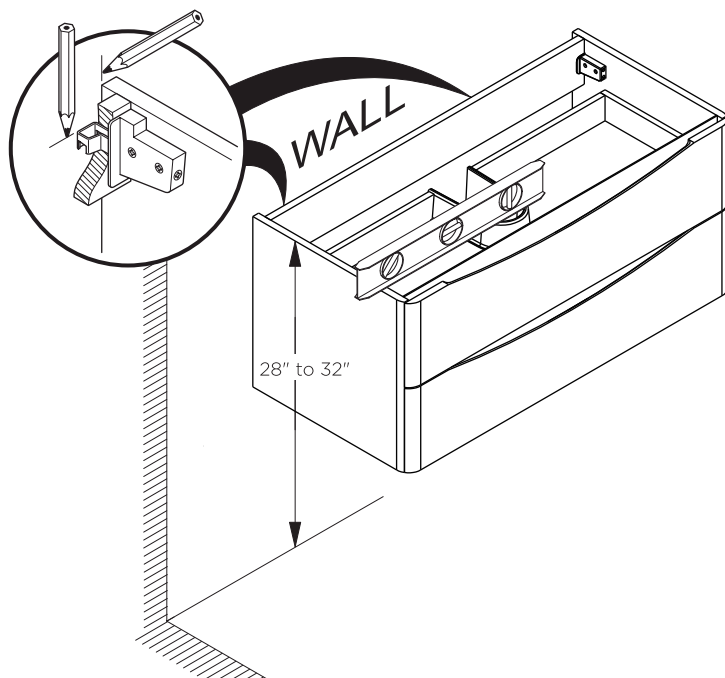


2 Install wall brackets

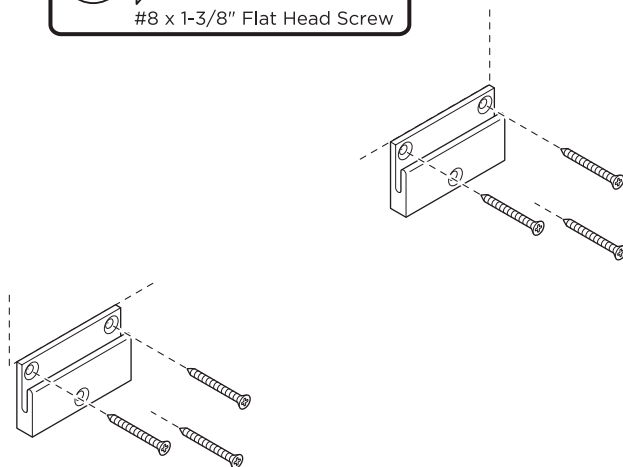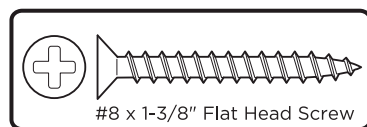


3 Install cabinet

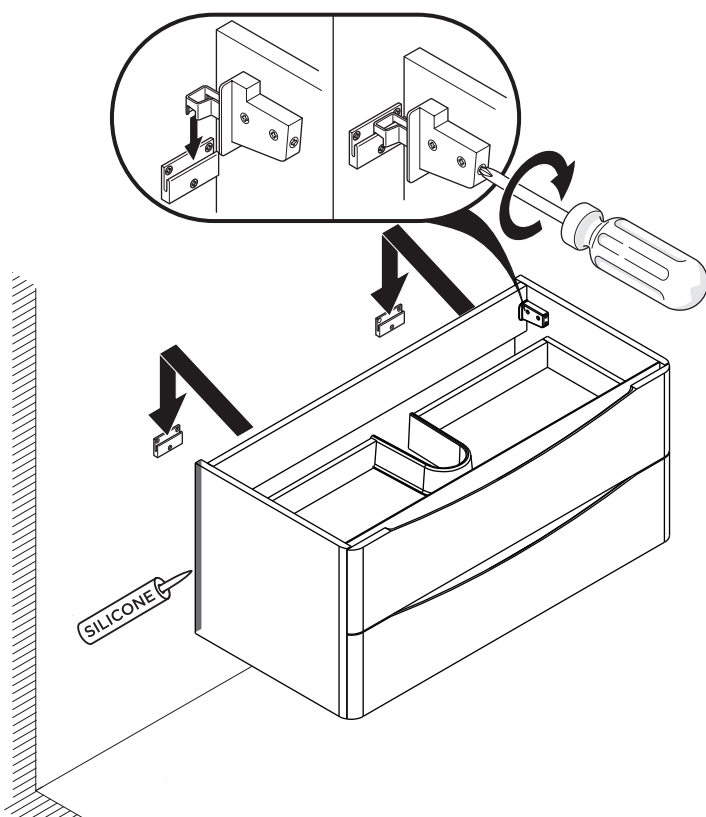

4 Apply a bead of silicone on the top of the cabinet and place sink on the cabinet

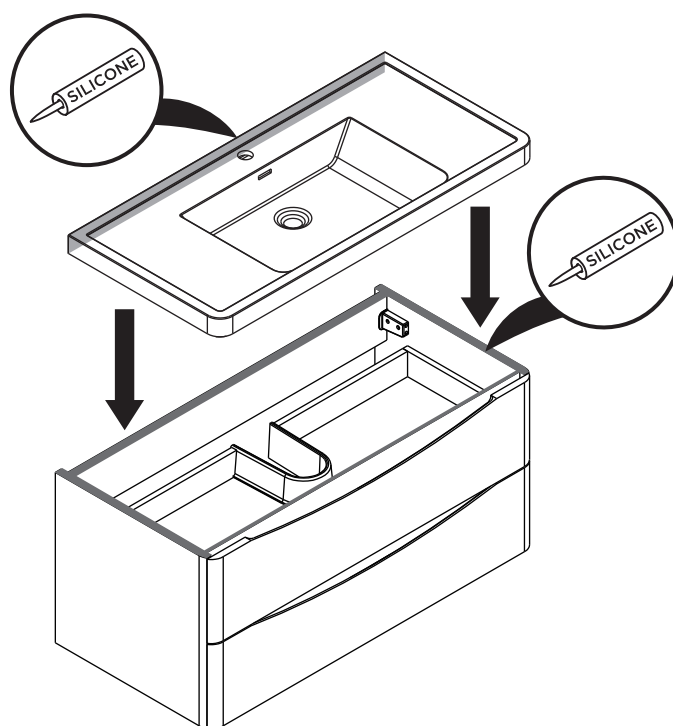







FVN9040 SENZA INSTALLATION GUIDE

|||kitchensource.com
1.800.667.8721








DRAWER REMOVAL & INSTALLATION

REMOVAL

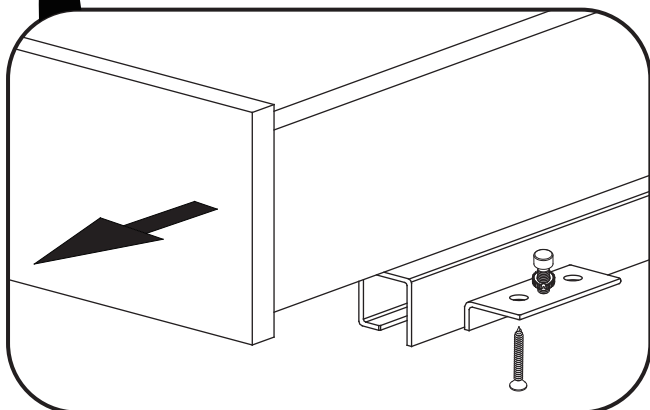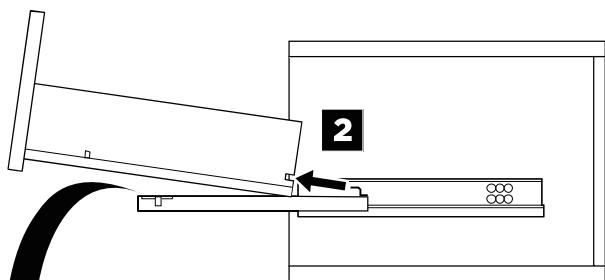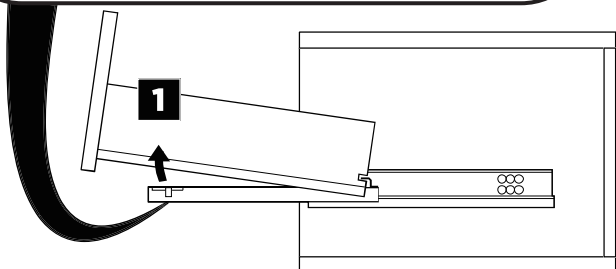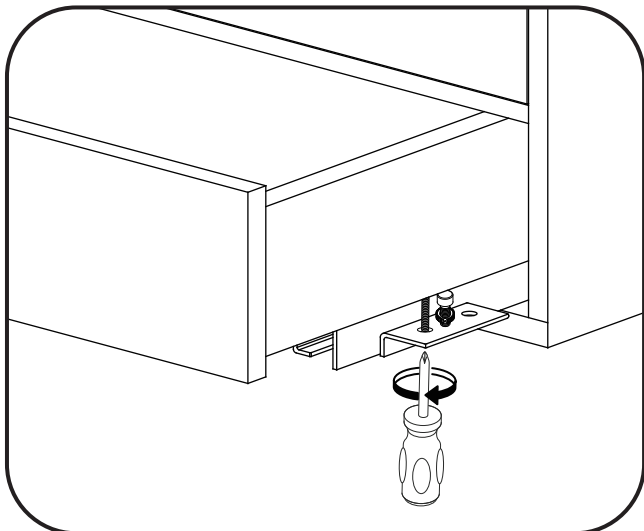

INSTALLATION

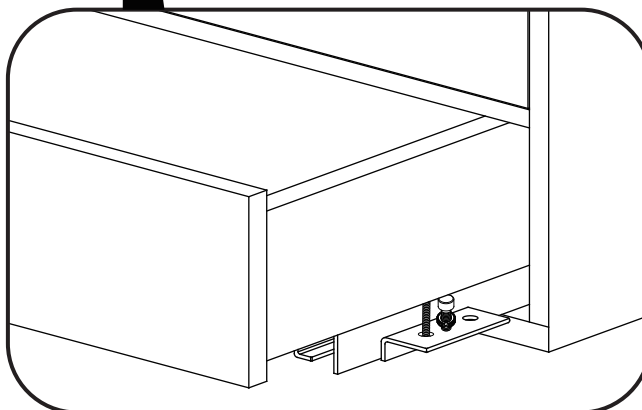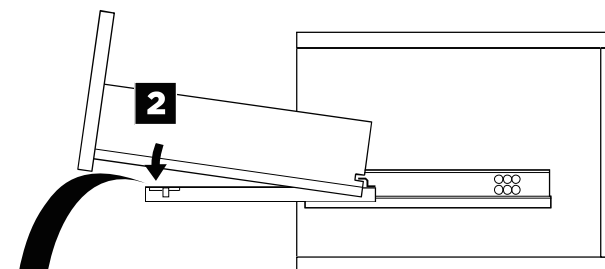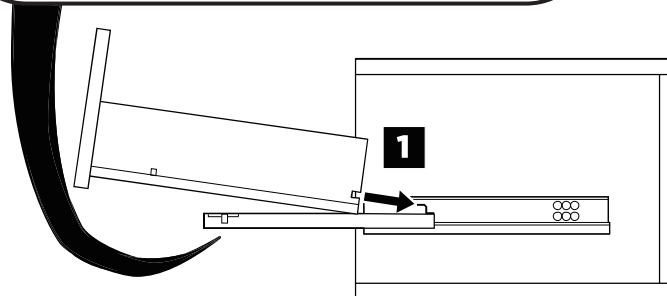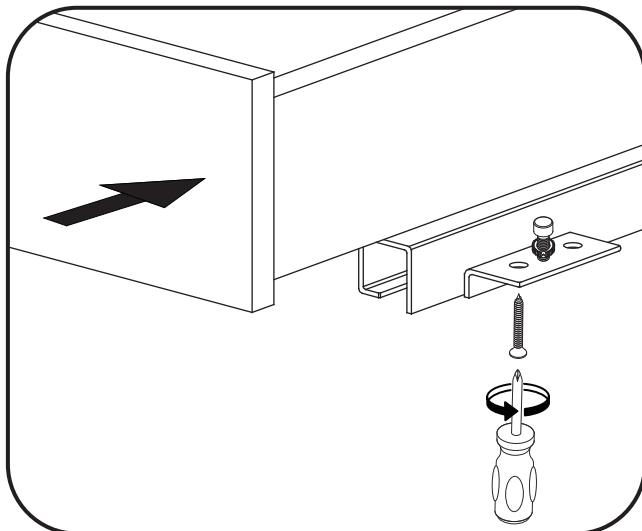




P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS


NOTE:

Your item may appear slightly different from the illustration.

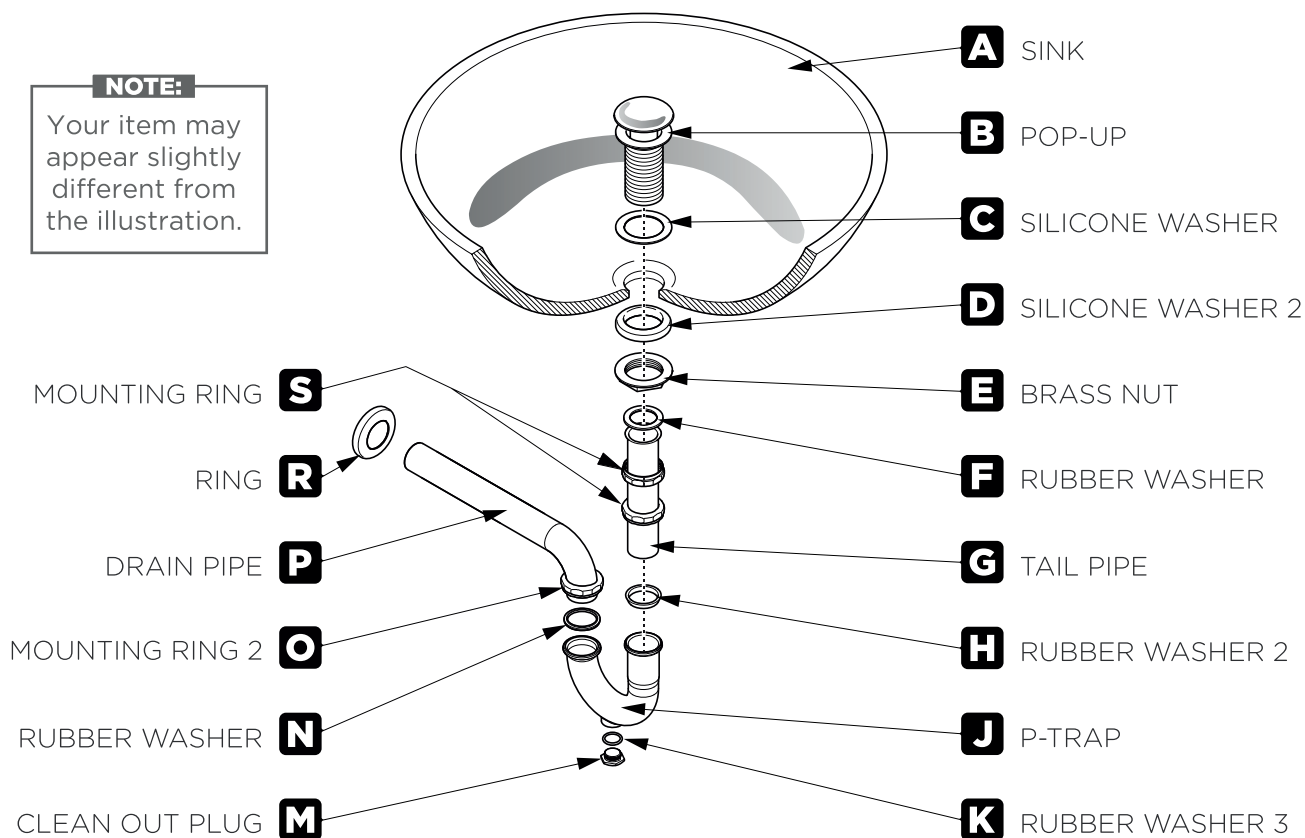


POP-UP INSTALLATION INSTRUCTIONS


FOR SINKS WITHOUT OVERFLOW

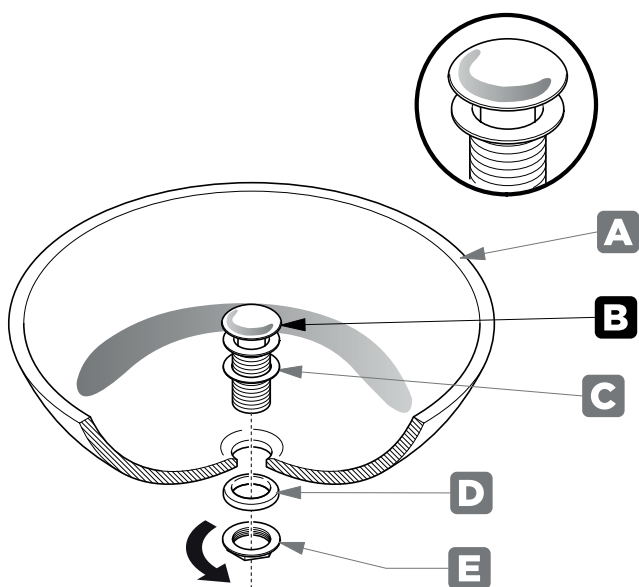

OR


FOR SINKS WITH OVERFLOW

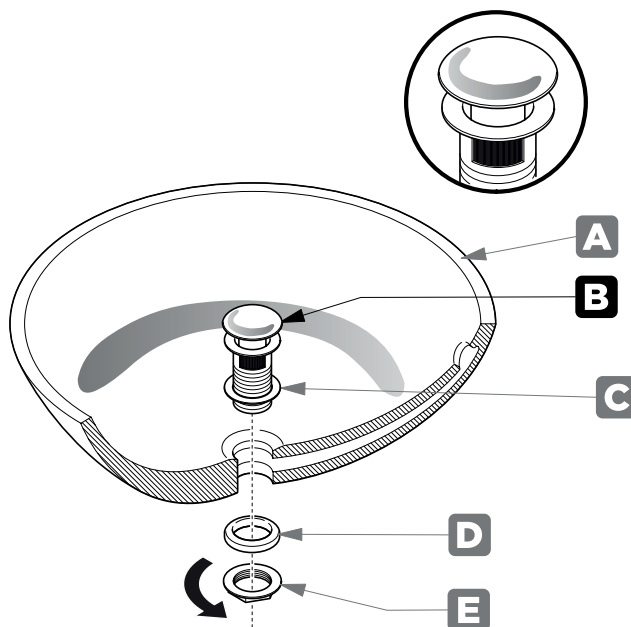



P-TRAP INSTALLATION

1 Install tail pipe (G)

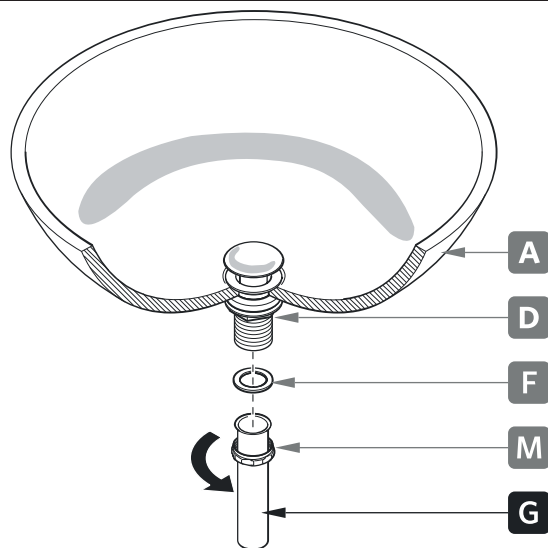

2 Install p-trap (J)

