



Stella
COLLECTION


LUCERA

FVN6136-UNS-L

INSTALLATION GUIDE

CONTENTS:

Medicine Cabinet.....	FMC6183.....	PAGE 2
Cabinet	FCB6136-UNS-L.....	PAGE 3
Counter Top /Sink.....	FCT2036WH-L-CMB.....	PAGE 3




FVN6136-UNS-L LUCERA INSTALLATION GUIDE




FVN6136-UNS-L

Vanity Ensemble
Front

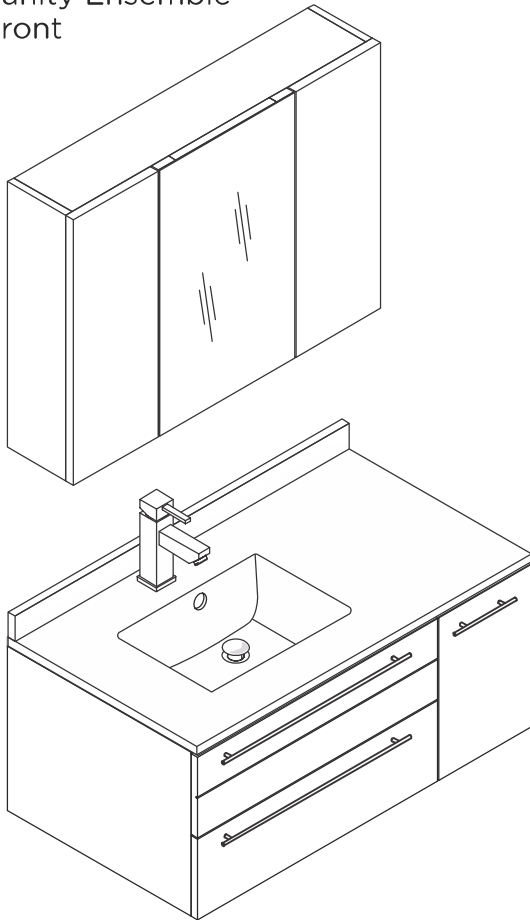


FMC6183

Medicine Cabinet
Front

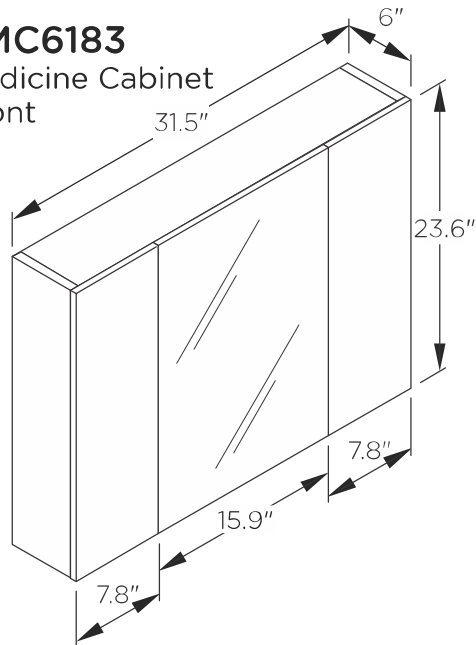


FCT2036WH-L-CMB

Counter Top Front

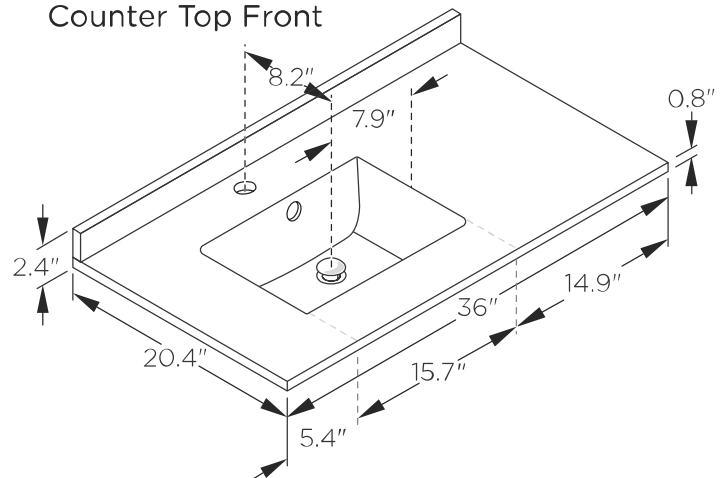


FCB6136-UNS-L

Cabinet Front

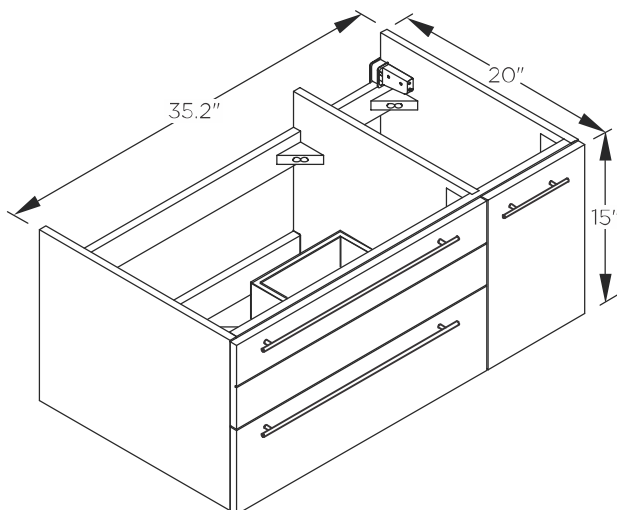

FCB6136-UNS-L

Cabinet Back

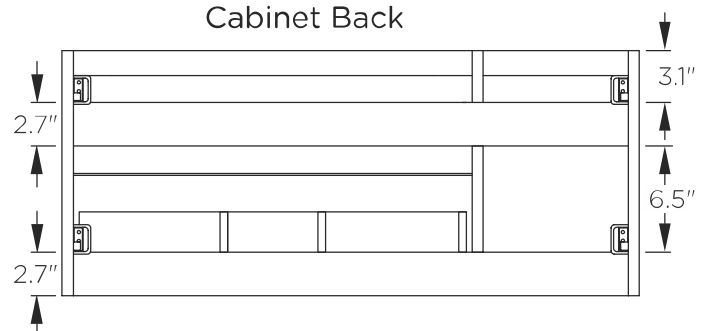


>All dimensions & specifications are approximate and subject to change without notice.



FVN6136-UNS-L | LUCERA | INSTALLATION GUIDE





PAGE 1



FVN6136-UNS-L LUCERA INSTALLATION GUIDE




TOOLS FOR ASSEMBLY



MEDICINE CABINET INSTALLATION


1

Measure distance between the mounting holes on the back of medicine cabinet **A** and mark the perimeter on the wall **B**.

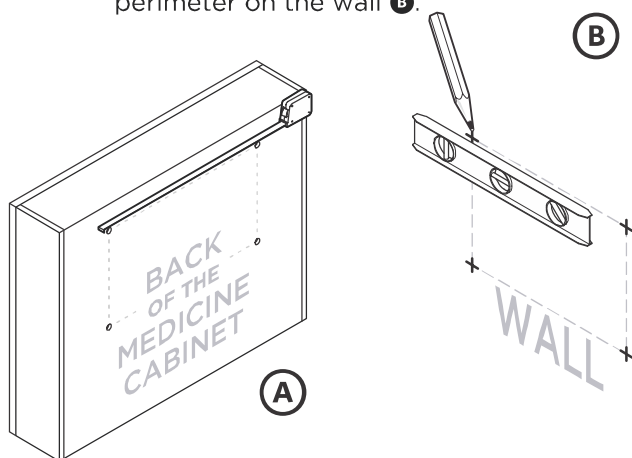

2


Once marked, drill the holes in the wall **C**.
*Insert the anchors in the holes **D**.

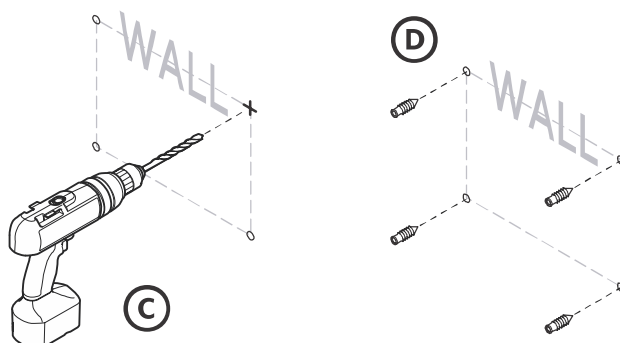

***IMPORTANT:** Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.


3


Connect medicine cabinet to the wall using a drill.

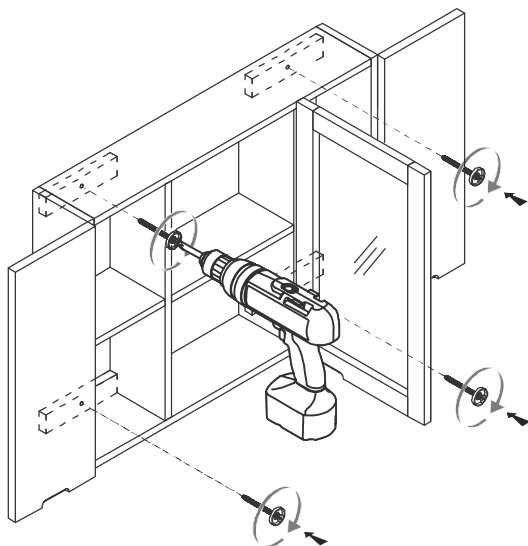

4

Cover the screws with the screw caps.

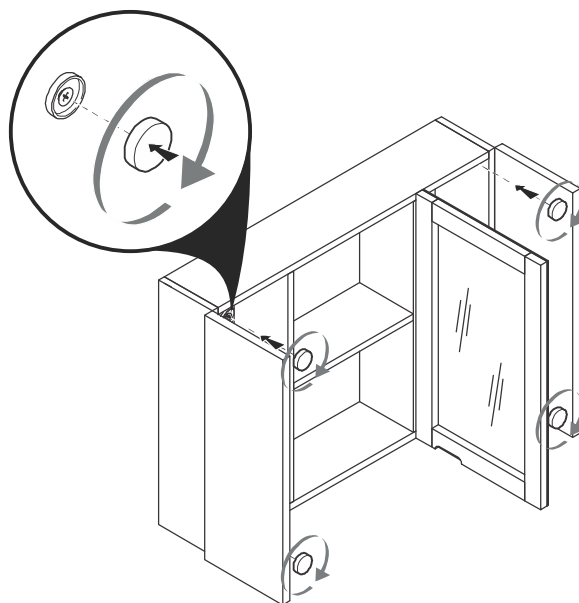




FVN6136-UNS-L LUCERA INSTALLATION GUIDE



CABINET INSTALLATION


1

Place cabinet (D) in designated location and mark the bracket position on the wall.

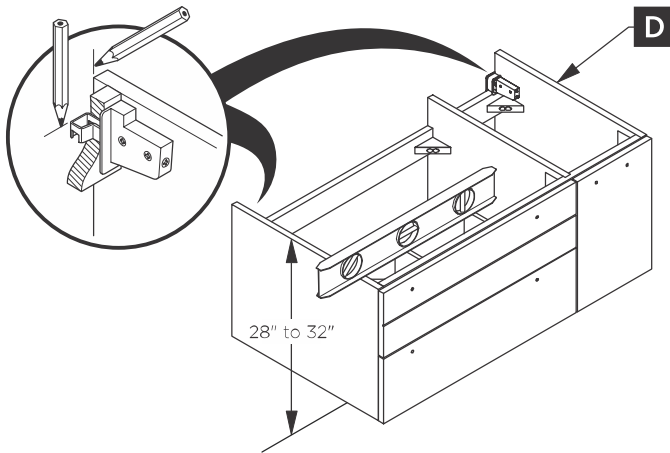

2


Attach wall brackets (E) to the wall with the screws (F).

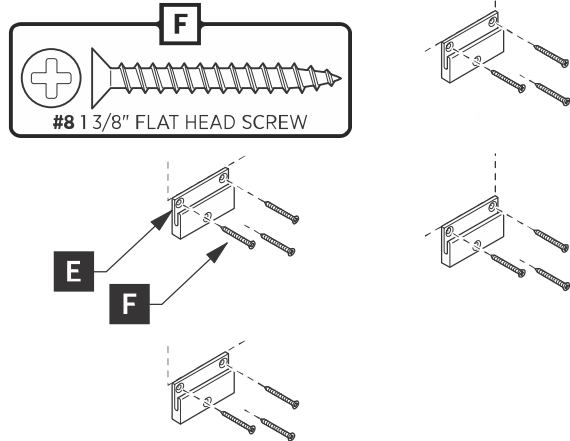

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.


3


Apply a bead of the silicone and hang a cabinet (D) on the brackets (E).

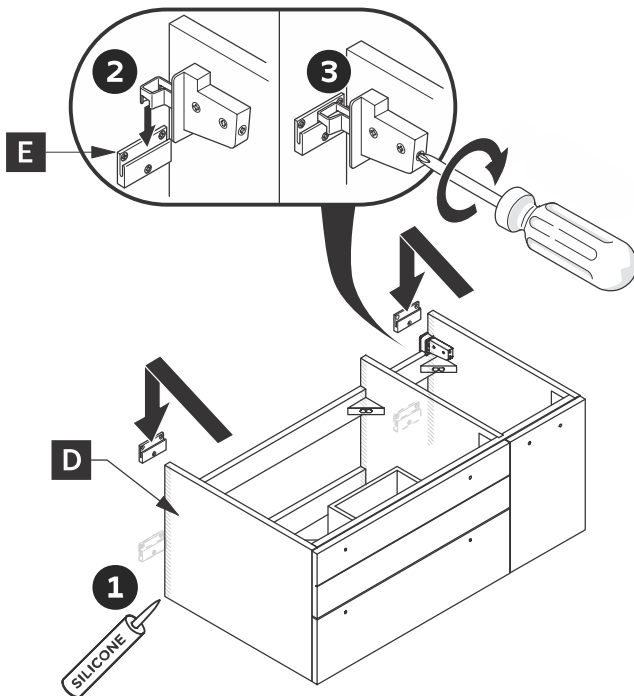

4

Attach the handles to cabinet.

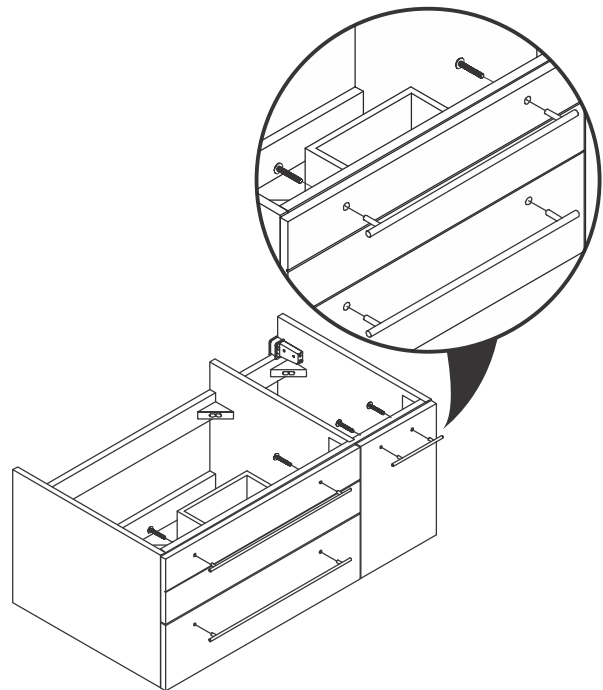




FVN6136-UNS-L LUCERA INSTALLATION GUIDE



CABINET INSTALLATION


5

Flip the counter top upside down and attach the sink to it using provided brackets & screws.

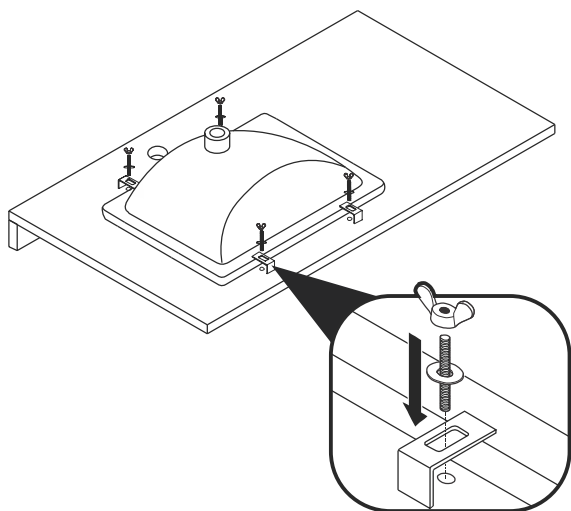


6

Put a bead of silicone on the top of the cabinet (G) then place sink (H) on the top of it.

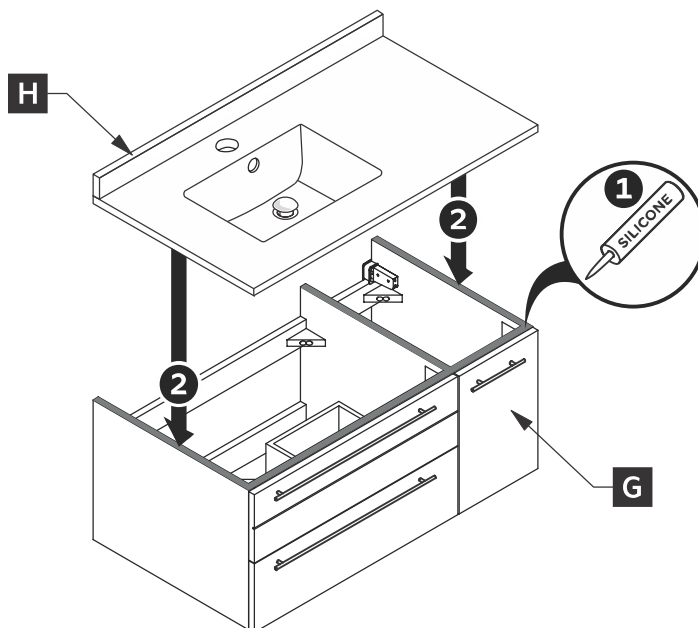



DRAWER REMOVAL & INSTALLATION

DRAWER REMOVAL

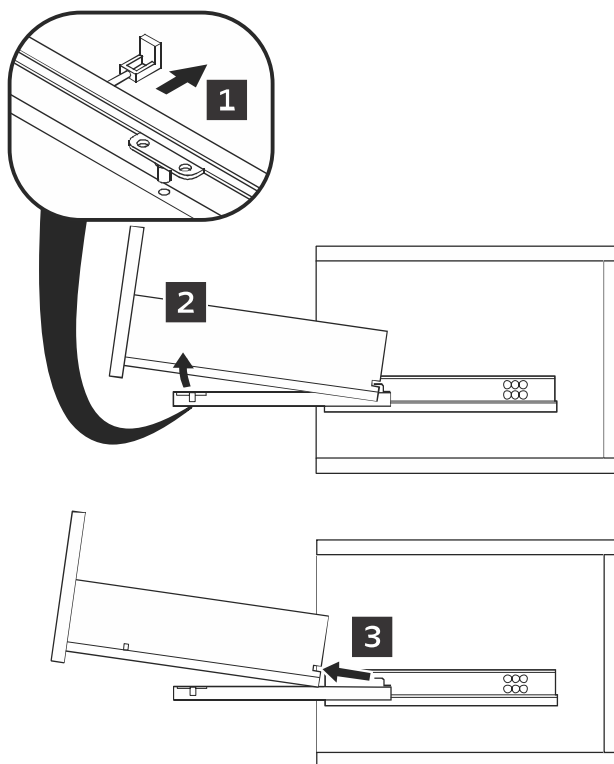

DRAWER INSTALLATION

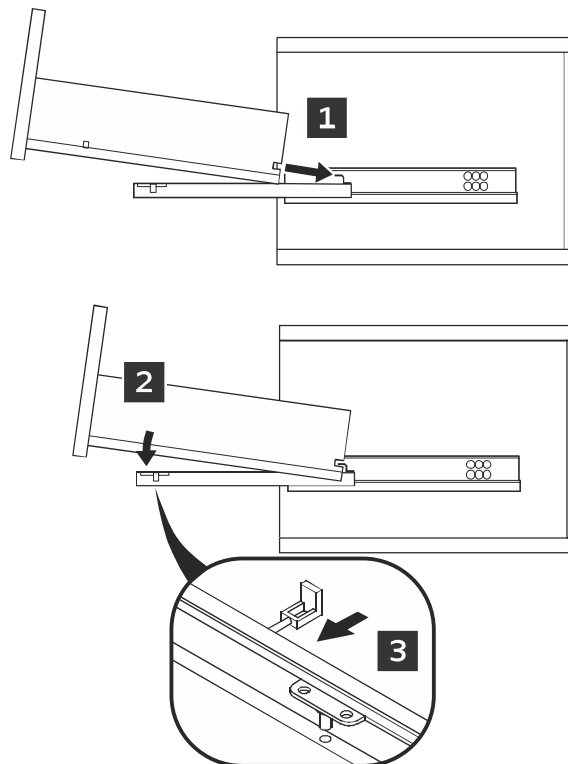




FVN6136-UNS-L LUCERA INSTALLATION GUIDE



P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS


NOTE:

Your item may appear slightly different from the illustration.

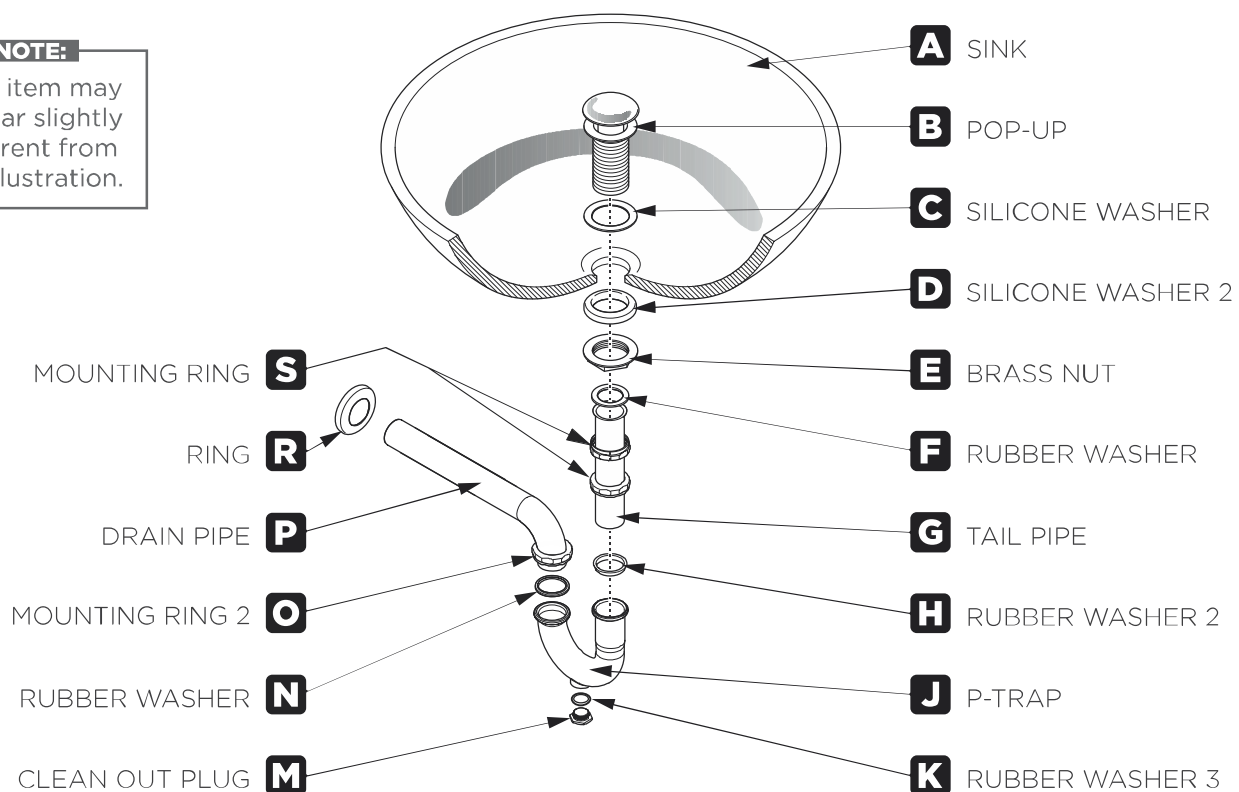


POP-UP INSTALLATION INSTRUCTIONS


FOR SINKS WITHOUT OVERFLOW

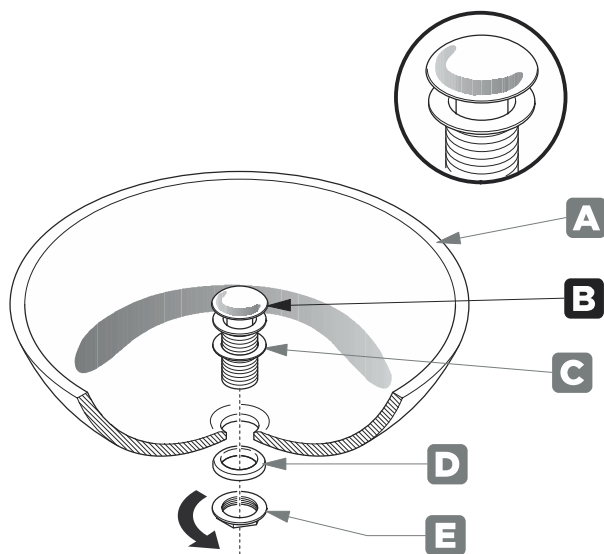

OR

FOR SINKS WITH OVERFLOW

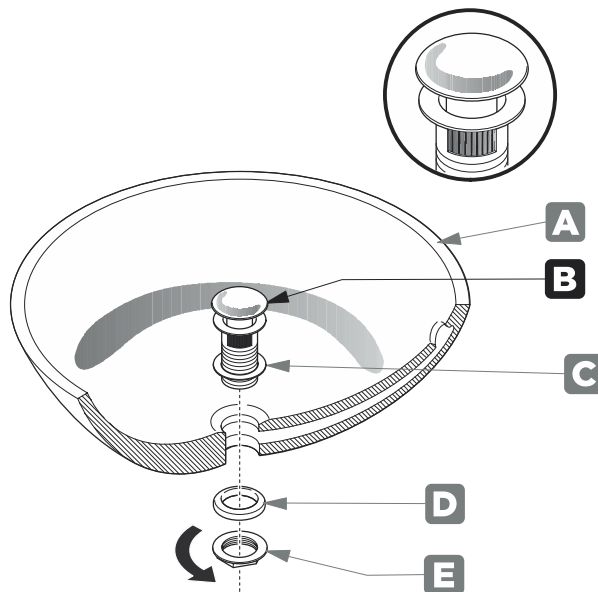




FVN6136-UNS-L LUCERA INSTALLATION GUIDE



P-TRAP INSTALLATION

1

Install a tail pipe (G).

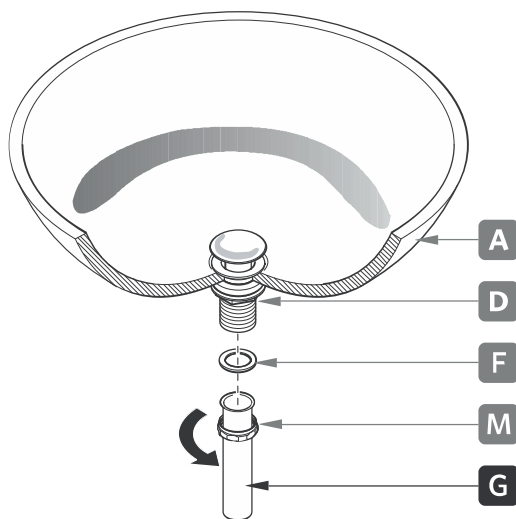

2

Connect a P-trap (J).

