



**Stella**  
COLLECTION


# LUCERA

## FVN6136-UNS-R

### INSTALLATION GUIDE

### CONTENTS:


Medicine Cabinet.....	FMC6183.....	PAGE 2
Cabinet .....	FCB6136-UNS-R.....	PAGE 3
Counter Top / Sink.....	FCT2036WH-R-CMB.....	PAGE 4





# FVN6136-UNS-R LUCERA INSTALLATION GUIDE



**FMC6183**  
Medicine Cabinet  
Front

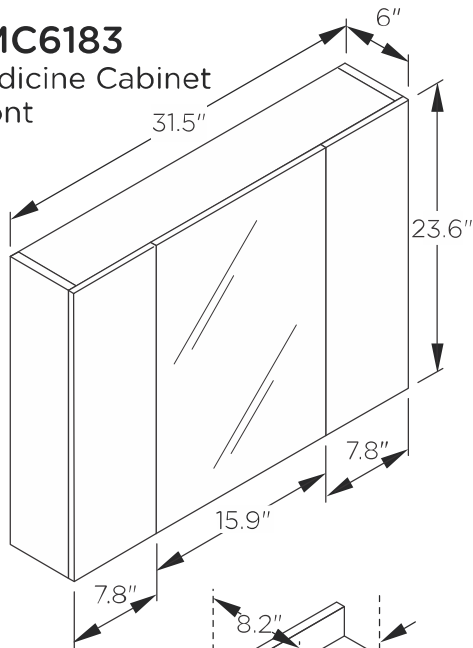



**FVN6136-UNS-R**  
Vanity Ensemble  
Front

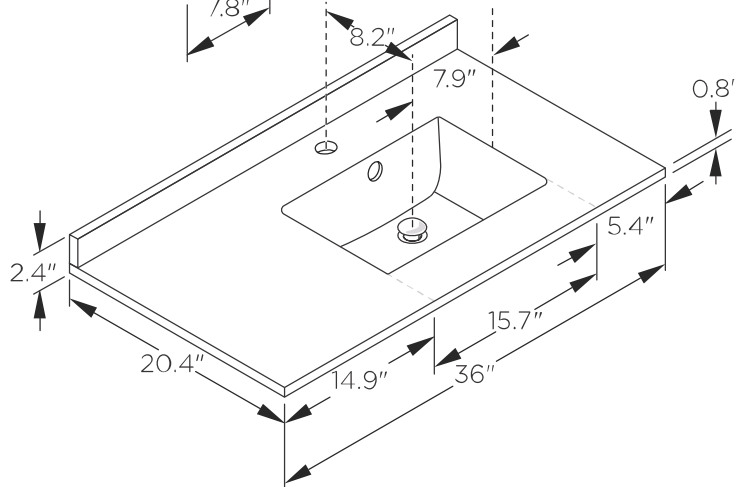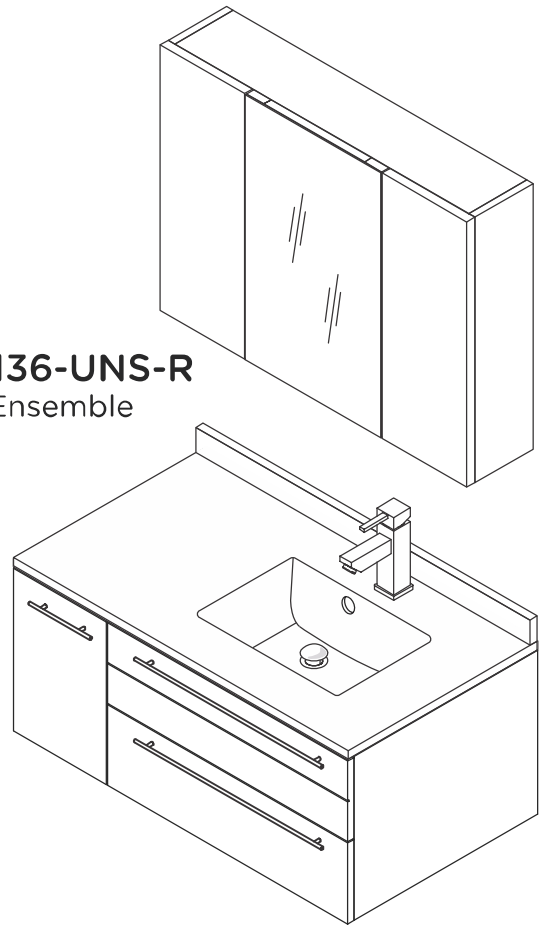

**FCB6136-UNS-R**  
Cabinet Front


**FCT2036WH-R-CMB**  
Counter Top Front

**FCB6136-UNS-R**  
Cabinet Back

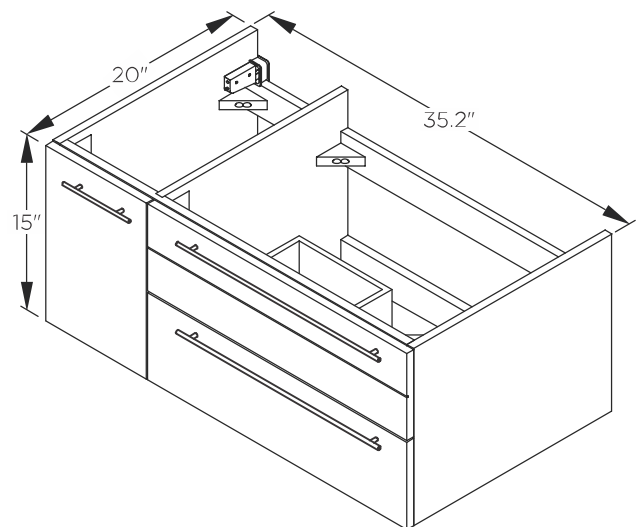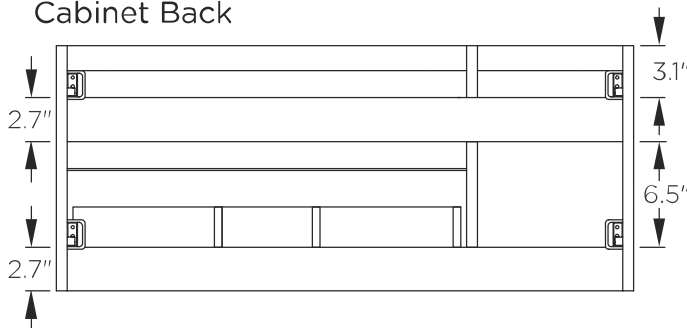

>All dimensions & specifications are approximate and subject to change without notice.









# FVN6136-UNS-R LUCERA INSTALLATION GUIDE




## TOOLS FOR ASSEMBLY



## MEDICINE CABINET INSTALLATION


1

Measure distance between the mounting holes on the back of medicine cabinet **A** and mark the perimeter on the wall **B**.

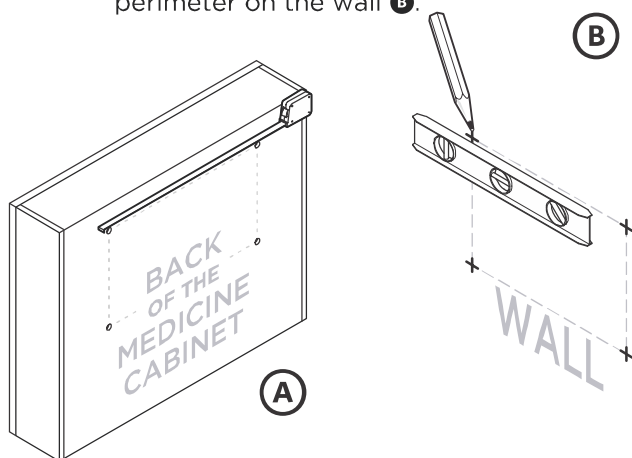

2


Once marked, drill the holes in the wall **C**.  
\*Insert the anchors in the holes **D**.

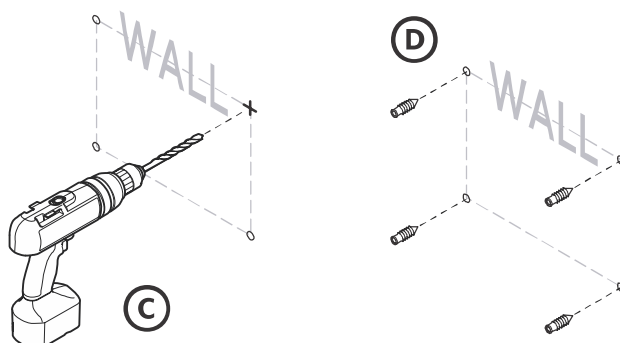

**\*IMPORTANT:** Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.


3


Connect medicine cabinet to the wall using a drill.

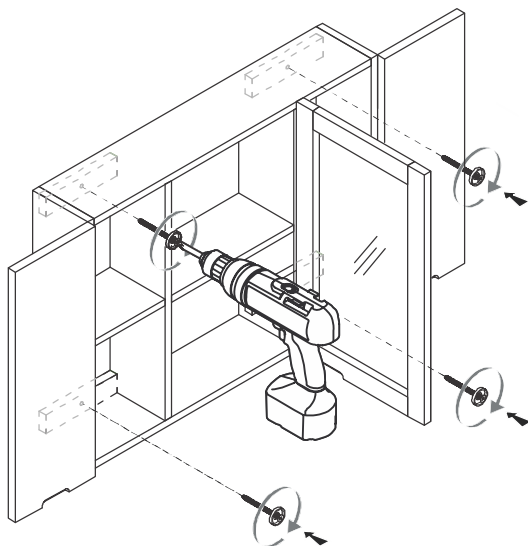

4

Cover the screws with the screw caps.

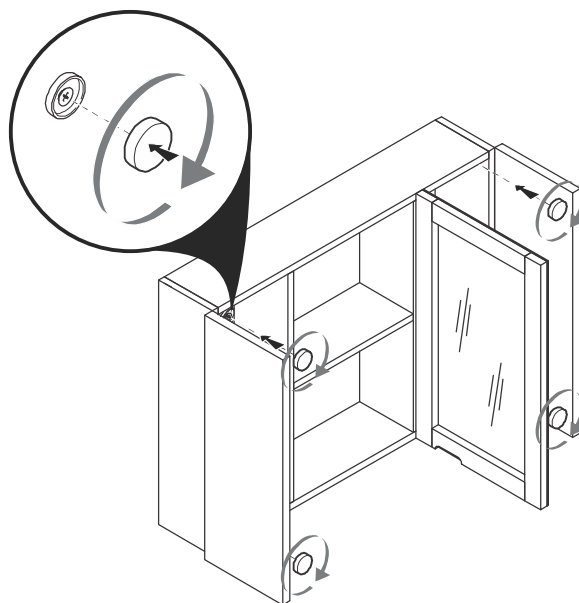




# FVN6136-UNS-R LUCERA INSTALLATION GUIDE



## CABINET INSTALLATION


1

Place cabinet (D) in designated location and mark the bracket position on the wall.

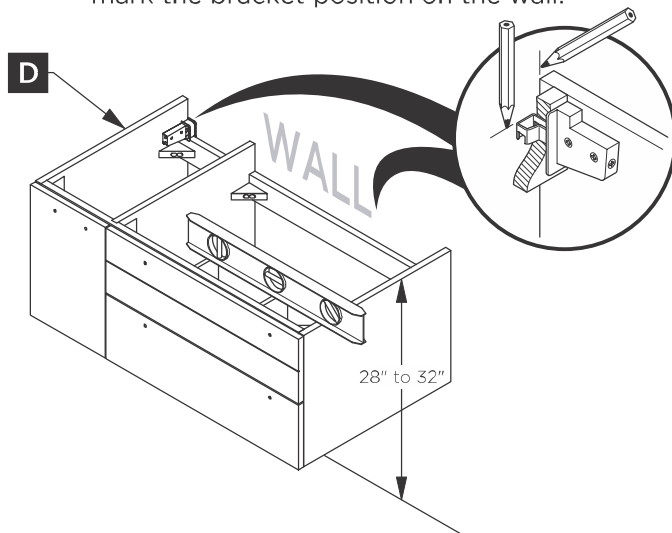

2


Attach wall brackets (E) to the wall with the screws (F).

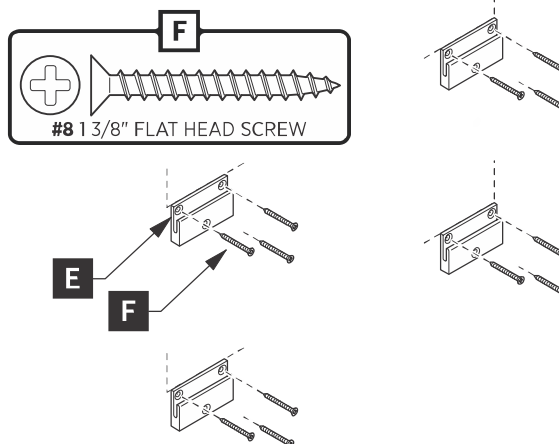

**IMPORTANT:** Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.


3


Apply a bead of the silicone and hang a cabinet (D) on the brackets (E).

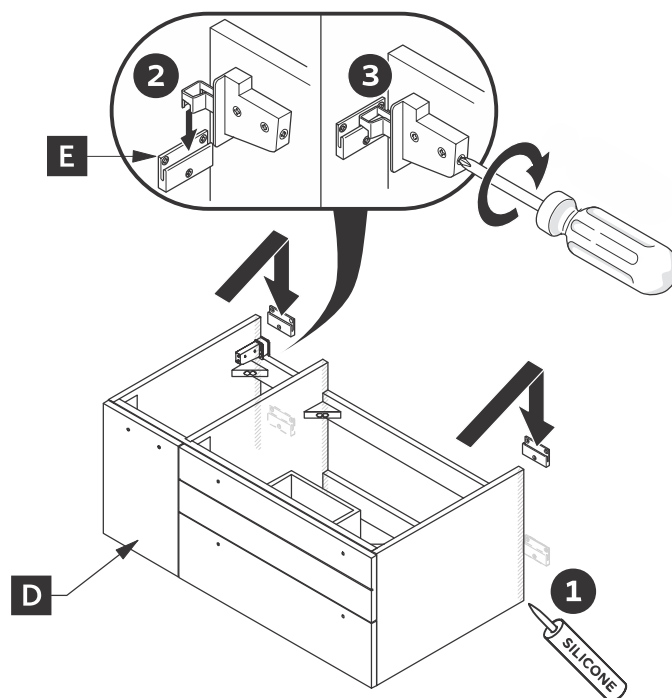

4

Attach the handles to the cabinet.

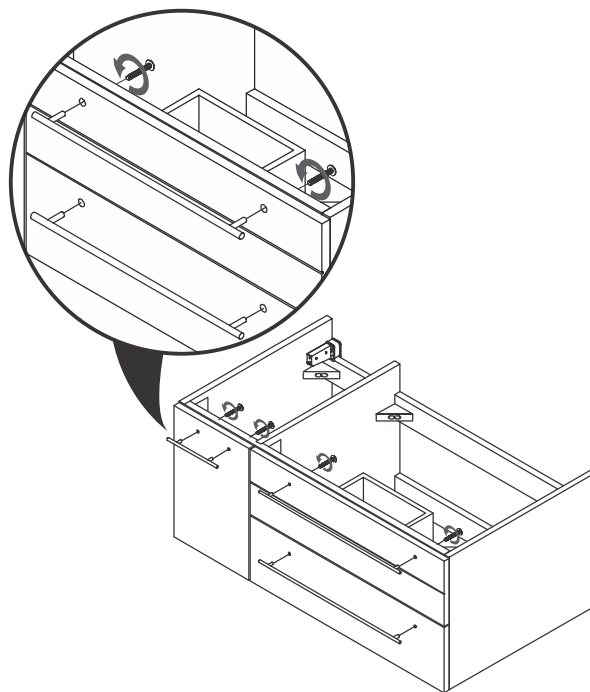




# FVN6136-UNS-R LUCERA INSTALLATION GUIDE



## CABINET INSTALLATION


**5**

Flip the counter top upside down and attach the sink to it using provided brackets & screws.

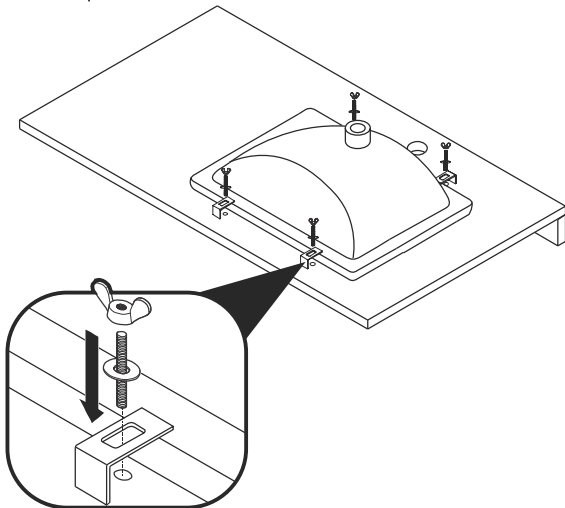


**6**

Put a bead of silicone on the top of the cabinet (G) then place sink (H) on the top of it.

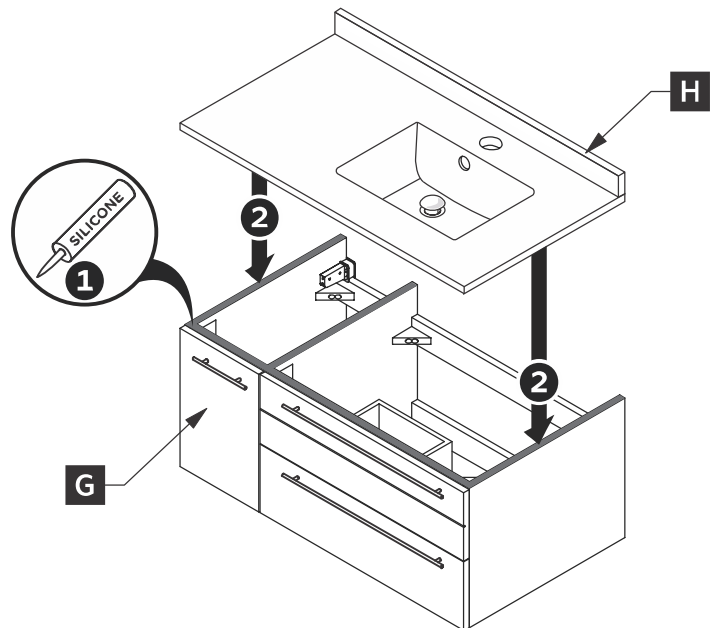


## DRAWER REMOVAL & INSTALLATION

### DRAWER REMOVAL

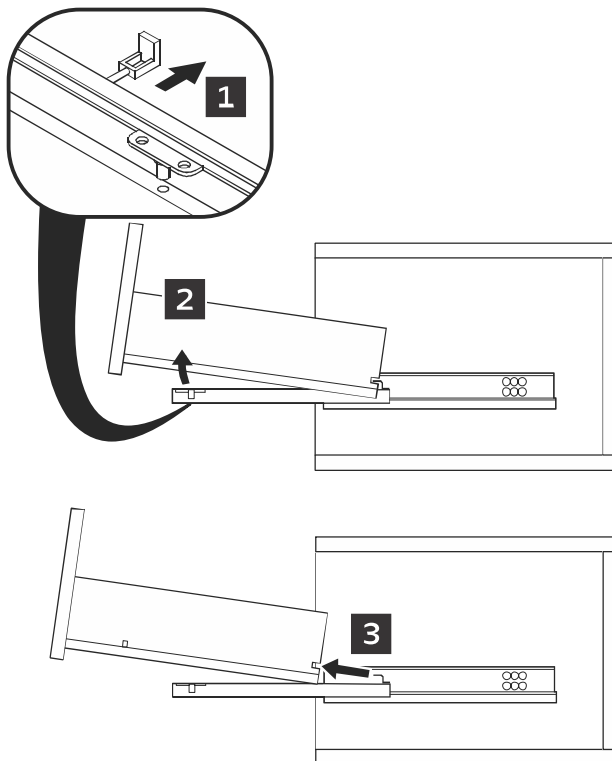


### DRAWER INSTALLATION

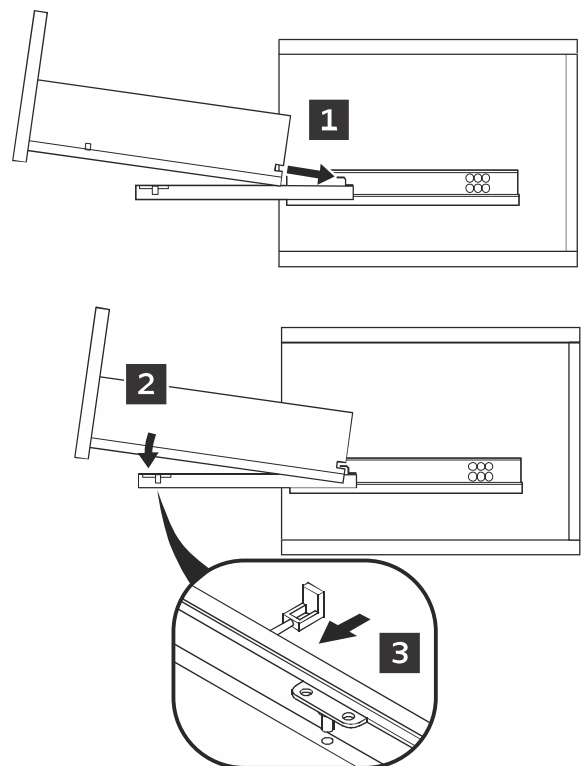

FVN6136-UNS-R | LUCERA | INSTALLATION GUIDE

PAGE 4




# FVN6136-UNS-R LUCERA INSTALLATION GUIDE



## P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS


### NOTE:

Your item may appear slightly different from the illustration.

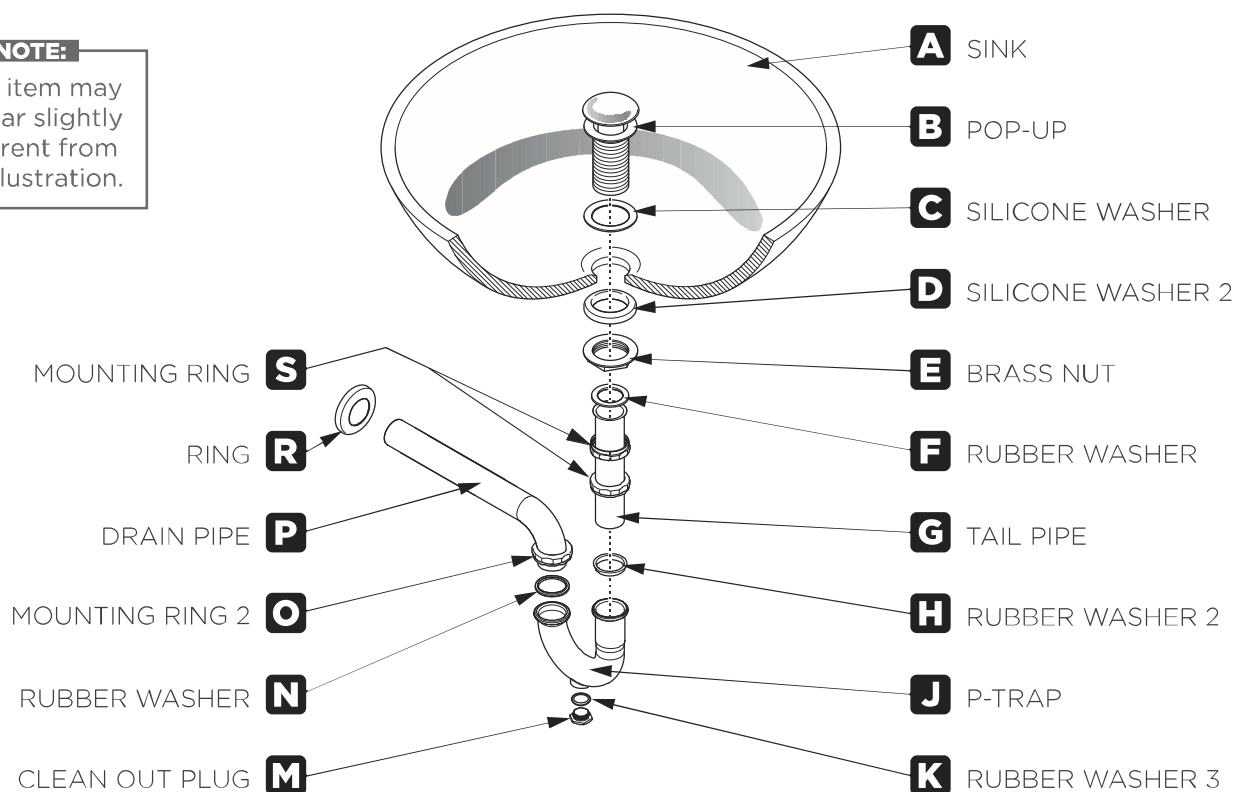


## POP-UP INSTALLATION INSTRUCTIONS


### FOR SINKS WITHOUT OVERFLOW

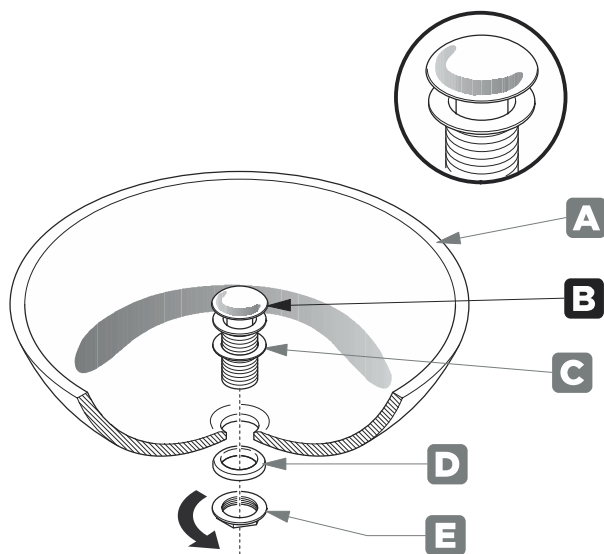

OR

### FOR SINKS WITH OVERFLOW

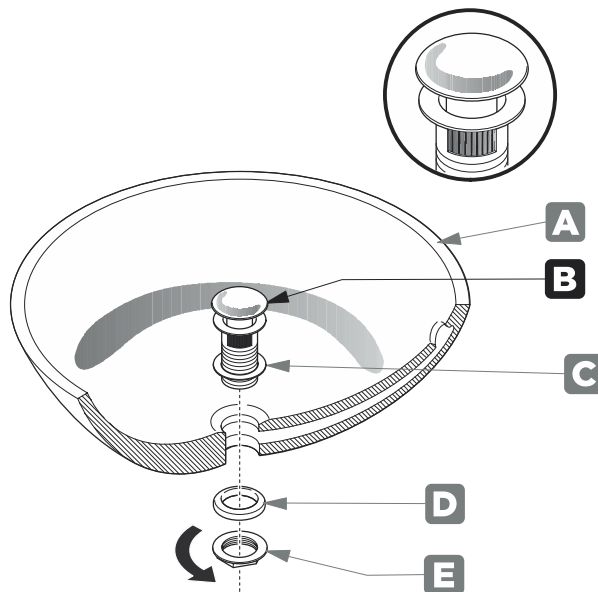




# FVN6136-UNS-R LUCERA INSTALLATION GUIDE



## P-TRAP INSTALLATION

1

Install a tail pipe (G).

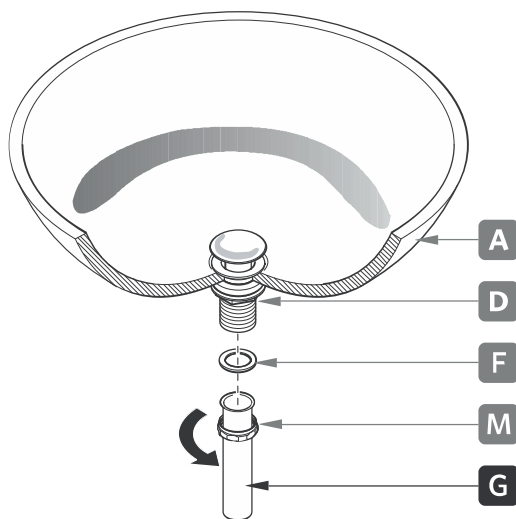

2

Connect a P-trap (J).

