



FVN8093-D


VISTA

INSTALLATION GUIDE


kitchensource.com
1.800.667.8721





FRESCA®

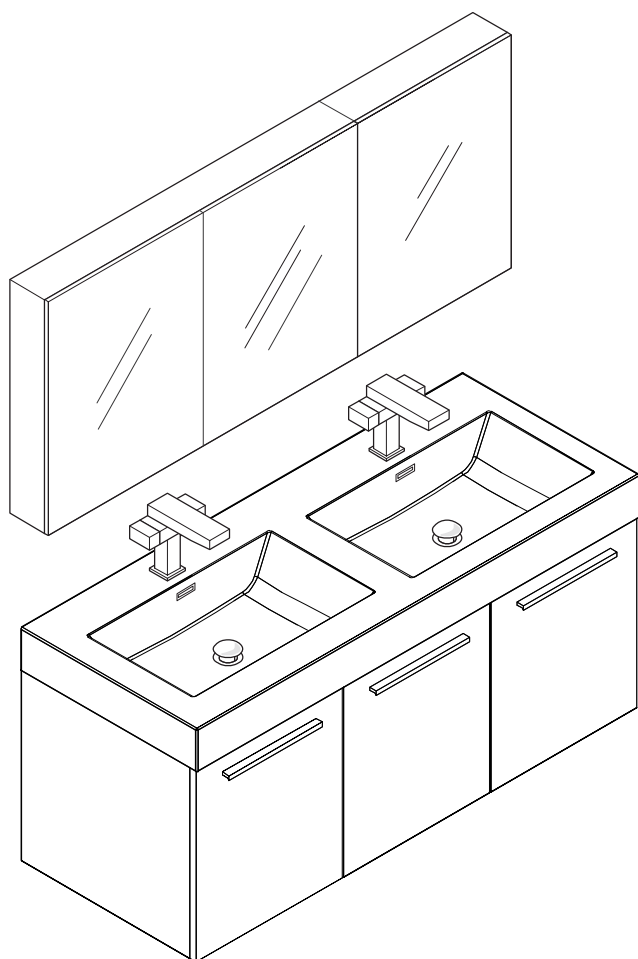

Medicine Cabinet

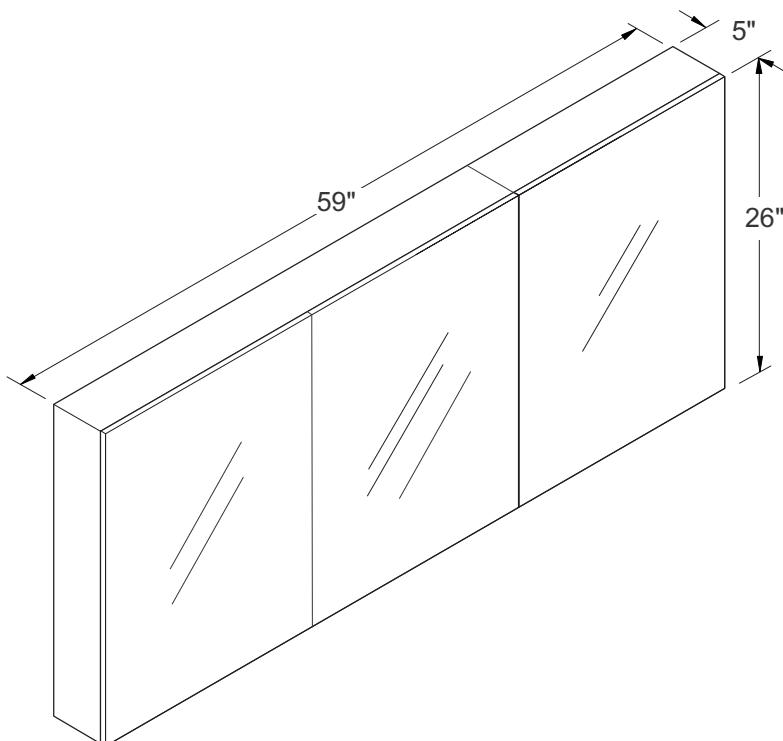

Vanity Front

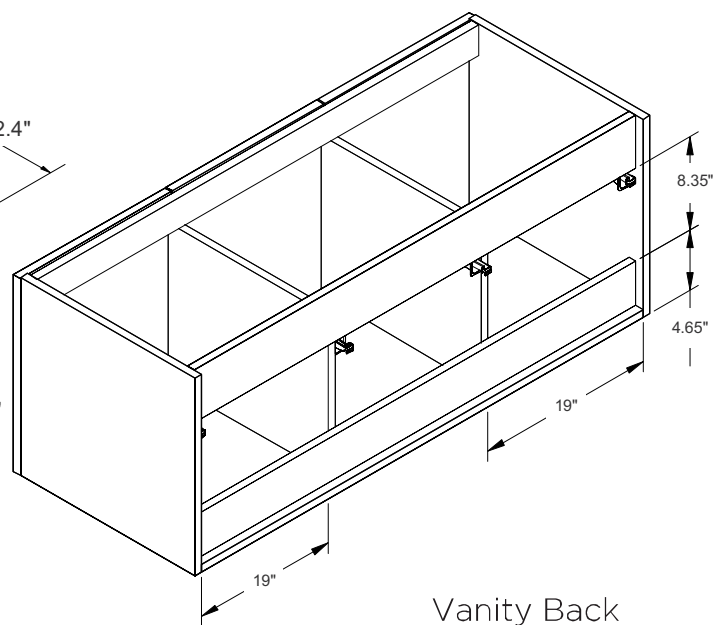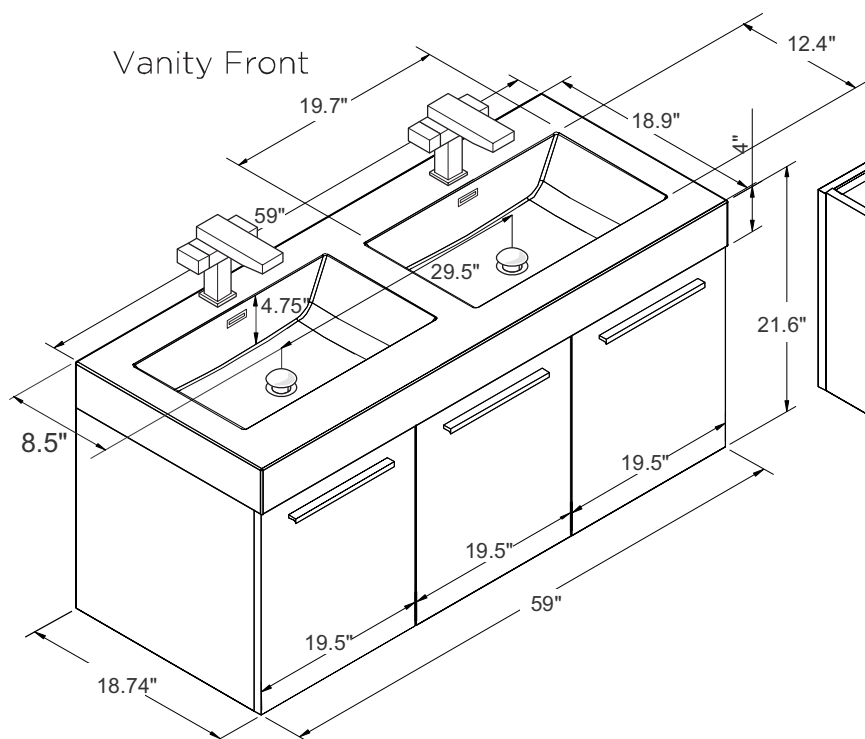


Vanity Back








ALL DIMENSIONS & SPECIFICATIONS
ARE APPROXIMATE AND SUBJECT TO
CHANGE WITHOUT NOTICE.

TOOLS FOR ASSEMBLY

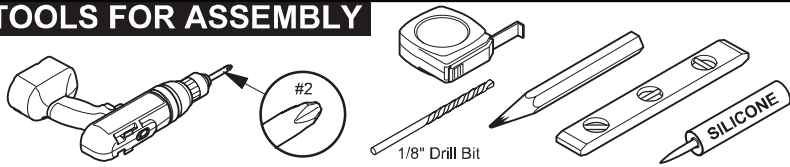


PARTS

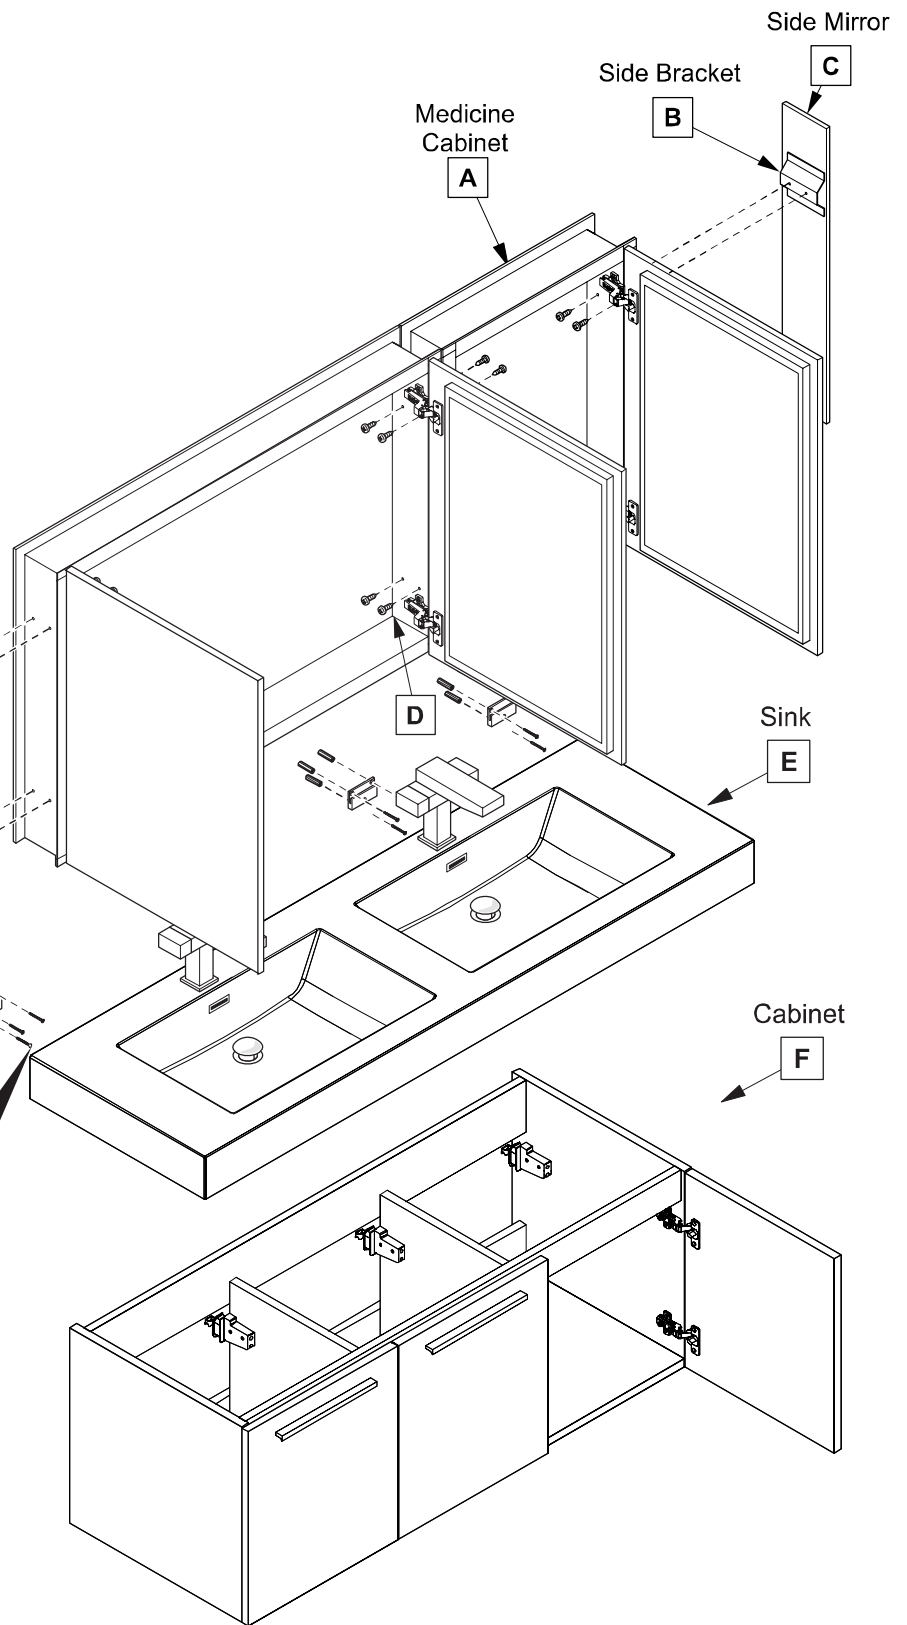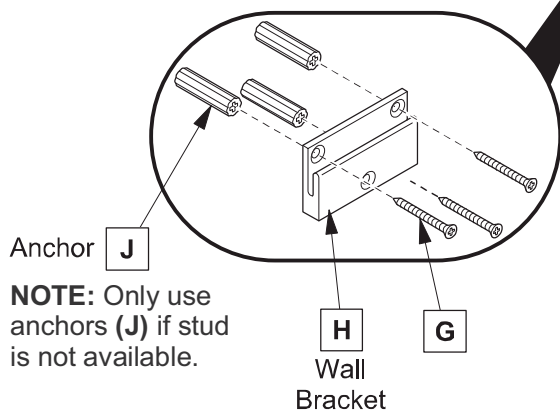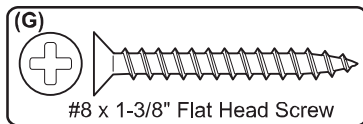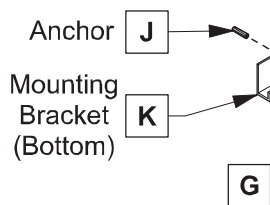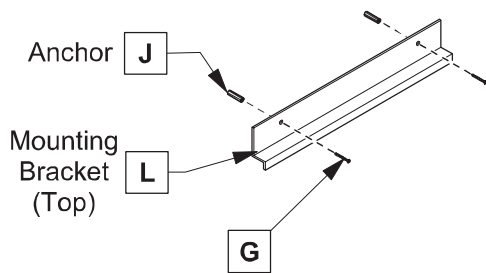

1



Locate cabinet (F) & mark location on the wall

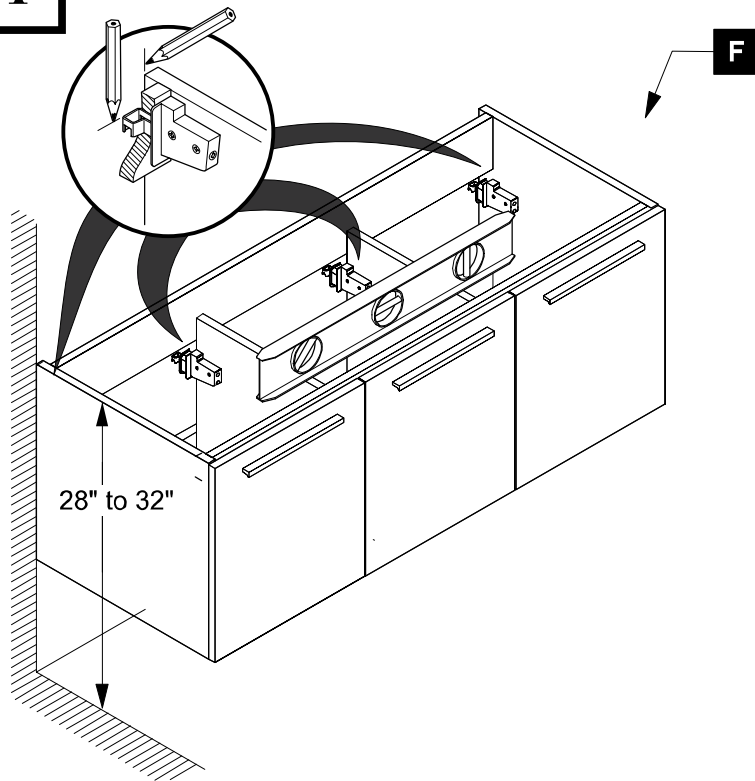

2


Install wall brackets (J)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

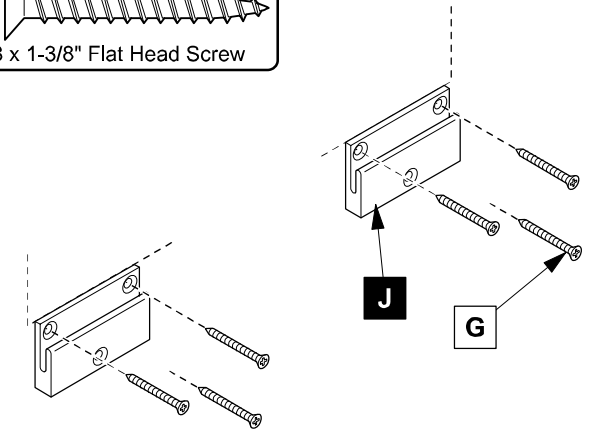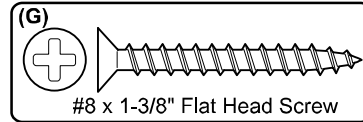


3

NOTE: If necessary remove drawers to access connection mechanism.

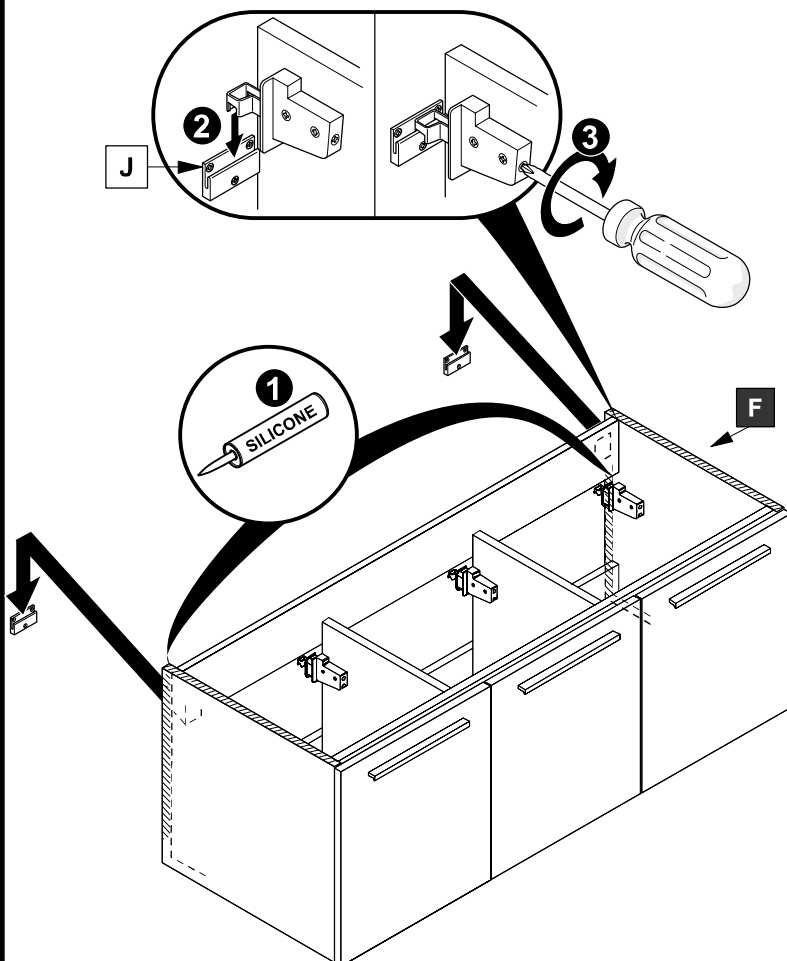

4


Apply silicone and install sink (E)

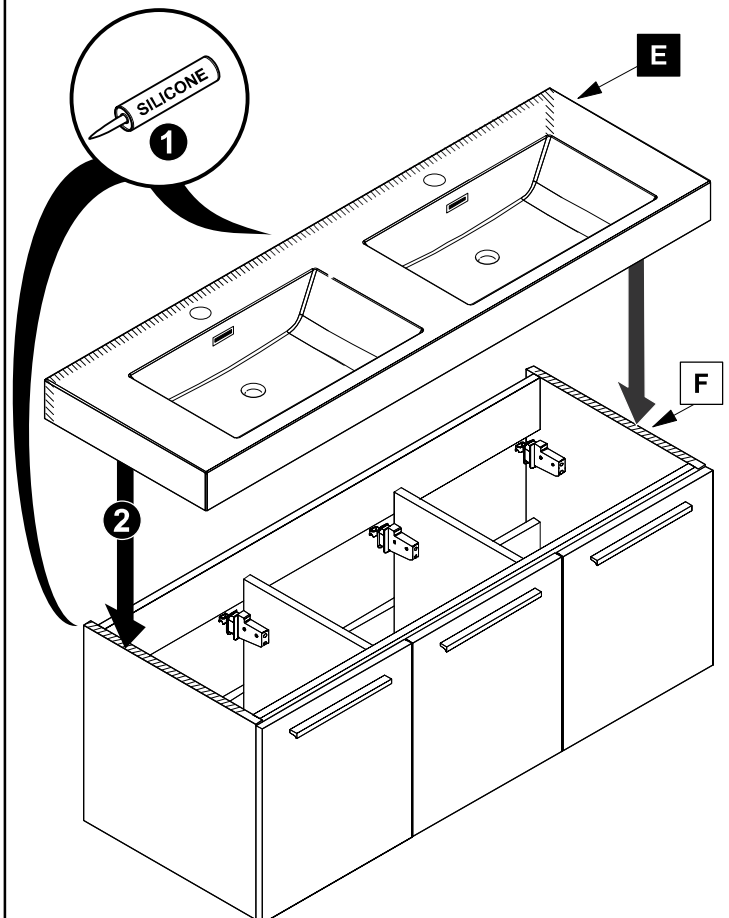

MEDICINE CABINET INSTALLATION


1

Install side mirrors (C)

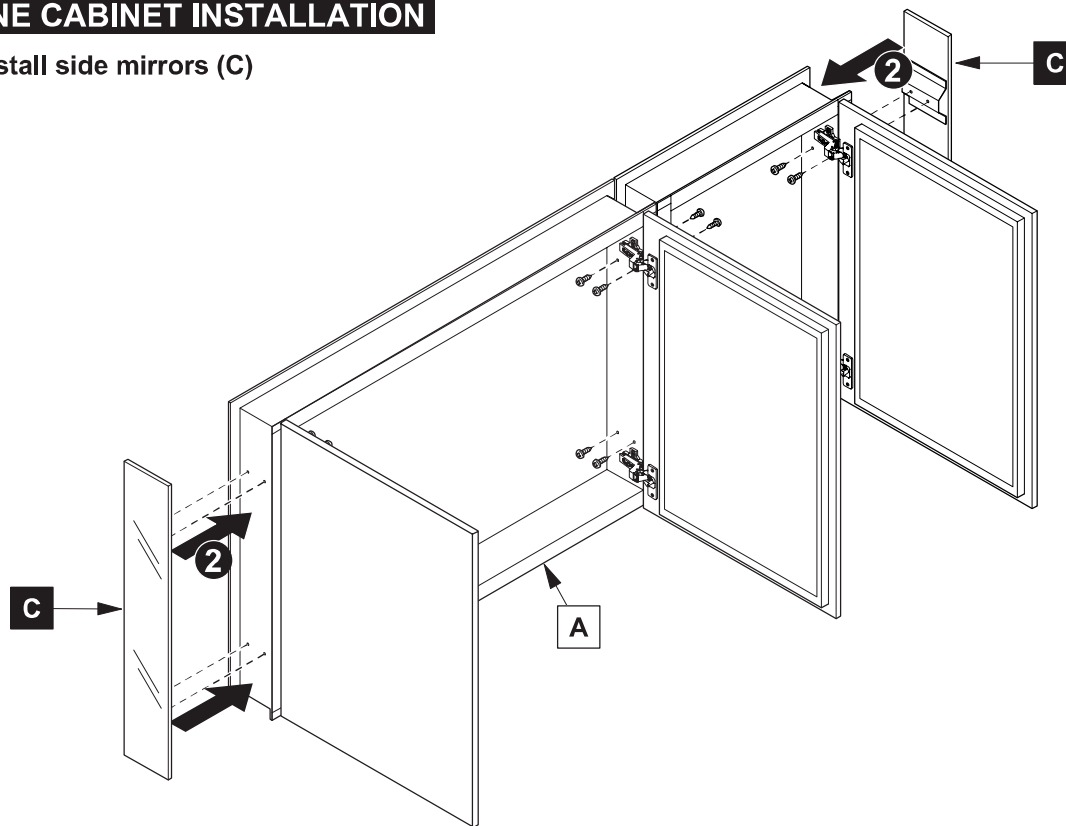


2

Mark cabinet (A) location

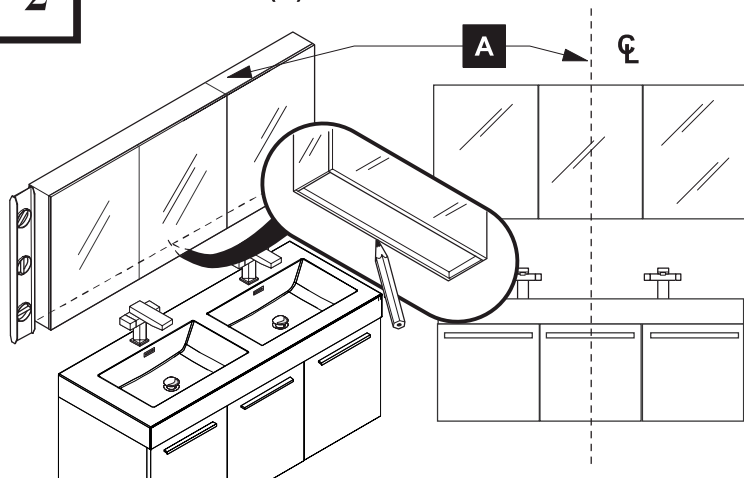

4



Install cabinet (A) and top bracket (L)

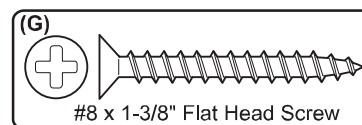


3

Install bottom bracket (K)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

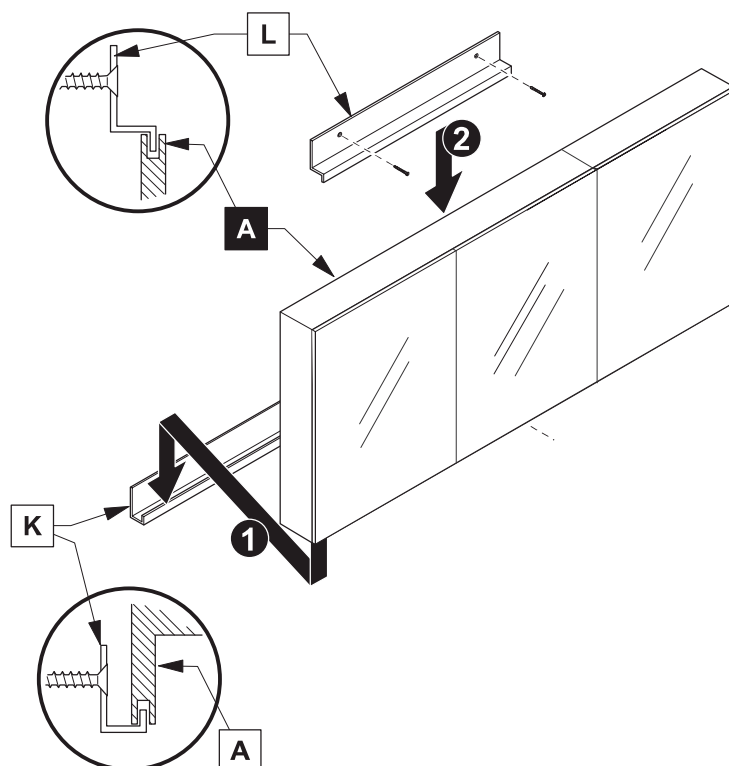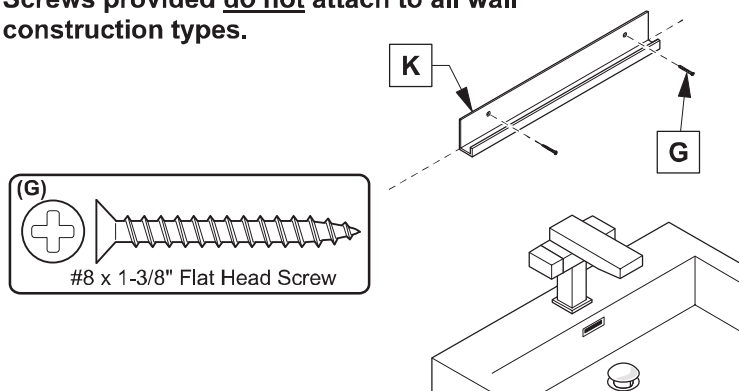


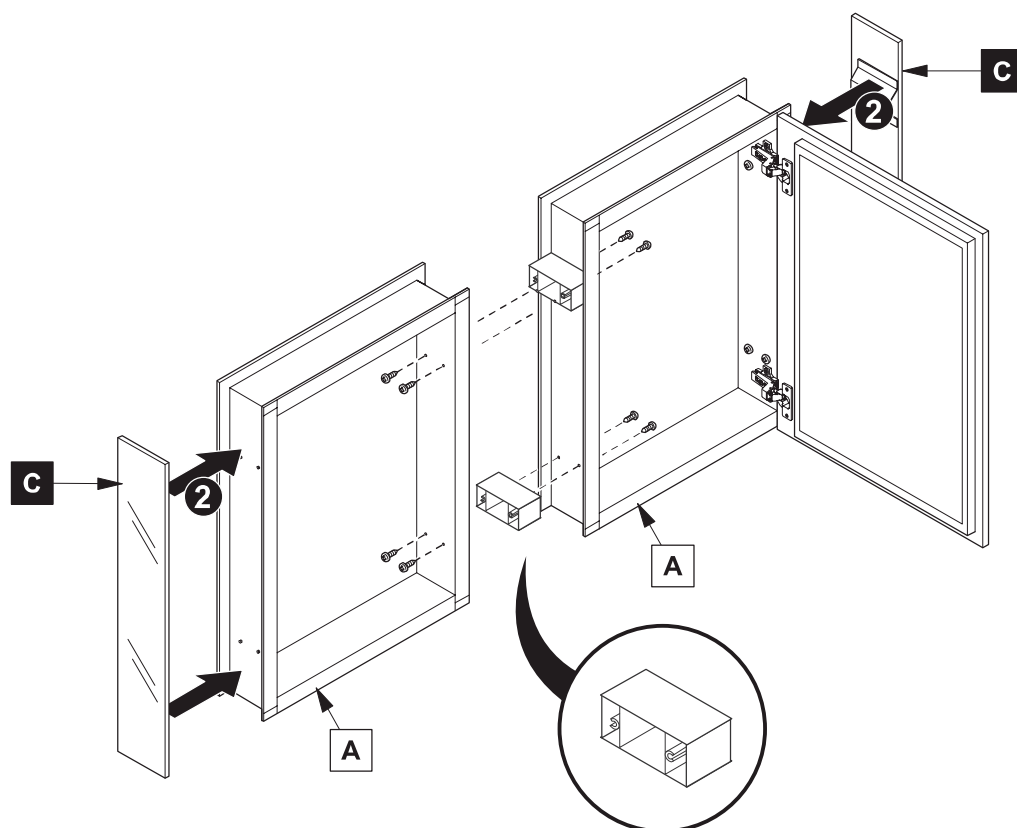

P-TRAP & POP-UP


INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

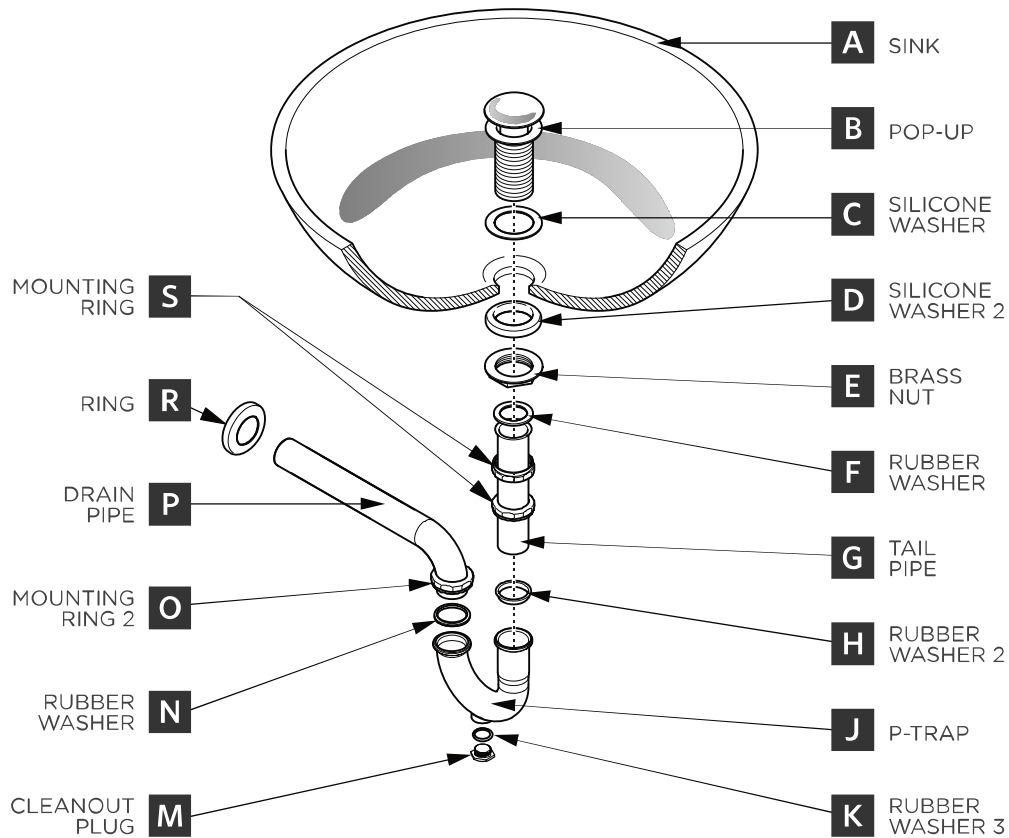


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

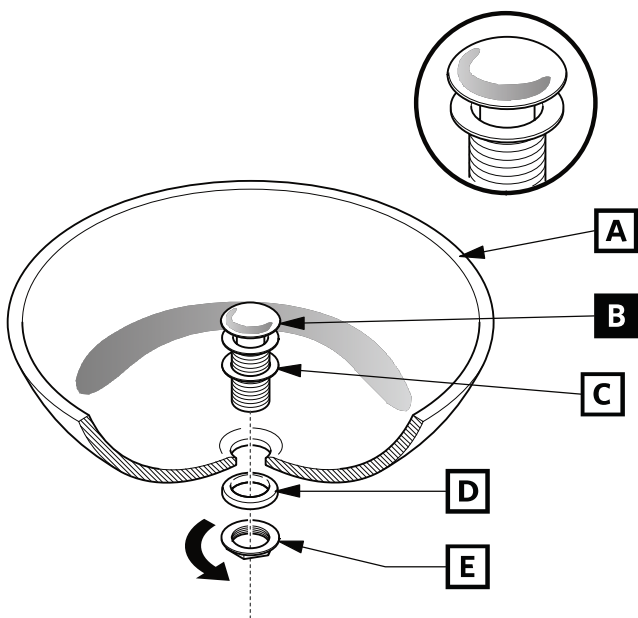

OR


FOR SINKS WITH OVERFLOW

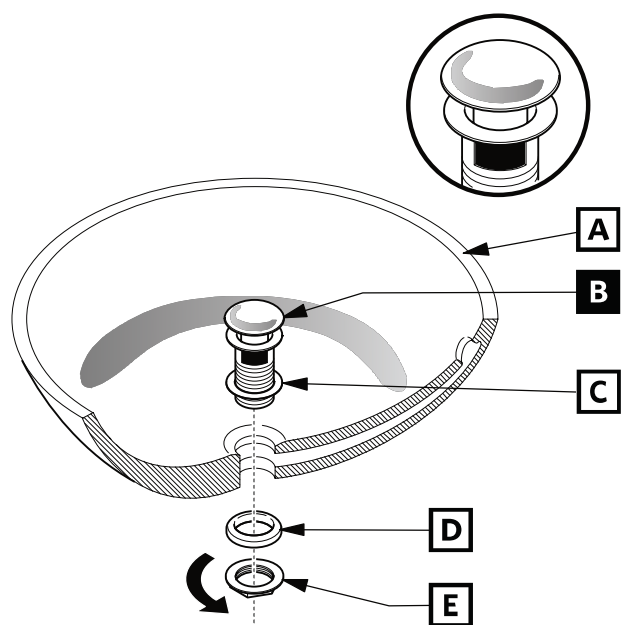

P-TRAP INSTALLATION

1

Install tail pipe (G)

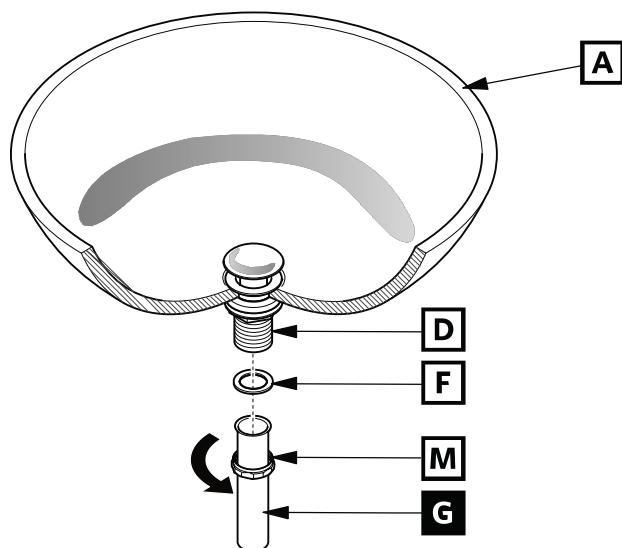

2

Install P-trap (J)

