


SKU:KS-60048







SIZE:1200x550x850m

PROHIBIT COPY


- Prior to installation please check received items against the Packing List. Please report any missing items to your local dealer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

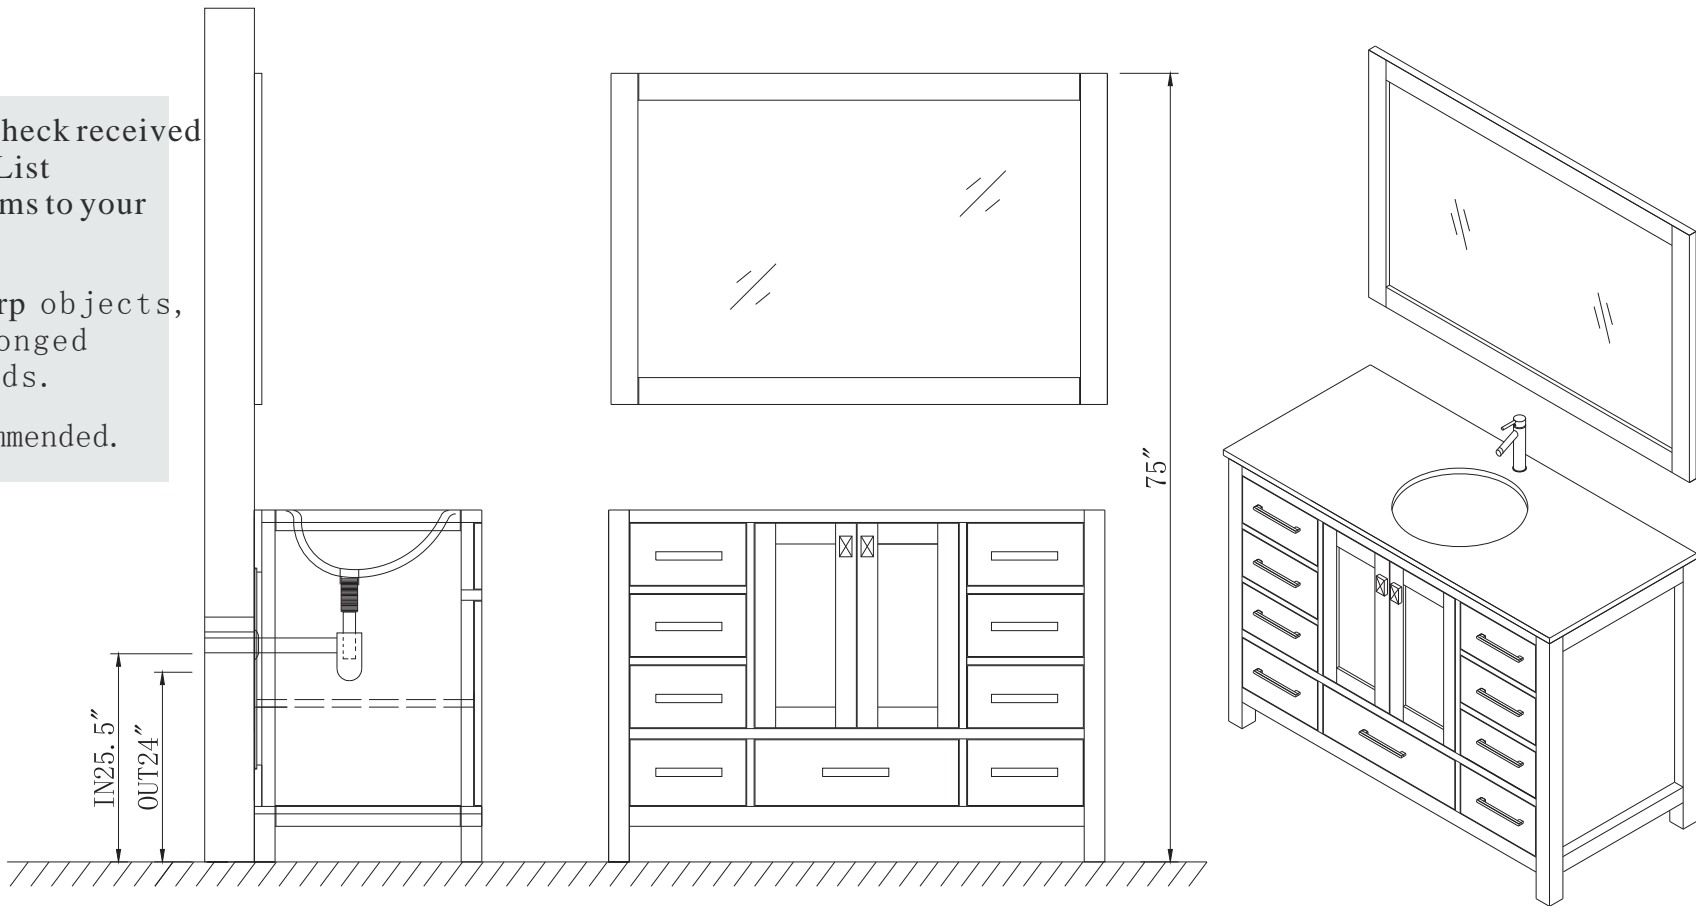






PACKING LIST

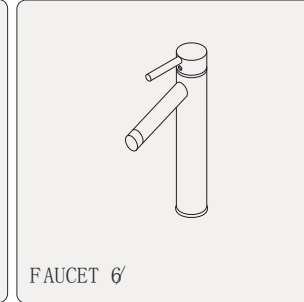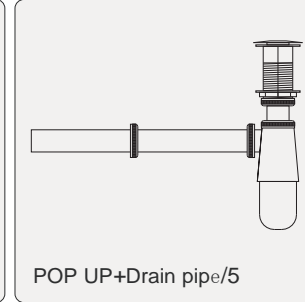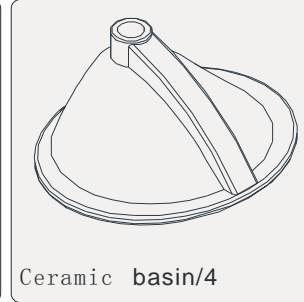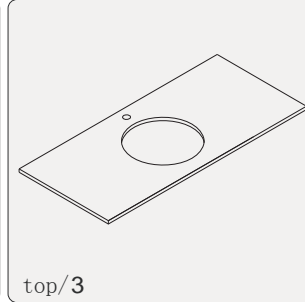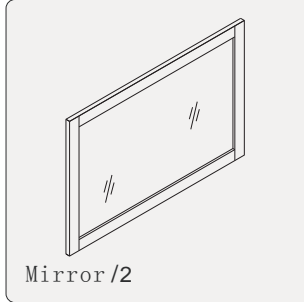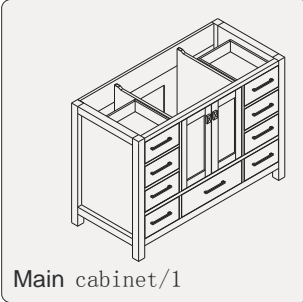




REQUIRED TOOLS

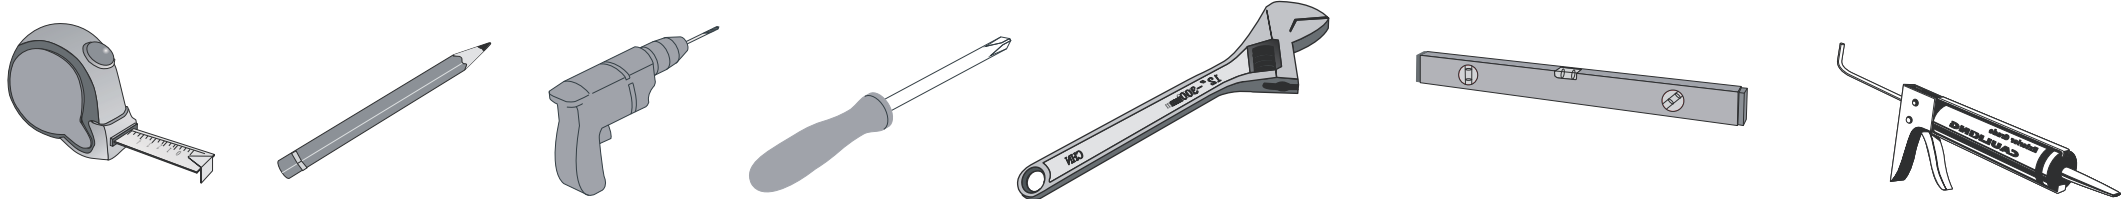


DRAWER SLIDER ATTACHMENT AND DETACHMENT

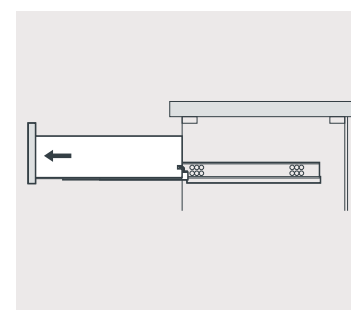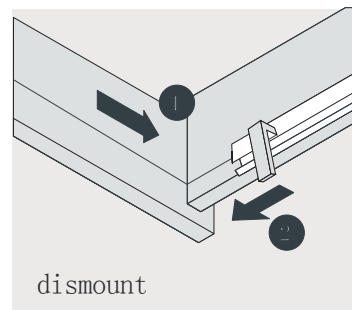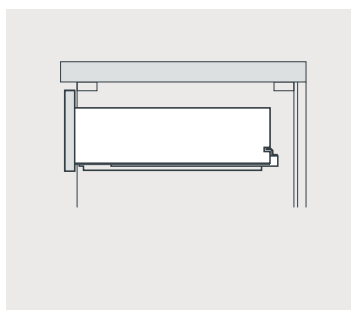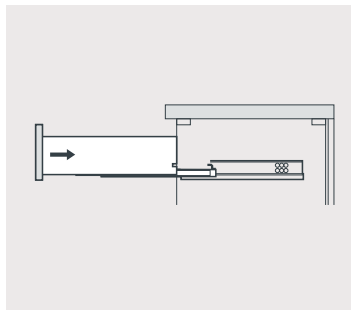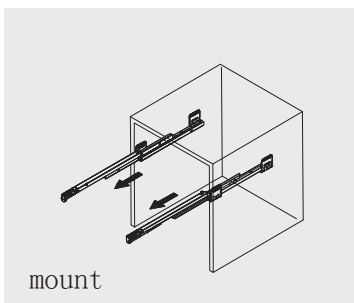


INSTALLATION AND ADJUSTMENT OF HINGES

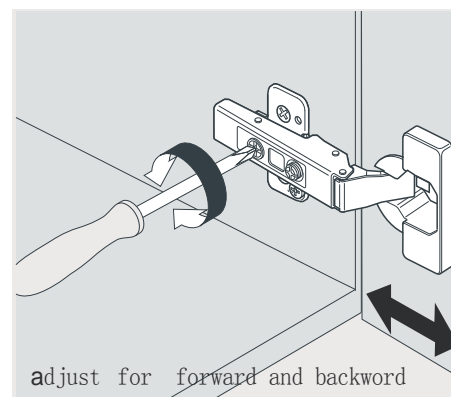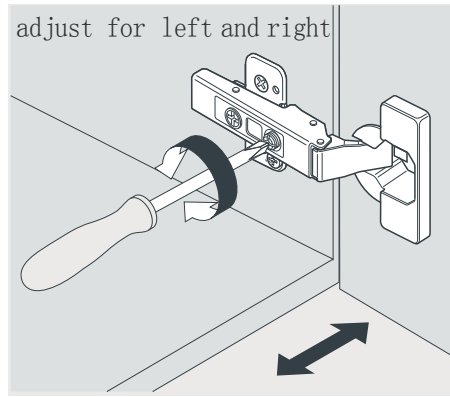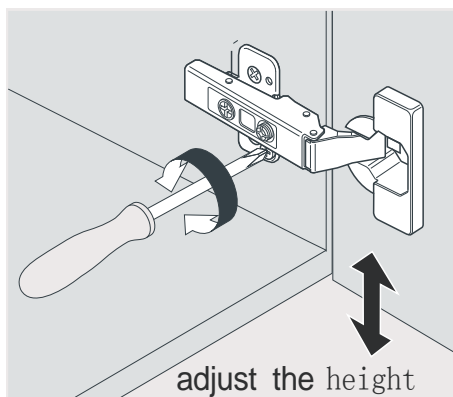

INSTALLATION PROCESS

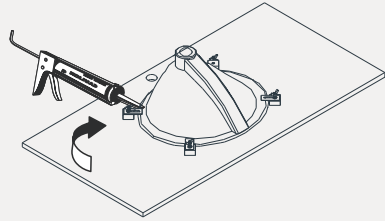


1: Instal BASIN a

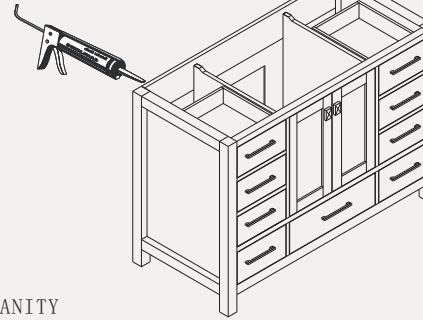



2:GLUE AT VANITY





3: Install TOP AT VANITY .

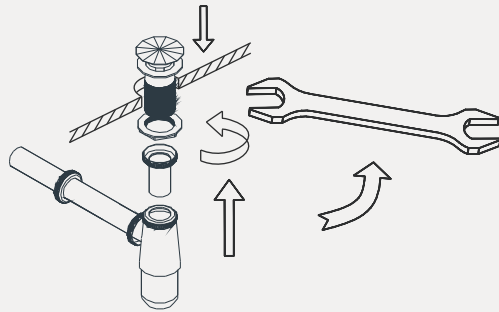

4:Install the pop up and faucet .

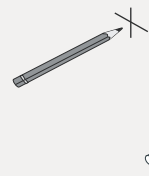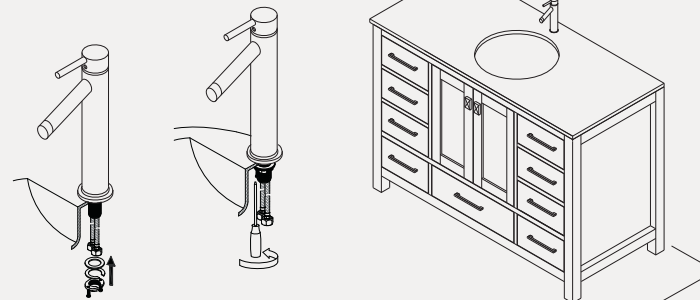

5: Instal mirror

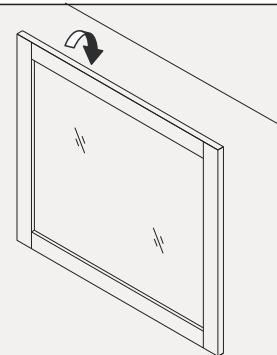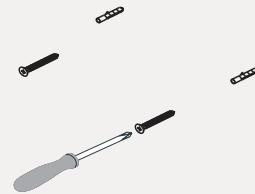

6: FINISHED FULL SET

