

## Slide-Out Pot & Pan Caddy

### Installation Instructions



Inspect all parts and read all instructions prior to beginning assembly and installation.

The Slide-Out Pot & Pan Caddy is designed and intended for the storage of pots and pans. It is not intended or designed to be used as a step stool. Top and bottom shelves are designed to carry a maximum of 25 lbs. each. Do not overload shelves.

### Parts Included

- A. Sliding Caddy Assembly
- B. Mounting Screws

A.

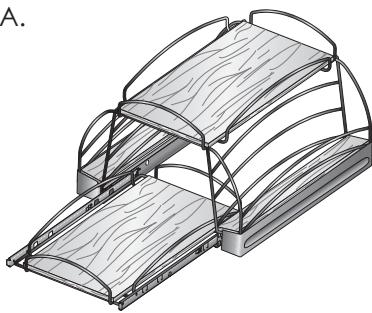

### Tools Required

- Phillips head screwdriver
- Tape measure
- Pencil



### Optional Tools

- Drill with 1/16" bit for drilling pilot holes

### Product Assemblies

- SPS21
- SPS27

- 1 Inspect all parts and read all instructions prior to beginning assembly and installation.
- 2 If cabinet interior has an adjustable shelf, you may want to either remove the shelf or move the shelf to its highest adjustable position, allowing room for storing items on the top shelf of the Pot & Pan Caddy.
- 3 Place sliding caddy assembly on cabinet floor, against the back edge of the cabinet face frame. Be sure that the shelves slide-out towards the cabinet door. If installing in a frameless cabinet, measure 1/2" to 3/4" back from front of cabinet opening, and align sliding caddy assembly parallel to cabinet opening. Close door to make sure the assembly does not interfere with the door operation. Check that unit will clear the door opening by carefully sliding top shelf through cabinet frame opening no more than 2". Note: At this point, the Pot & Pan Caddy is not secured to cabinet floor, so use caution when extending the shelf towards the cabinet opening as both the top and bottom shelves can slide independently.
- 4 Once position and clearance is determined, return top shelf to it's closed position. Locate the front and rear mounting brackets (4A). (For ease of installation, one extra mounting hole location is provided per bracket.) Fasten each front bracket with one supplied screw and the Phillips head screwdriver. Repeat this process for the two rear brackets. Remove the narrow side wood shelves from packaging. With the clips toward the bottom, push each shelf down into position until you hear a "click" (4B).

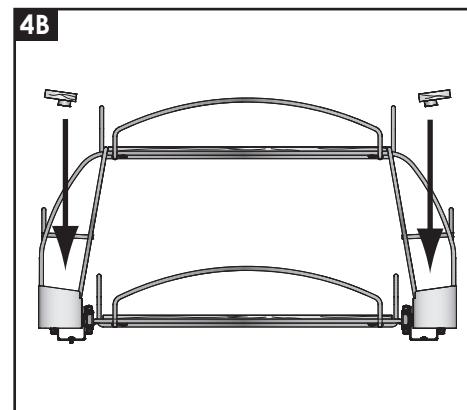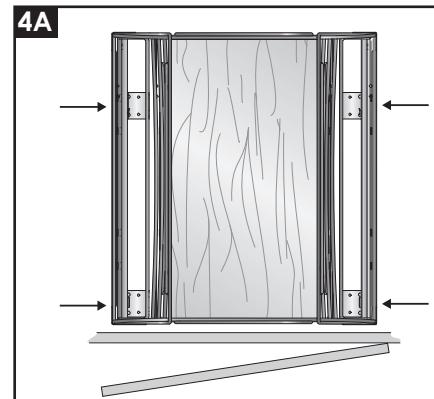

### Optional Step

Mark placement of mounting holes with a pencil, carefully remove sliding caddy assembly and drill pilot holes for fastening screws. Place sliding base assembly back into position and fasten with the supplied screws.

Installation is now complete.



KNAPE & VOGT®