





5WB2 Series

Assembly and Installation Instructions

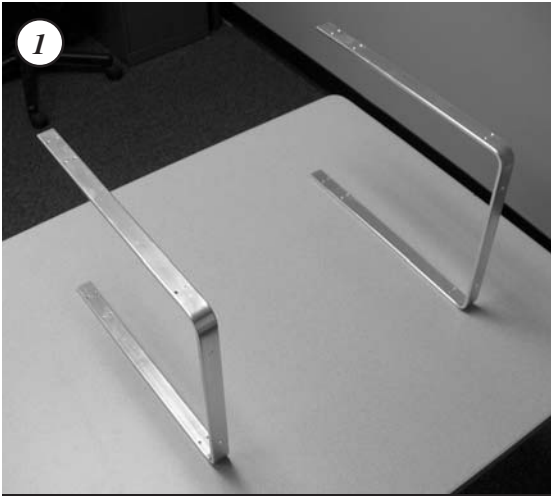


Lay the 2 aluminum frames on a flat surface as shown.

2
Depress the release lever on the slides and remove the cabinet member portion of the slides from the baskets.

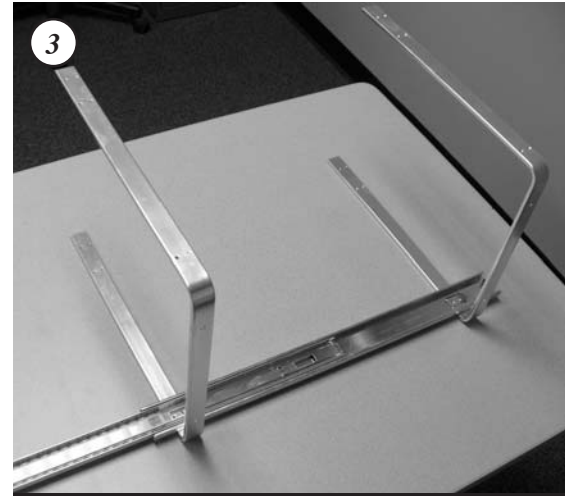

Position the bottom slide on the inside of the frame as shown, attach with 4 machine screws and lightly tighten.

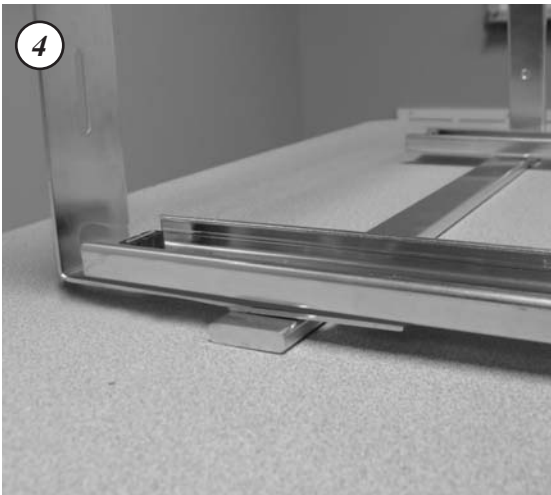


Position the top slide on the inside of the frame. The rear mounting strap should be placed between the slide and the frame as shown. Attach with 4 machine screws and lightly tighten.

5
Repeat steps 3 and 4 with opposite side.

Proceed to next page for Installation Instructions.


6

Carefully place partially assembled unit into cabinet.

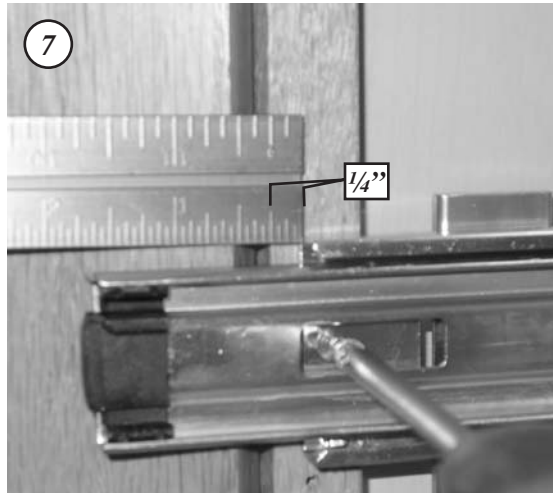

On the side opposite the hinges, attach top slide to face frame as shown. Front of slide should be positioned about 1/4" back from face frame. Use one of the 1/2" long wood screws.


8

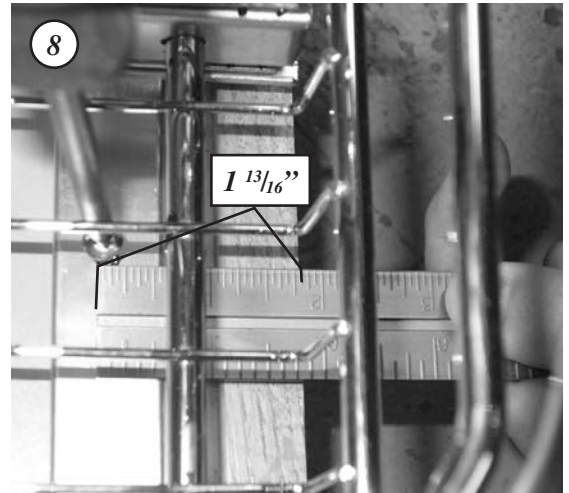

Attach aluminum frame to bottom of cabinet. Position the front of the aluminum frame 1 13/16" back from the face frame as shown. Install with two 3/4" long wood screws.


9

Measure the distance from the side of the front aluminum frame to the inside edge of the cabinet. Position the rear aluminum frame the same distance from the rear of the cabinet and install with two 3/4" long wood screws.

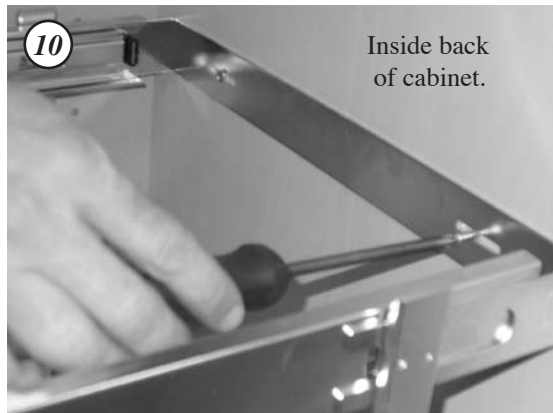

Position rear mounting strap on rear of the cabinet as shown. Use two 1/2" long wood screws to attach.

11

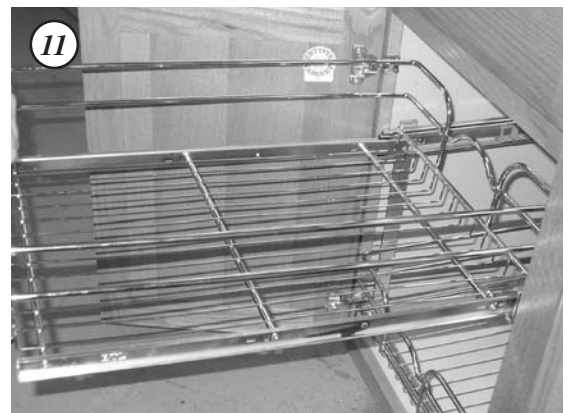

Engage baskets into slides.

12

Close cabinet door and check for interference.

