


**Instructions for Adjustable Spice Rack
4ASR-15, 4ASR-18 and 4ASR-21**

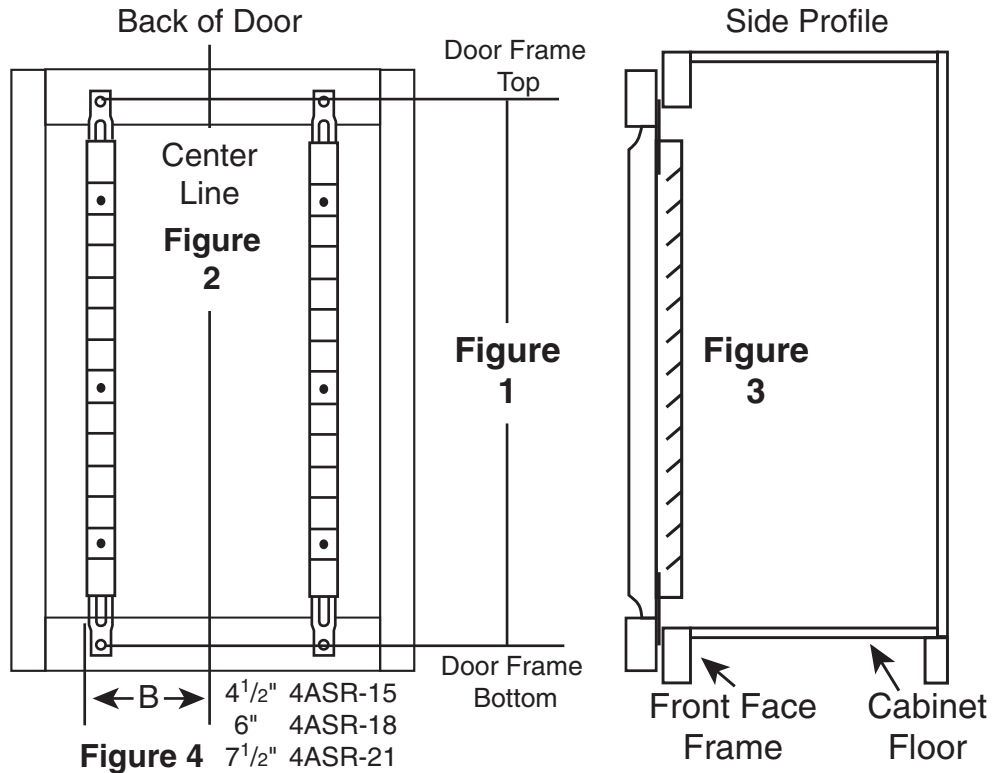

NEW mounting brackets adjust up to 5" so they will align in thick portion of door frame. (Standards may have to be cut to fit shorter doors.)

STEP 1: Figure 1

Measure center (top) to center (bottom) on inside door frame rails.

STEP 2:

Transfer measurement from **STEP 1** to standards and tighten screws.



STEP 3:

Remove door from cabinet and lay face down on a towel to protect finished surface.

STEP 4: Figure 2

Mark center line of door (side to side)

STEP 5: Figure 3

Position one standard on back of door with slats pointed towards top of door.

STEP 6: Figure 4

Align standard parallel to edge of door using spacing according to Dimension "B".

STEP 7:

Fasten to door panel frame using screws furnished.

CAUTION: Determine thickness of door panel and make sure screws are not too long and do not come thru front of panel.

STEP 8:

Repeat **STEP 6** with other standard. Make sure bottom of both standards are level with each other so shelves hang level.

STEP 9:

Replace door to cabinet and hang spice shelves on standards.

READ THIS FIRST!

NOTE:

The standards can be moved side to side if necessary to clear hardware or partition so shelves will clear opening as door swings open.

4ASR requires 4-1/2" of clearance behind door. Existing shelves must be modified to allow for these bins.

