

# Project Planning Cards by Room


Closets

Offices


Bedrooms

# Closets Built In Project Planning Card

Docking Drawer Blade Series outlets can be specified into built in closet drawers to create a dedicated space to charge wearable technology and other everyday devices.

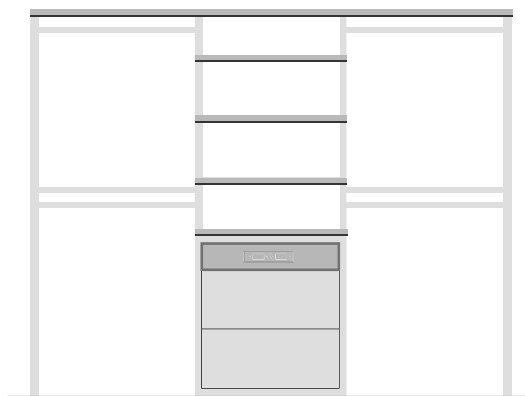

2" of space needed behind drawer box

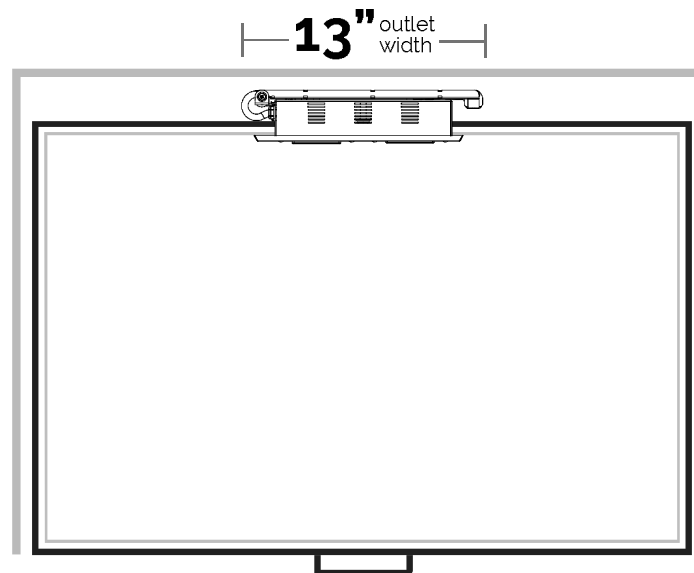

## Pro Tip

Think beyond cell phones! Charge headphones, flashlights, reflective safety lights, pet collars and more.


Install multiple Blade Series outlets to create drawers for different purposes such as technology drawers, sports drawers, pet drawers etc.

Specify a 1514-232 so your outlet has fast charging USB-C ports for your newer devices and USB-A for all of your other devices that come with USB-A cords.



**Most Popular Outlet:**  
**1514-232**

# Offices Credenza



Docking Drawer Blade Series outlets can be specified into home office credenzas to create hidden charging stations and printer pull out drawers to keep accessories and equipment out of sight while still charged and at the ready.

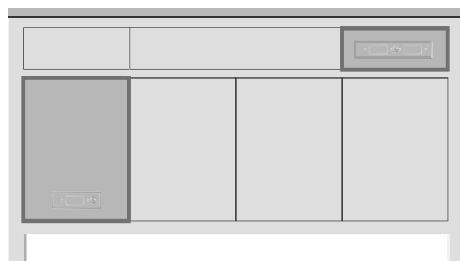

**Option 1**  
charging drawer

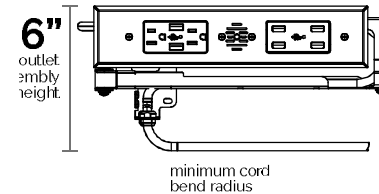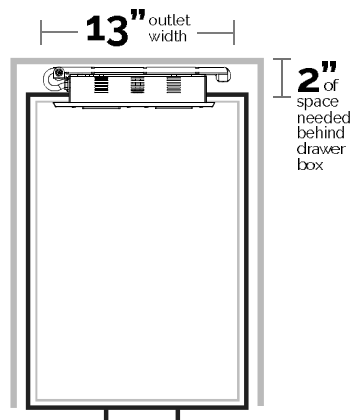

**Option 2**  
printer pullout

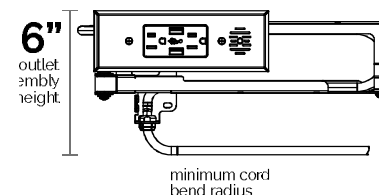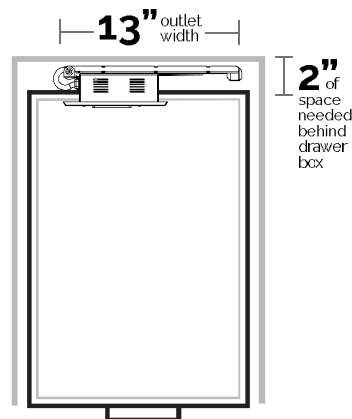

## Pro Tips

Every Blade Series outlet can power any device in your office, from tech devices, such as phones and tablets, to laser and inkjet printers.

The Blade Series cord can bend to the side to fit in constrained credenza drawer spaces.



The illustration to the left demonstrates the minimum cord bend radius.

Blade Series outlet assembly height is 6" when the cord is bent to the side.

**Most Popular Outlets:**  
1514-232 & 1514-160

# Bedrooms Nightstand Project Planning Card

Docking Drawer Blade Series outlets can be specified into nightstand drawers to create hidden bedside charging stations and dedicated space to stow and power CPAP machines and other accessories.

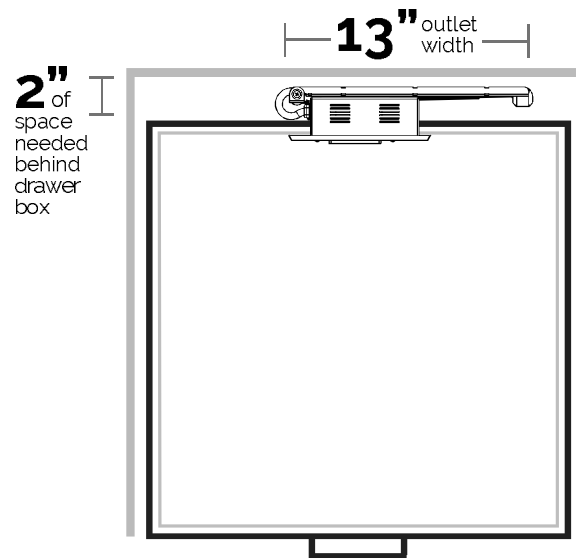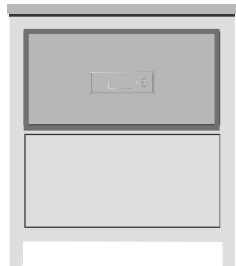

## Pro Tip

Blade Series cable management arms can be used to manage other low voltage cables such as networking and telephone cables. Make sure the cables are stranded and designed to be used in a movable location. Solid cables are not meant to be used in a movable location.

**Most Popular Outlet:**  
1514-110