

## Kitchen Cart CF3017



## **PART LIST**

PART LIS	•			
A	B	C	D	E
Top Panel (Ships Separately) 1 PC	Left Side Panel 1 PC	Right Side Panel 1 PC	Left Partition Panel	Right Partition Panel 1 PC
F	G	H		J
Bottom Panel	Top Rail	Front Rail	Front Middle Rail	Back Panel
1 PC	1 PC	2 PCS	1 PC	3 PCS
K	L	M	N	0
Back Rail 2 PCS	Back Top Rail 1 PC	Front Top Rail 1 PC	Top Drawer Front Panel 3 PCS	Top Drawer Left Side Panel 3 PCS
Р	Q	R	S	Т
Top Drawer Right Side Panel 3 PCS	Top Drawer Back Panel 3 PCS	Bottom Drawer Front Panel 1 PC	Bottom Drawer Left Side Panel 1 PC	Bottom Drawer Right Side Panel 1 PC
U	V	W	X	Y
Bottom Drawer Back Panel 1 PC	Drawer Bottom Panel 4 PCS	Left Door Panel 1 PC	Right Door Panel	Towel Bar Left Side Panel 1 PC

## PART LIST

Z	ZA	ZB	ZC	ZD
Towel Bar Right Side Panel	Towel Bar Support Panel	Large Support Bar	Small Support Bar	Small Towel Bar Panel
1 PC	1 PC	1 PC	2 PCS	2 PCS
ZE	ZF	ZG	ZH	ZI
To				
Small Towel Bar	Adjustable Shelf	Locking Caster	Caster	Leg
1 PC	2 PCS	2 PCS	2 PCS	4 PCS

## HARDWARE LIST

#1	#2	#3	#4	#5
			<b>A</b>	
Ø8*30mm	Ø6*30mm Small Wood	Cam Bolt	Cam Lock	Handle
Large Wood Dowel	Dowel			
50 PCS (Extra 1)	12 PCS (Extra 1)	7 PCS (Extra 1)	7 PCS (Extra 1)	4 PCS
#6	#7	#8	#9	#10
	3/4"*Ø5/32"*D9mm		1-3/4"*Ø1/4"*D11mm	
Knob	Round Head Bolt	Barrel Nut	Long Bolt	Shelf Holder
2 PCS	10 PCS (Extra 1)	4 PCS	14 PCS (Extra 1)	8 PCS (Extra 1)
#11	#12	#13	#14	#15
<b>D A</b> (	12*Ø3*D6mm	12*Ø3*D6mm		12*Ø4*D9mm
Magnet	Small Round Head Screw	Black Screw	Door Hinge	Large Round Head Screw
2 PCS	16 PCS (Extra 1)	4 PCS (Extra 1)	4 PCS	16 PCS (Extra 1)
#16	#17	#18	#19	
	1-1/2"*Ø5/16"*D13mm			
Allen Wrench	Short Bolt	Flat Washer	Spring Washer	
1 PC	4 PCS (Extra 1)	4 PCS (Extra 1)	4 PCS (Extra 1)	


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Please do not use tools to assemble this unit unless specifically indicated.

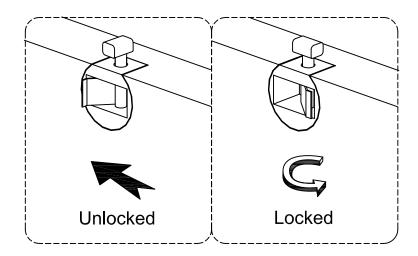


Reference the images above any time the instructions state "lock the hardware". Note: Be sure to check all hardware is locked when completed.

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach handles (part #5) to top drawer front panel (part N) and bottom drawer front panel (part R) using round head bolts (part #7) and phillips head screwdriver. Attach knobs (part #6) to left door panel (part W) and right door panel (part X) using round head bolts (part #7) and phillips head screwdriver.

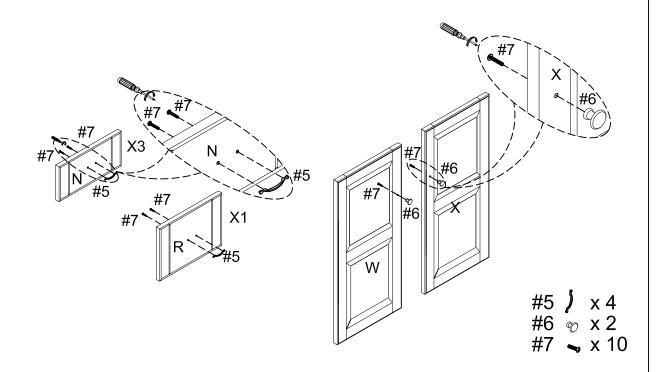


Step 2. Attach door hinges (part #14) to left door panel (part W) and right door panel (part X) using small round head screws (part #12) and phillips head

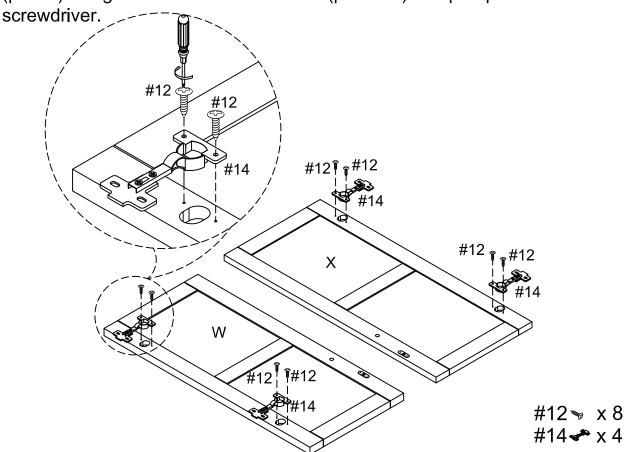


Step 3. Attach magnets (part #11) to left partition panel (part D) and right partition panel (part E) using black screws (part #13) and phillips head screwdriver. Insert cam bolts (part #3) to top panel (part A), left partition panel (part D) and right partition panel (part E) using phillips head screwdriver.


NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

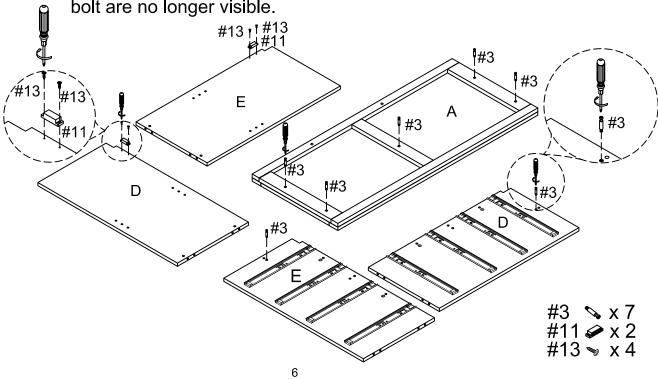

Step 4. Attach top drawer left side panel (part O) and top drawer right side panel (part P) to top drawer back panel (part Q) using small wood dowels (part #2) and lock the hardware. Slide drawer bottom panel (part V) into grooves of assembled unit (parts O, P & Q). Attach top drawer front panel (part N) to assembled unit (parts O, P & V) using small wood dowels (part #2) and lock the hardware. Repeat for remaining drawers.

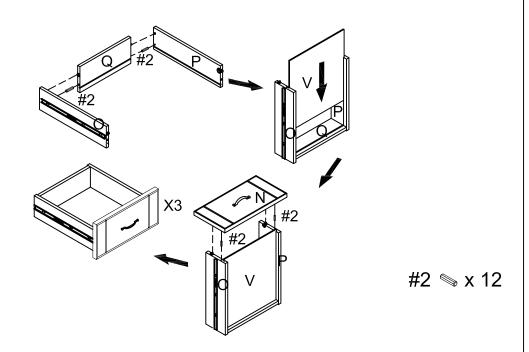


Step 5. Attach bottom drawer left side panel (part S) and bottom drawer right side panel (part T) to bottom drawer back panel (part U) and lock the hardware. Slide drawer bottom panel (part V) into grooves of assembled unit (parts S, T, & U). Attach bottom drawer front panel (part R) to assembled unit (parts S, T, & V) and lock the hardware.

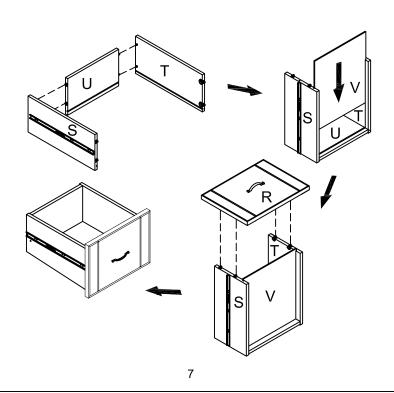

Step 6. Attach top rail (part G), front rails (part H) and front middle rail (part I) to left partition panel (part D) using large wood dowels (part #1), cam lock (part #4) and lock the hardware.

NOTE: Cam locks must rotate a full 180°. See pictured insert.

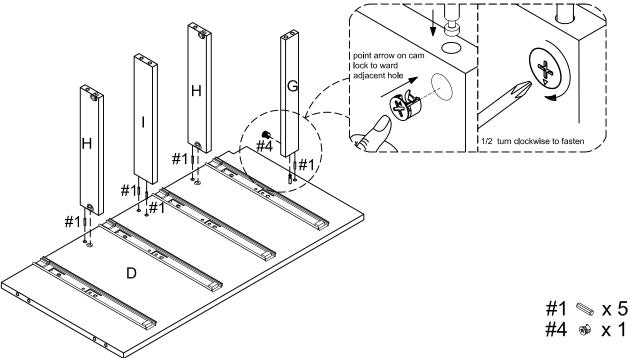

Step 7. Attach top rail (part G), front rails (part H) and front middle rail (part I) to right partition panel (part E) using large wood dowels (part #1), cam lock (part #4) and lock the hardware.

NOTE: Cam locks must rotate a full 180°. See pictured insert.

