


88 5520 942 Aspen Kitchen Island

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

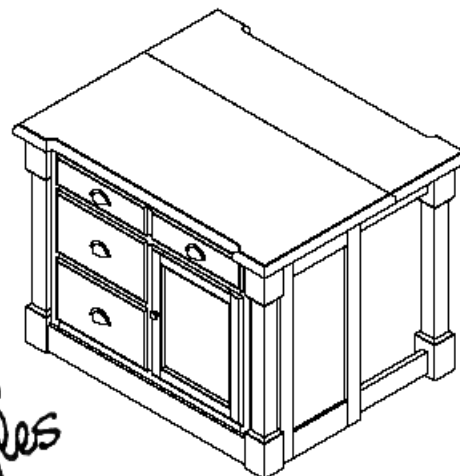

Part List

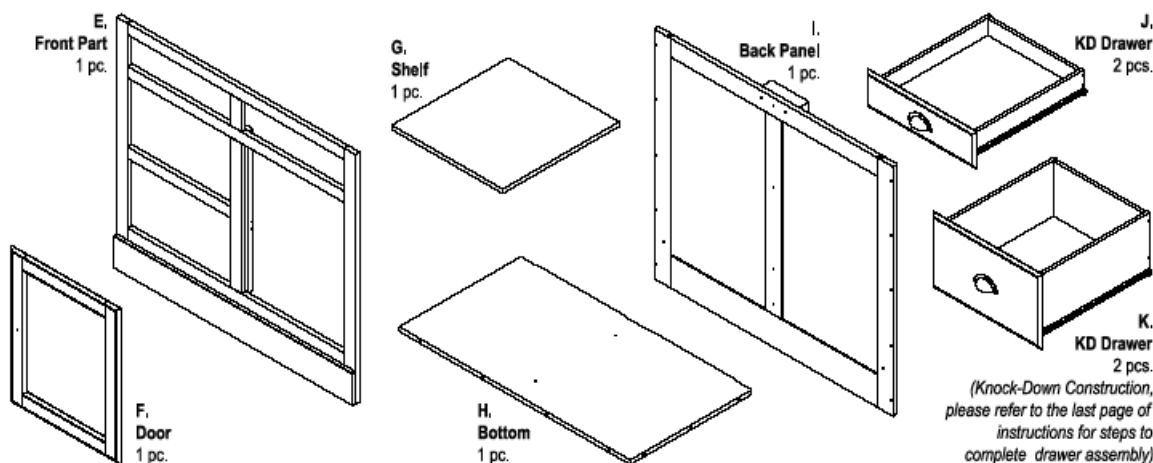


Hardware List

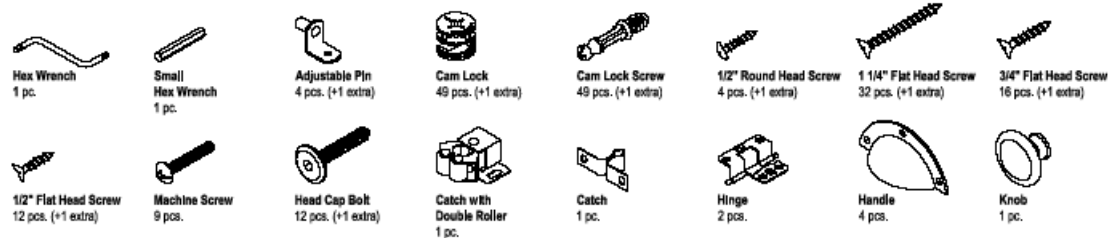

For assembly also need the following:

88 5520 941 Aspen Kitchen Island


Carton quantity: 1

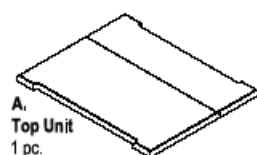


A.
Top Unit
1 pc.

88 5520 943 Aspen Kitchen Island

Carton quantity: 1




B.
Side Panel
1 pc.




C.
Side Panel
1 pc.



D.
Middle Panel
1 pc.



L.
Frame Leg
1 pc.



M.
Frame Leg
1 pc.

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level



Assembly Instructions 2/10

IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levellers to level.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Side Panel (B) and (C), Front Part (E), Bottom (H) and Back Panel (I).

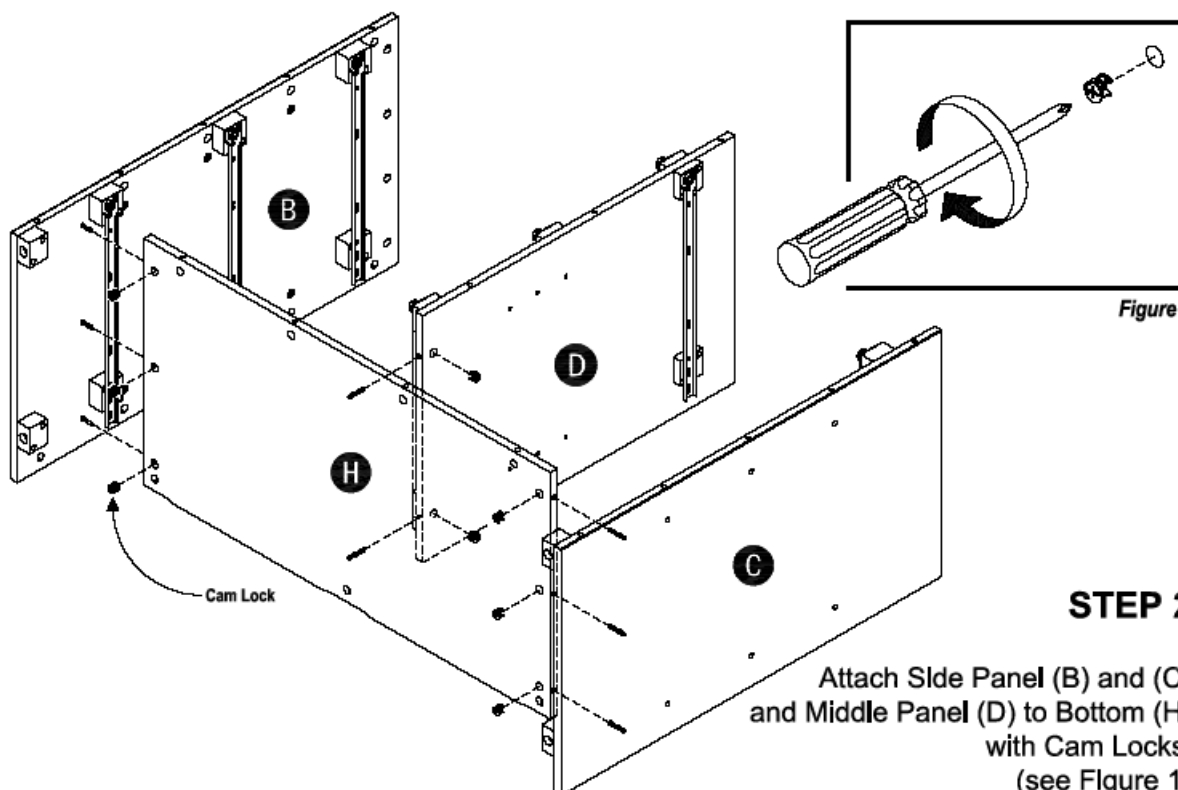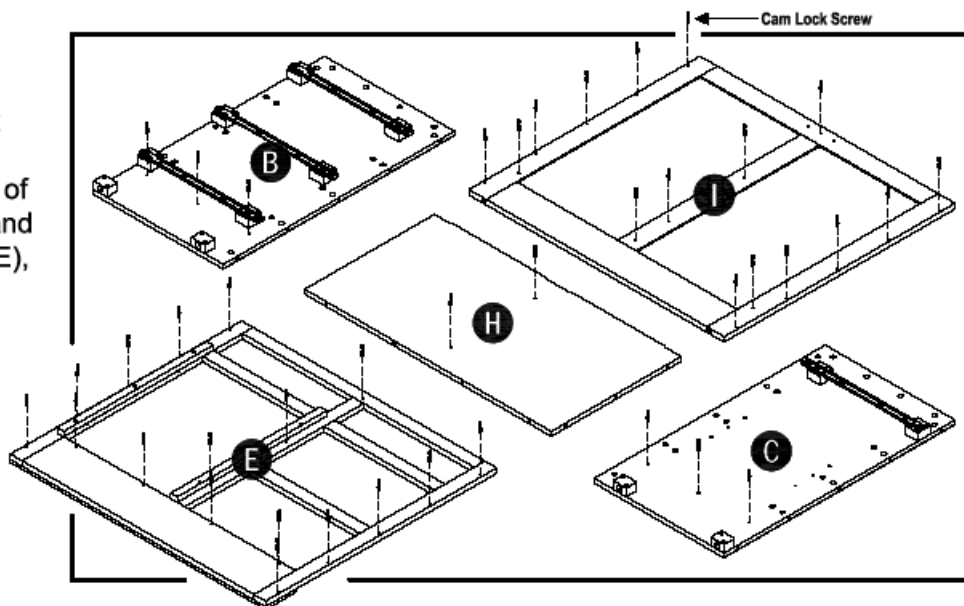


STEP 2

Attach Side Panel (B) and (C) and Middle Panel (D) to Bottom (H) with Cam Locks.
(see Figure 1)

Assembly Instructions 3/10

STEP 3

Attach Front Part (E) to unit using Cam Locks.

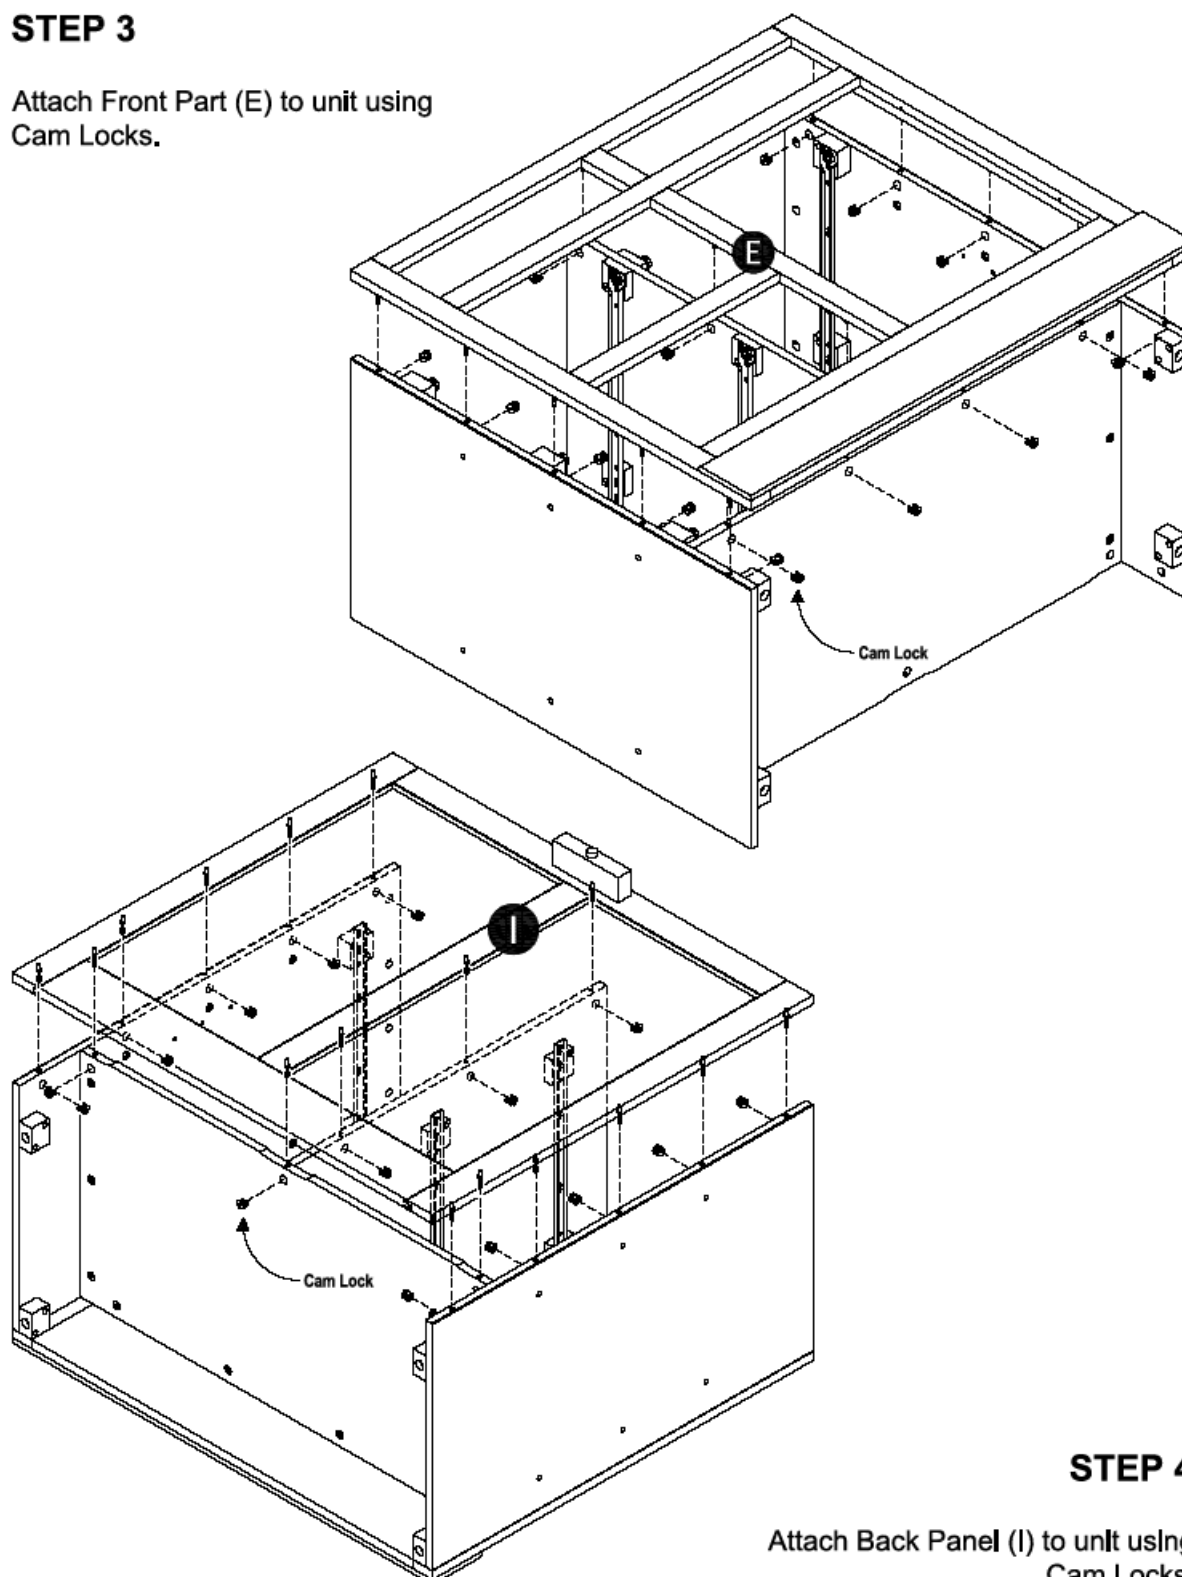

STEP 4

Attach Back Panel (I) to unit using Cam Locks.

Assembly Instructions 4/10

STEP 5

Attach Frame Leg (L) and (M) to unit using Head Cap Bolts.

Tighten Head Cap bolts using Hex Wrench.
(see Figure 2)



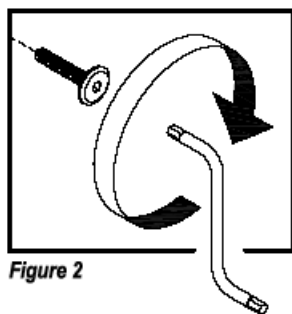


Figure 2

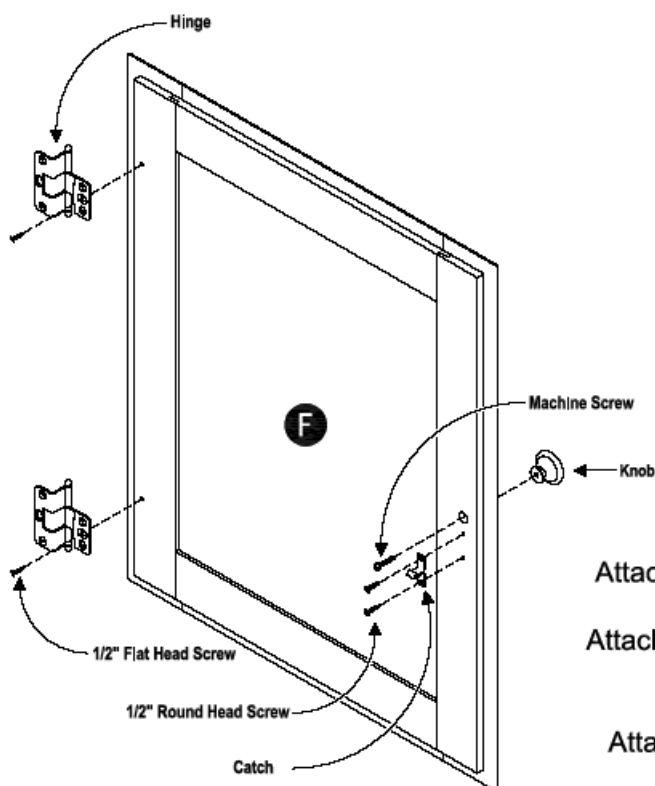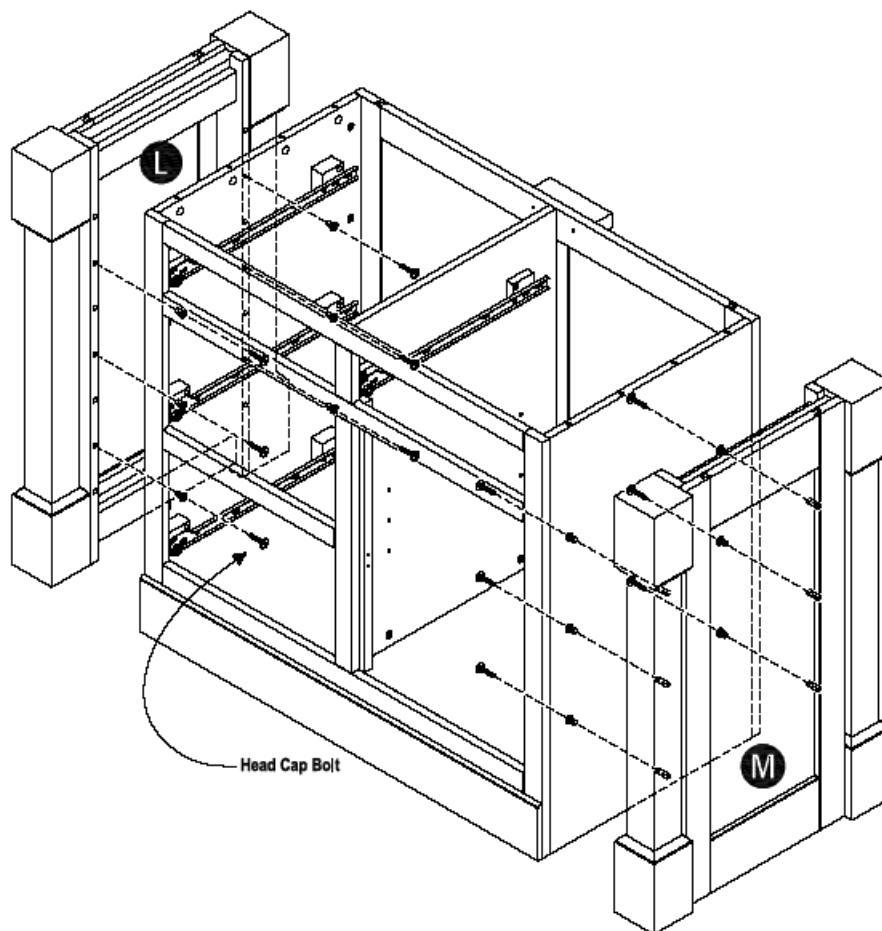

STEP 6


Attach Knob to Door (F) using Machine Screws.

Attach Catch to Door (F) using 1/2" Round Head Screws.

Attach Hinges to Door (F) using 1/2" Flat Head Screws Into the oval hole of Hinge.

Assembly Instructions 5/10

STEP 7

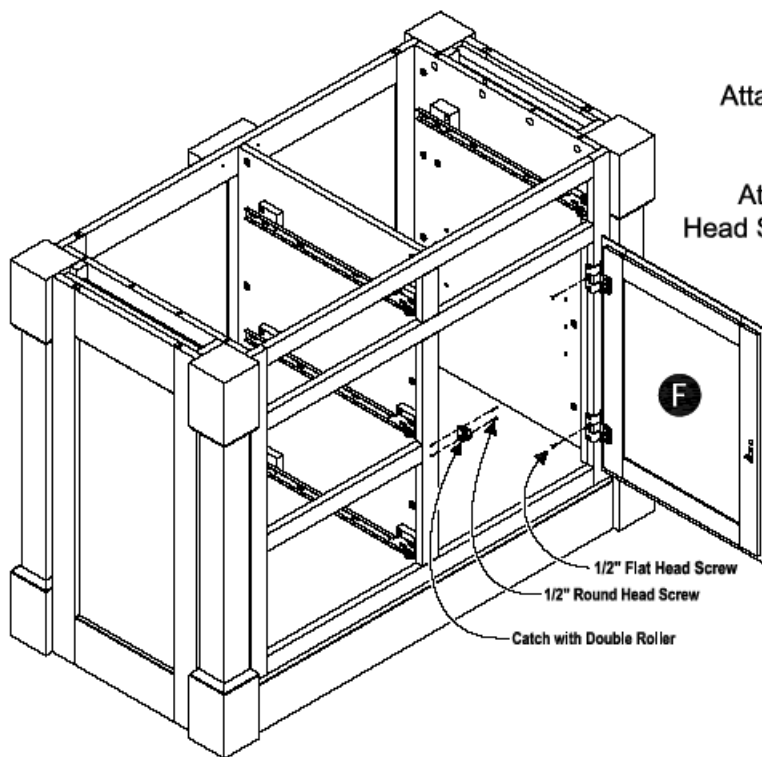

Attach Catch with Double Roller to unit using 1/2" Round Head Screws.

Attach Door (F) to unit using 1/2" Flat Head Screws into the oval hole of Hinges.

Use the oval hole of Hinges at the Door to adjust the Door left and right. (see Figure 3)

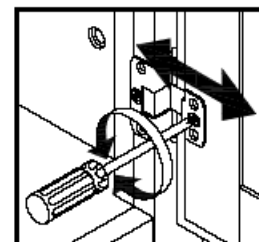


Figure 3

Use the oval hole of Hinges at the unit to adjust the Door up and down. (see Figure 4)

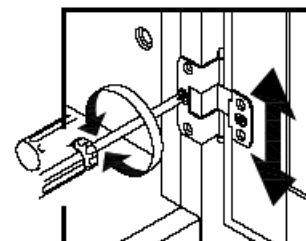


Figure 4

After adjustment, attach door using 1/2" Flat Head Screws through round holes of Hinges. (see Figure 5)


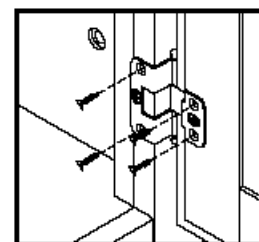


Figure 5

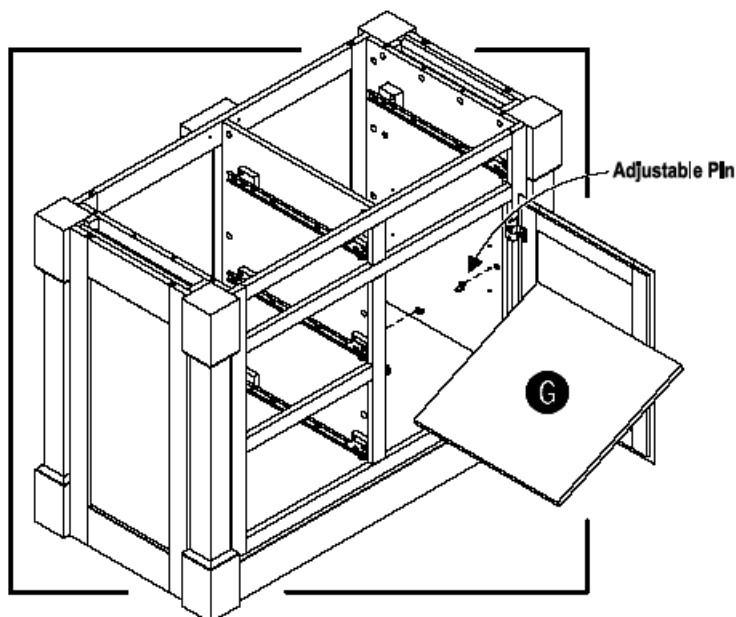



STEP 8

Insert Adjustable Pins into side panels and middle panel at the desired level. Slide Shelf (G) into position.

Assembly Instructions 6/10

STEP 9

Insert Cam Lock Screws Into the pre-drilled holes of Top Unit (A).

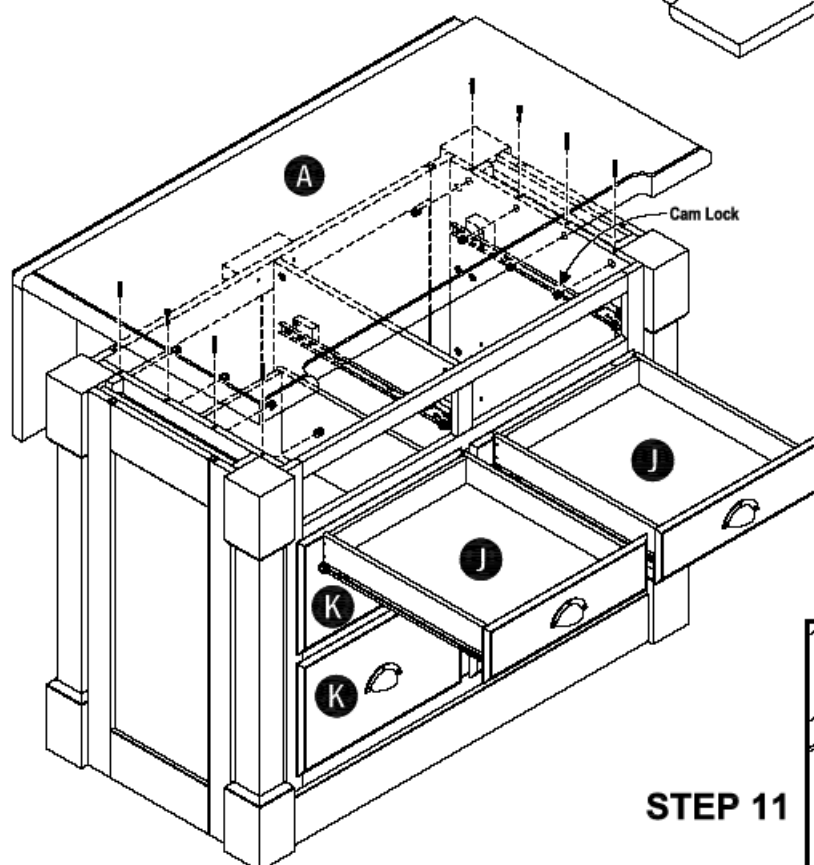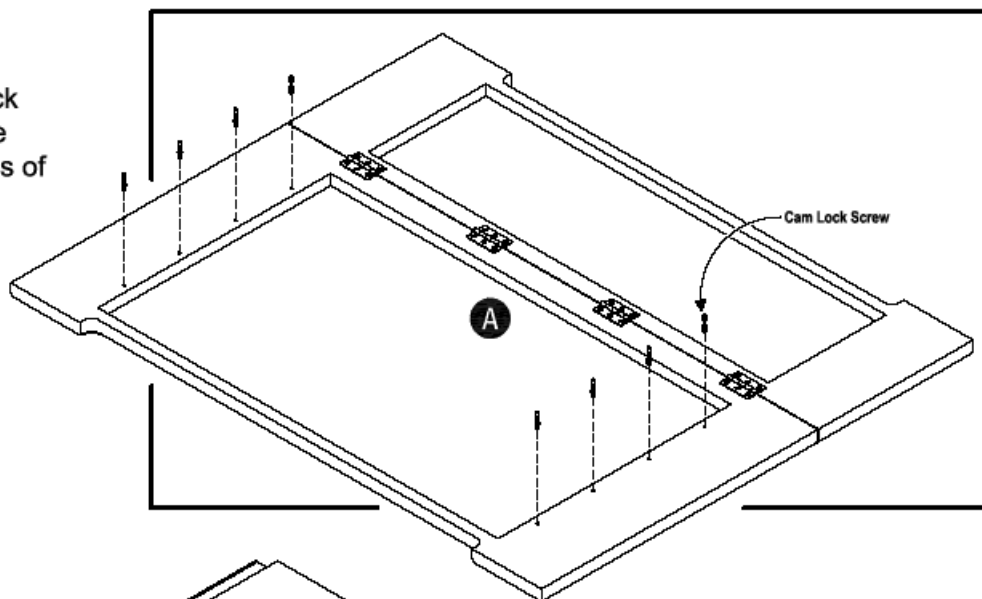


STEP 10

Place Top (A) onto the unit, using Cam Locks.

Slide Drawers (J) and (K) Into place.


STEP 11

To level the unit, adjust the adjustable levelers on the bottom.
Note: Unit must be level to work properly.

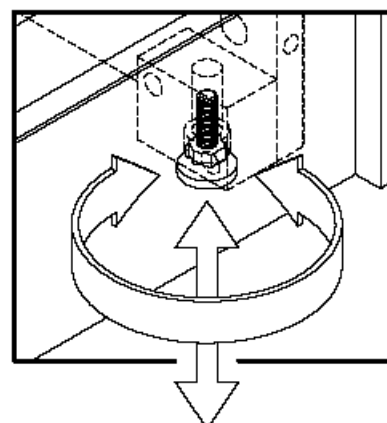

Assembly Instructions 7/10

STEP 12

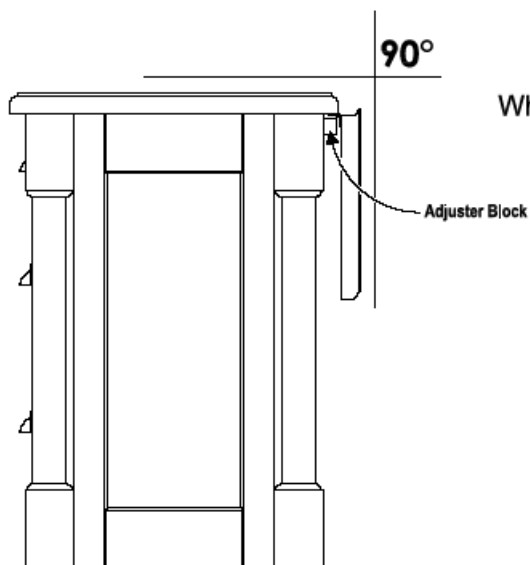

When Leaf Top is down, it should be oriented vertically.

If it is not vertical and adjustment is desired, turn the adjuster on the adjuster block on Back Panel (I). (see Figure 6)



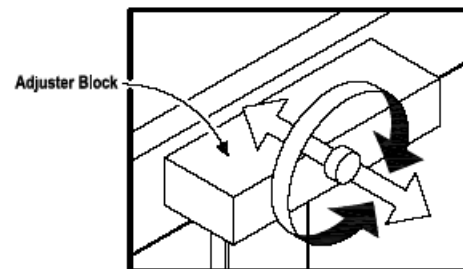


Figure 6

TOP EXTENSION INSTRUCTIONS

STEP 1

Lift up the Leaf Top.

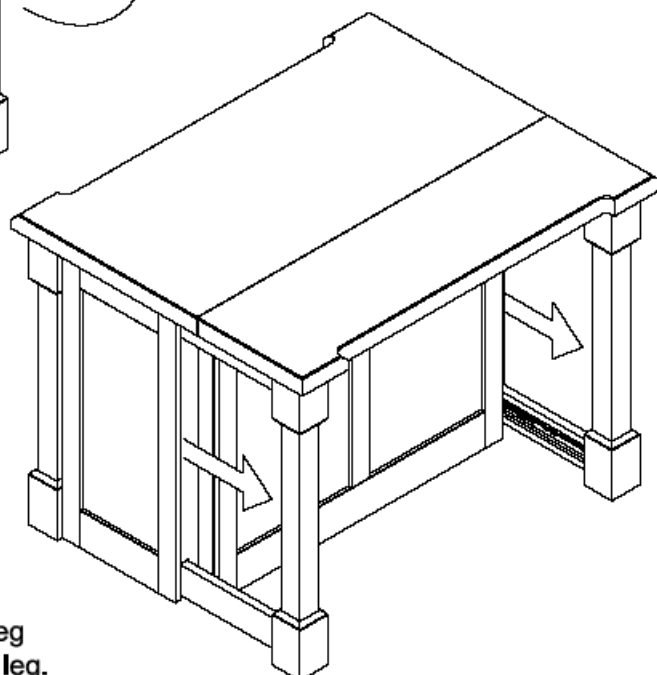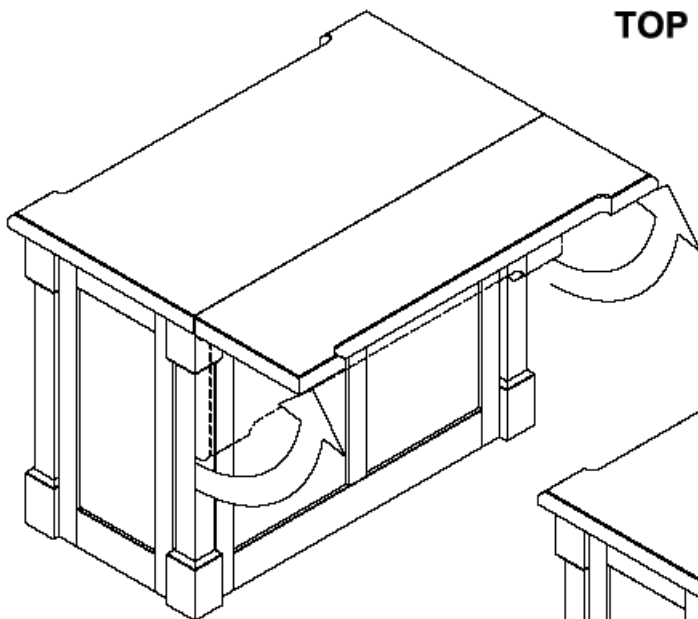


STEP 2

Holding the Leaf Top up, pull out a back leg from the unit; then pull out the other back leg.

Assembly Instructions 8/10

Drawer (J)

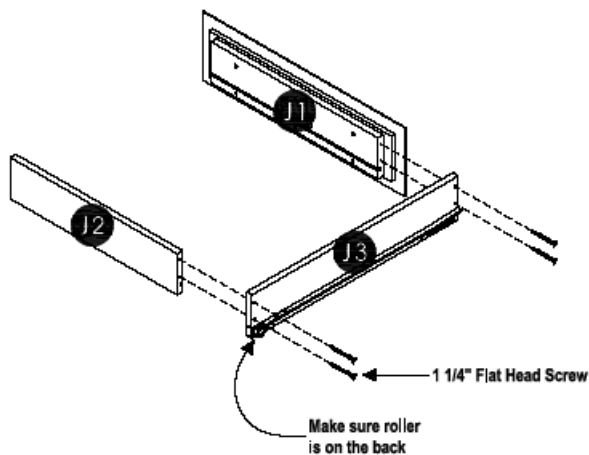



STEP 1

Attach Side Part (J3) to Front Part (J1) and Back Part (J2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

STEP 2

Insert Base Part (J5) into the groove.






Attach Side Part (J4) to Front Part (J1) and Back Part (J2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

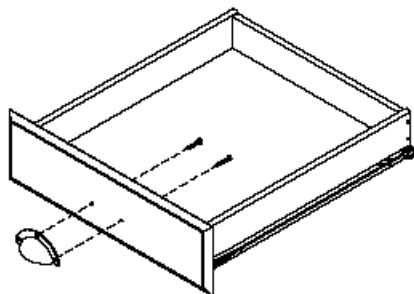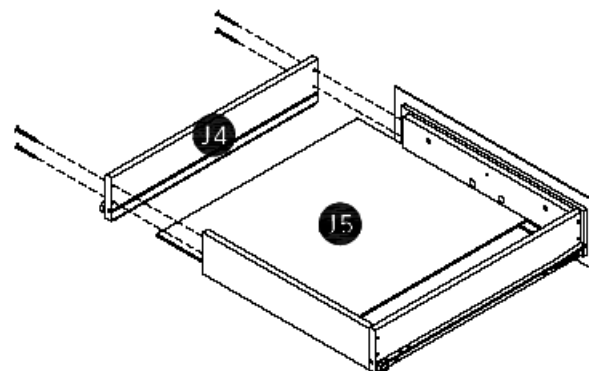

STEP 3


Attach Handles with Machine Screws.

Part List

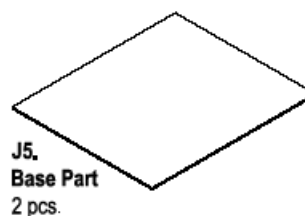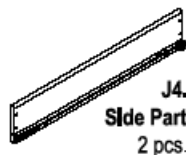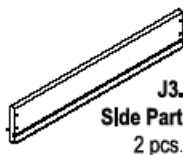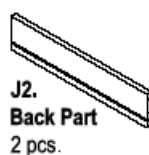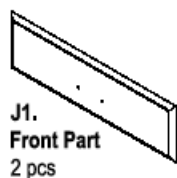

Assembly Instructions 9/10

Drawer (K)

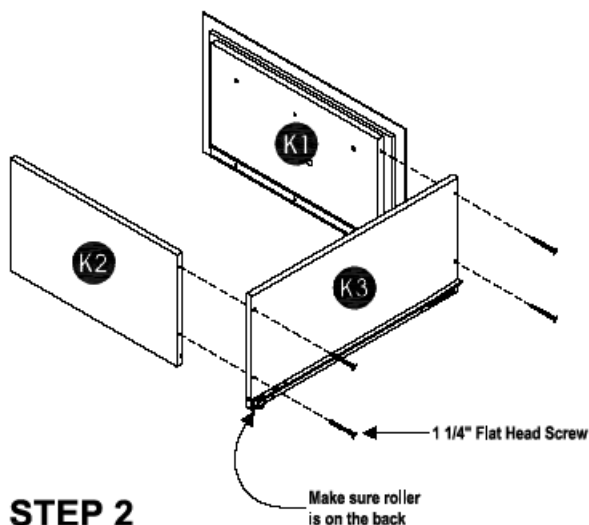


STEP 1

Attach Side Part (K3) to Front Part (K1) and Back Part (K2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

STEP 2


Insert Base Part (J5) into the groove.

Attach Side Part (K4) to Front Part (K1) and Back Part (K2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.





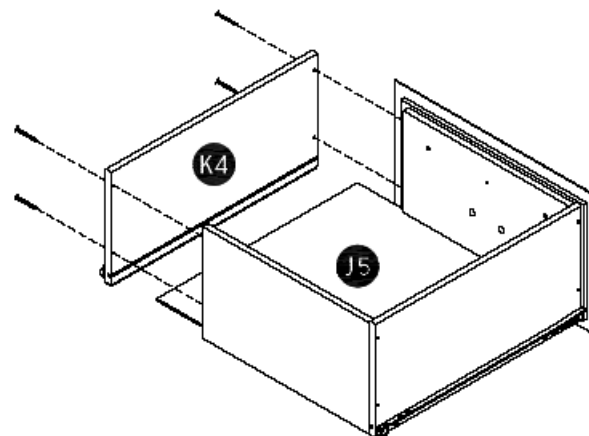


STEP 3


Attach Handles with Machine Screws.

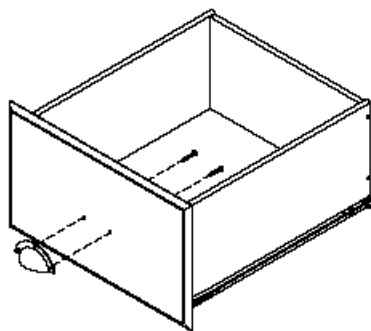

Part List

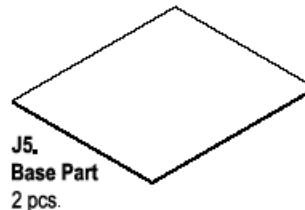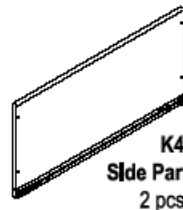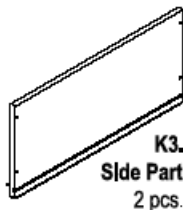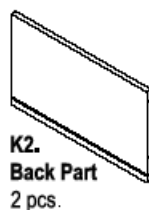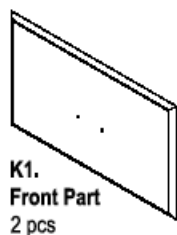



Assembly Instructions 10/10

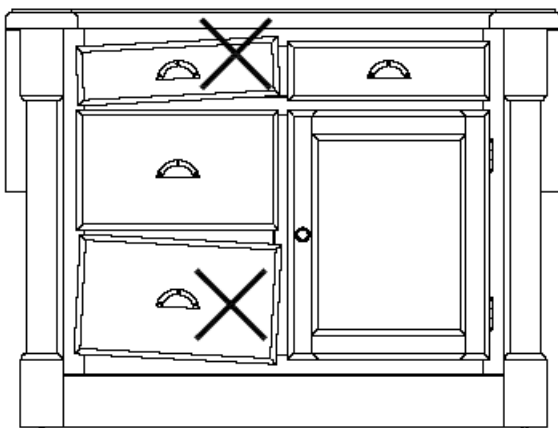

I. IF A DRAWER DOES NOT ALIGN


STEP 1

Loosen slightly the upper screws.

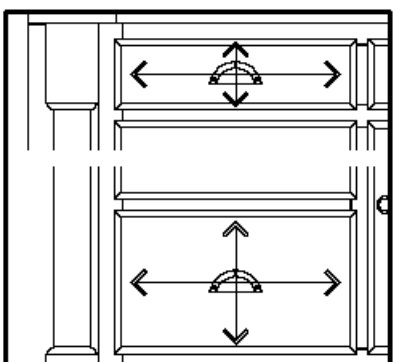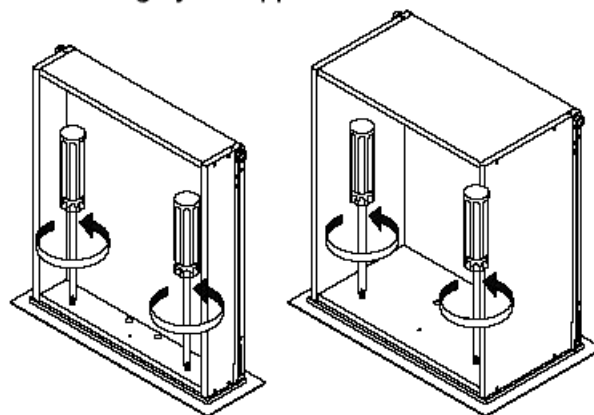


STEP 2

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

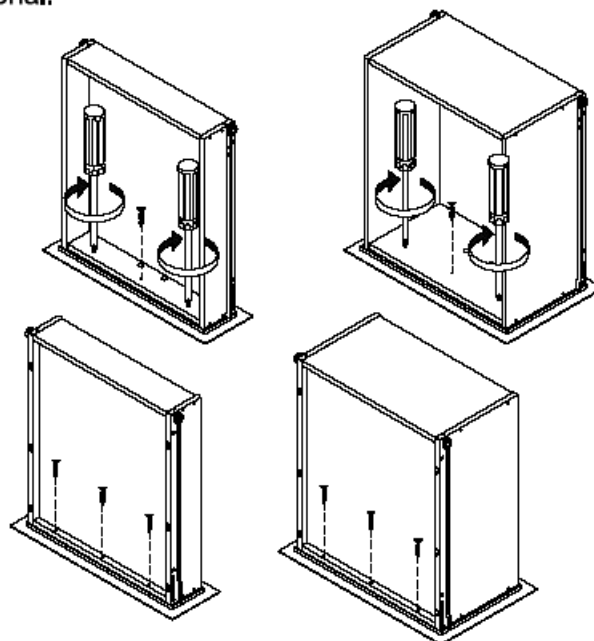

II. IF A DRAWER ALREADY ALIGNS

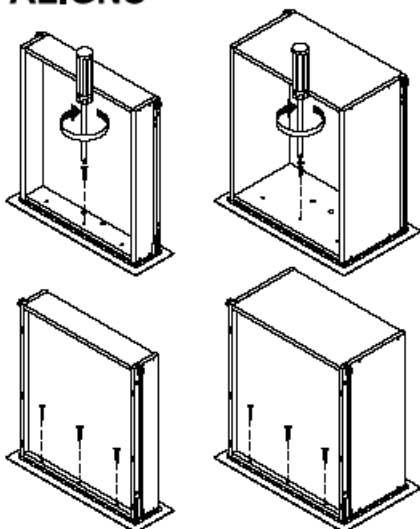

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

STEP 3

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

