


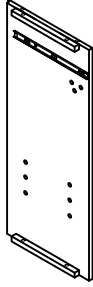
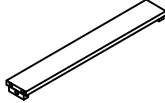
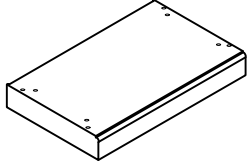
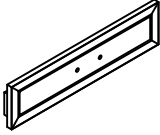



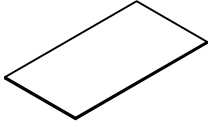
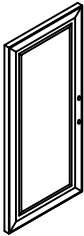
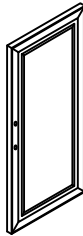
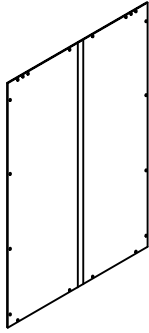
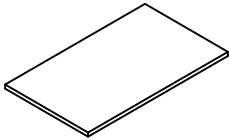


CROSLEY
FURNITURE

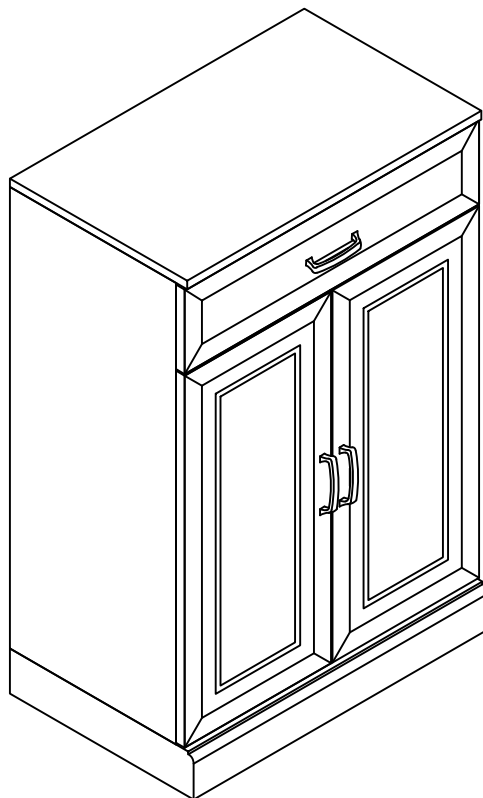


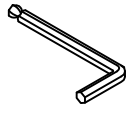

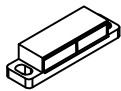

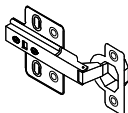


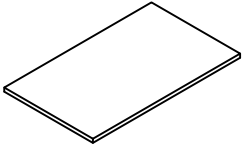





Storage Cabinet
CF3121



PART LIST


<div data-bbox="113 181 156 230">A</div> 	<div data-bbox="389 181 432 230">B</div> 	<div data-bbox="665 181 708 230">C</div> 	<div data-bbox="941 181 984 230">D</div> 	<div data-bbox="1217 181 1260 230">E</div> 
<div data-bbox="164 582 323 622">Top Panel</div> <div data-bbox="204 660 284 701">1 PC</div>	<div data-bbox="435 582 595 622">Left Panel</div> <div data-bbox="475 660 555 701">1 PC</div>	<div data-bbox="707 582 888 622">Right Panel</div> <div data-bbox="746 660 826 701">1 PC</div>	<div data-bbox="984 582 1150 622">Cross Rail</div> <div data-bbox="1024 660 1104 701">1 PC</div>	<div data-bbox="1249 582 1460 622">Bottom Panel</div> <div data-bbox="1297 660 1377 701">1 PC</div>
<div data-bbox="113 701 156 750">F</div> 	<div data-bbox="389 701 432 750">G</div> 	<div data-bbox="665 701 708 750">H</div> 	<div data-bbox="941 701 984 750">I</div> 	<div data-bbox="1217 701 1260 750">J</div> 
<div data-bbox="140 1104 347 1223">Drawer Front Panel 1 PC</div>	<div data-bbox="379 1104 655 1223">Drawer Left Panel 1 PC</div>	<div data-bbox="699 1104 901 1223">Drawer Right Panel 1 PC</div>	<div data-bbox="970 1104 1173 1223">Drawer Back Panel 1 PC</div>	<div data-bbox="1236 1104 1465 1223">Drawer Bottom Panel 1 PC</div>
<div data-bbox="113 1223 156 1272">K</div> 	<div data-bbox="389 1223 432 1272">L</div> 	<div data-bbox="665 1223 708 1272">M</div> 	<div data-bbox="941 1223 984 1272">N</div> 	
<div data-bbox="116 1628 359 1744">Left Door Panel 1 PC</div>	<div data-bbox="387 1628 651 1744">Right Door Panel 1 PC</div>	<div data-bbox="707 1628 885 1744">Back Panel 1 PC</div>	<div data-bbox="946 1628 1197 1744">Adjustable Shelf 1 PC</div>	

HARDWARE LIST
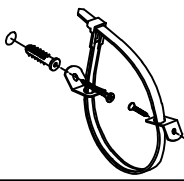
#1  Ø1/4"*25mm Bolt 10 PCS (Extra 1)	#2  Ø1/4"*11mm Spring Washer 10 PCS (Extra 1)	#3  Ø1/4"*13mm Flat Washer 10 PCS (Extra 1)	#4  4mm*90 Allen Wrench 1 PC	#5  Ø8*30mm Wood Dowel 12 PCS (Extra 1)
#6  Magnet 1 PC	#7  6*3*15mm Round Head Screw 2 PCS (Extra 1)	#8  Door Hinge 4 PCS	#9  7*3.5*15mm Screw 24 PCS (Extra 1)	#10  Handle 3 PCS
#11  5/32"*19mm Long Round Head Bolt 4 PCS (Extra 1)	#12  5/32"*15mm Short Round Head Bolt 2 PCS (Extra 1)	#13  Shelf Holder 4 PCS (Extra 1)	#14  8*3*15mm Short Screw 16 PCS (Extra 1)	#15  Safety Strap Kit 1 SET
#16  8*4*25 Long Screw 8 PCS (Extra 1)				

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.







Phillips Head Screwdriver

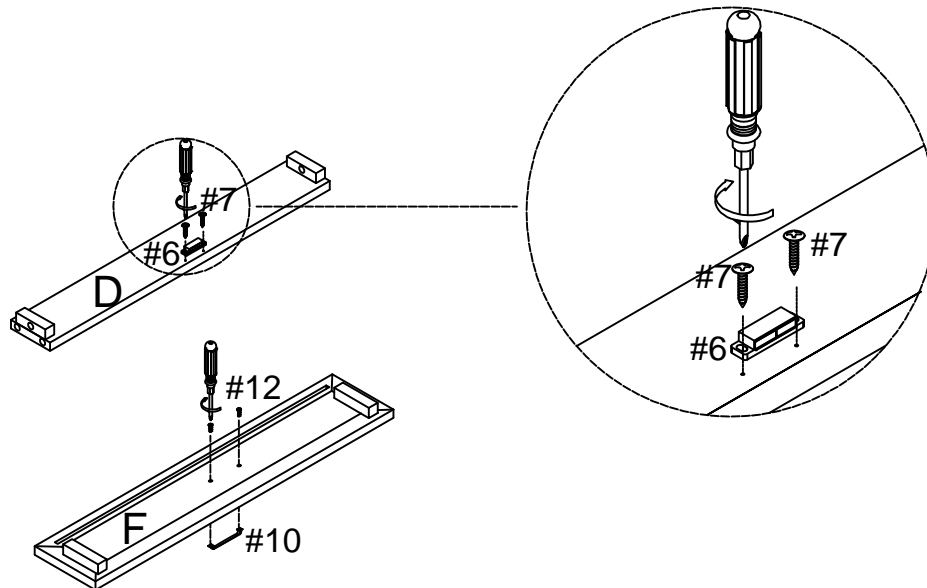
Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.




Step 1. Attach magnet (part #6) to cross rail (part D) using round head screws (part #7) and phillips head screwdriver. Attach handle (part #10) to drawer front panel (part F) using short round head bolts (part #12) and phillips head screwdriver.




- #6  x 1
- #7  x 2
- #10  x 1
- #12  x 2

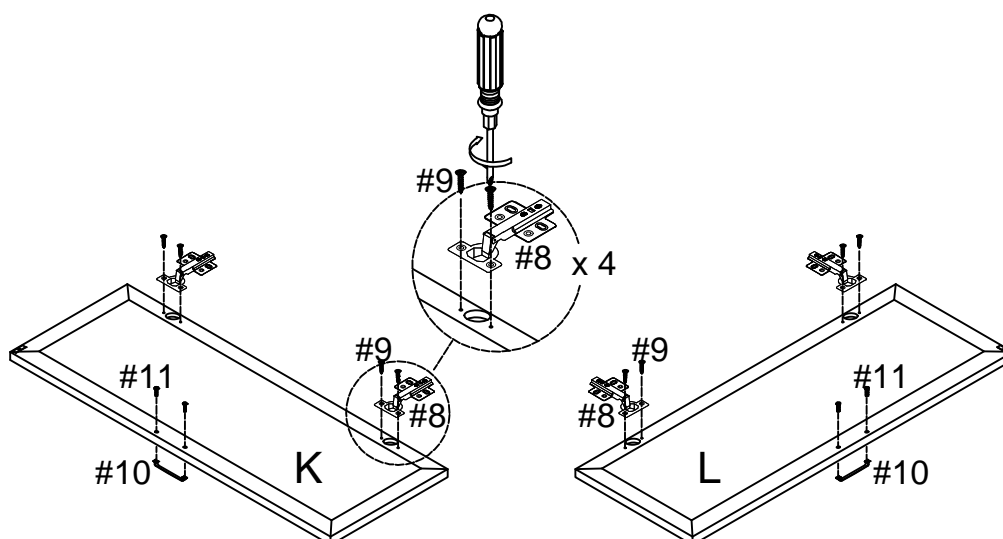Step 2. Attach door hinges (part #8) to left door panel (part K) and right door panel (part L) using screws (part #9) and phillips head screwdriver. Attach handles (part #10) to left door panel (part K) and right door panel (part L) using long round head bolts (part #11) and phillips head screwdriver.




- #8  x 4
- #9  x 8
- #10  x 2
- #11  x 4


Step 3. Attach drawer panels (parts G & H) to drawer front panel (part F) using long screws (part #16) and phillips head screwdriver. Slide drawer bottom panel (part J) into the grooves of assembled unit (parts F, G & H). Attach drawer back panel (part I) to assembled unit (parts G, H & J) using long screws (part #16) and phillips head screwdriver.

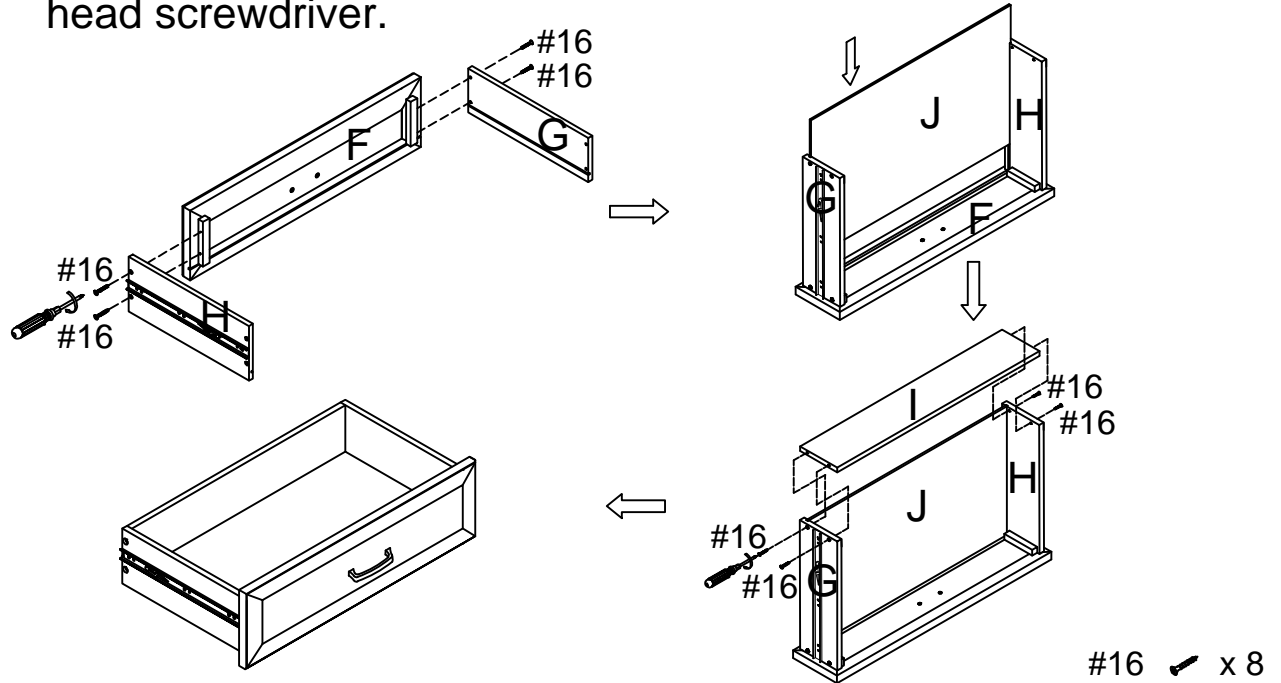


Step 4. Attach cross rail (part D) to left panel (part B) and right panel (part C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

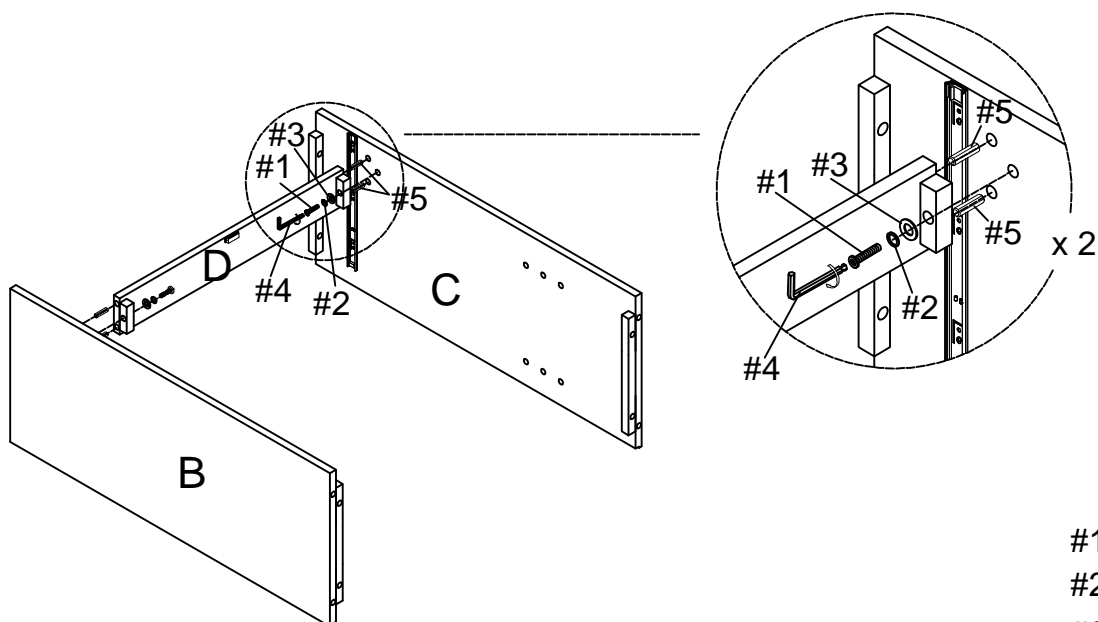


Step 5. Attach top panel (part A) to assembled unit (parts B & C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

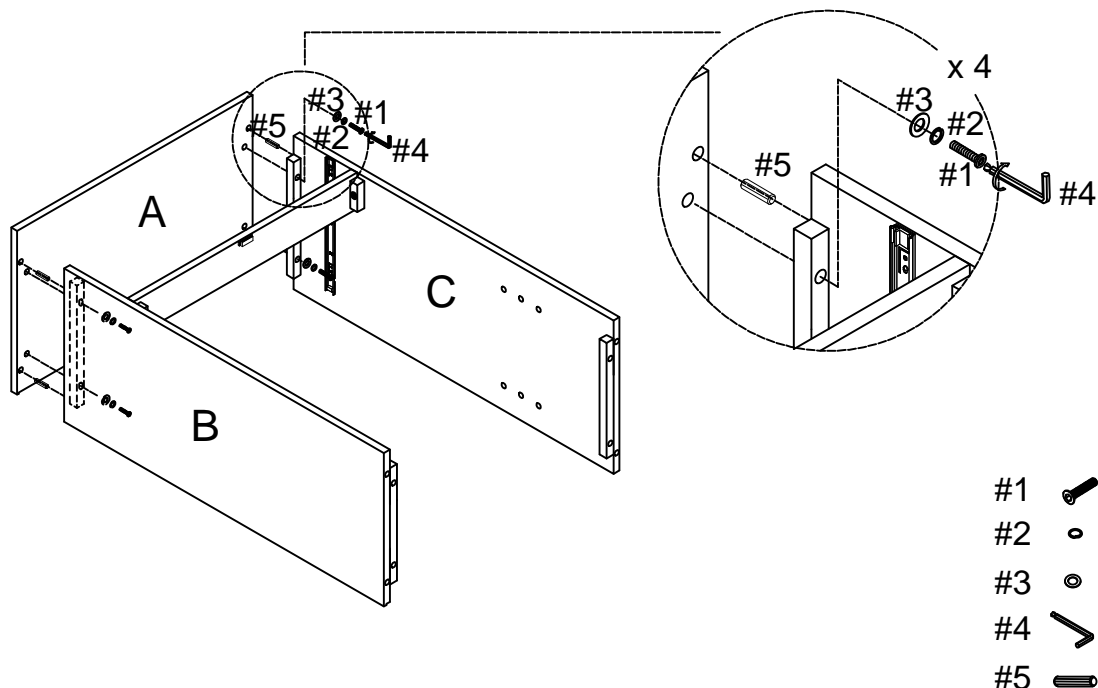

Step 6. Attach bottom panel (part E) to assembled unit (parts B & C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

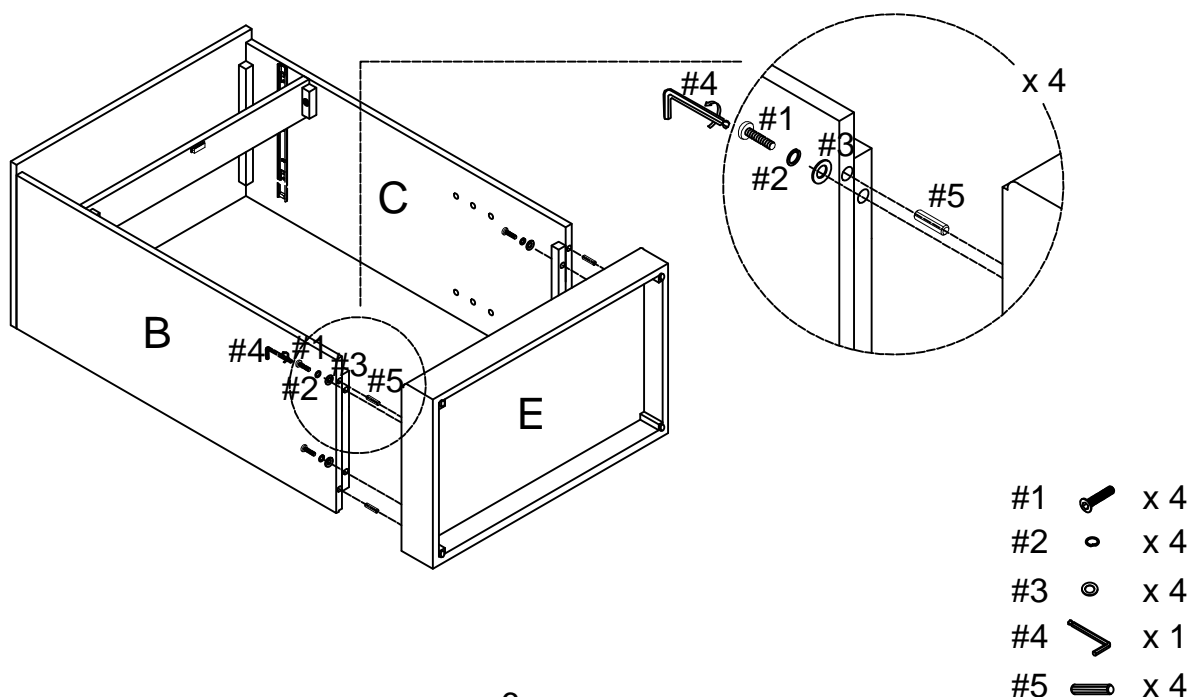


Step 7. Carefully turn unit upright. Attach back panel (part M) to assembled unit (parts A, B, C & E) using short screws (part #14) and phillips head screwdriver.

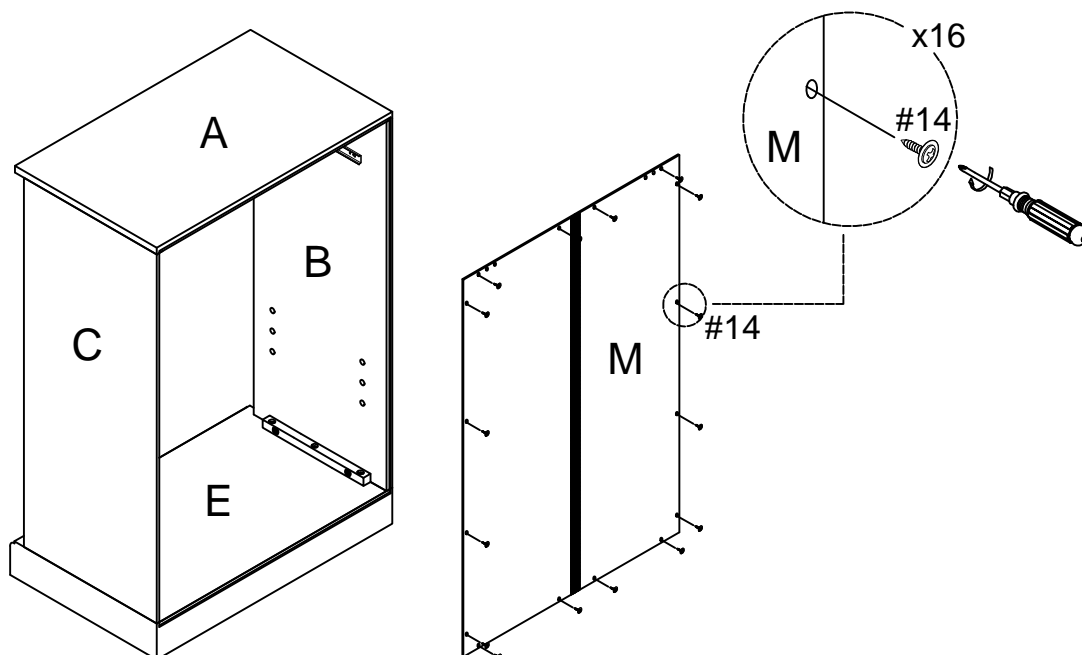

#14  x 16

Step 8. Place shelf holders (part #13) into desired position and slide adjustable shelf (part N) and assembled drawer into place.

Move the sliders to the front end of rail before sliding the drawer into place.

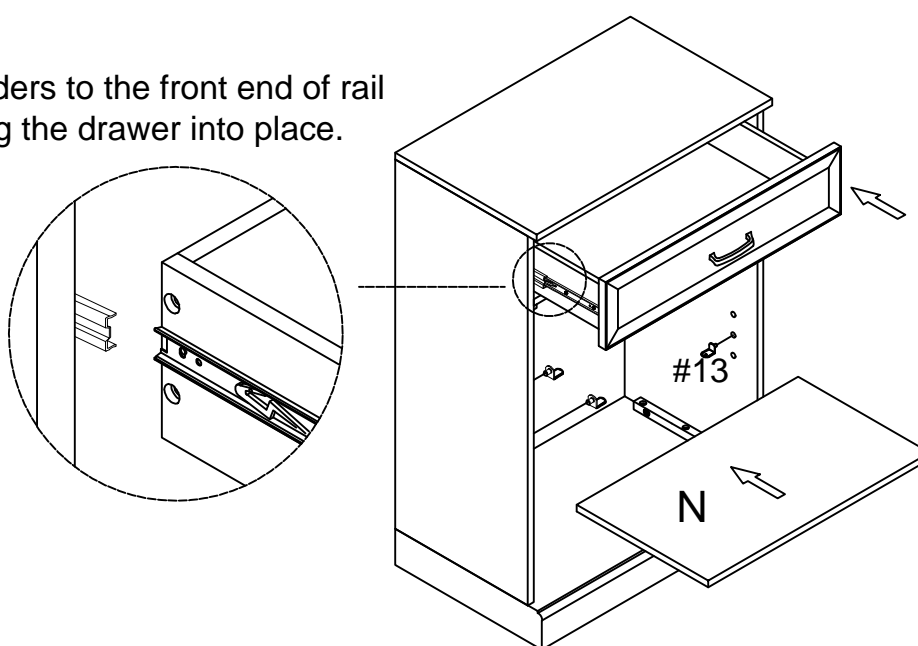








#13  x 4

Step 9. Attach door panels (parts K & L) to panels (parts B & C) using screws (part #9) and phillips head screwdriver.

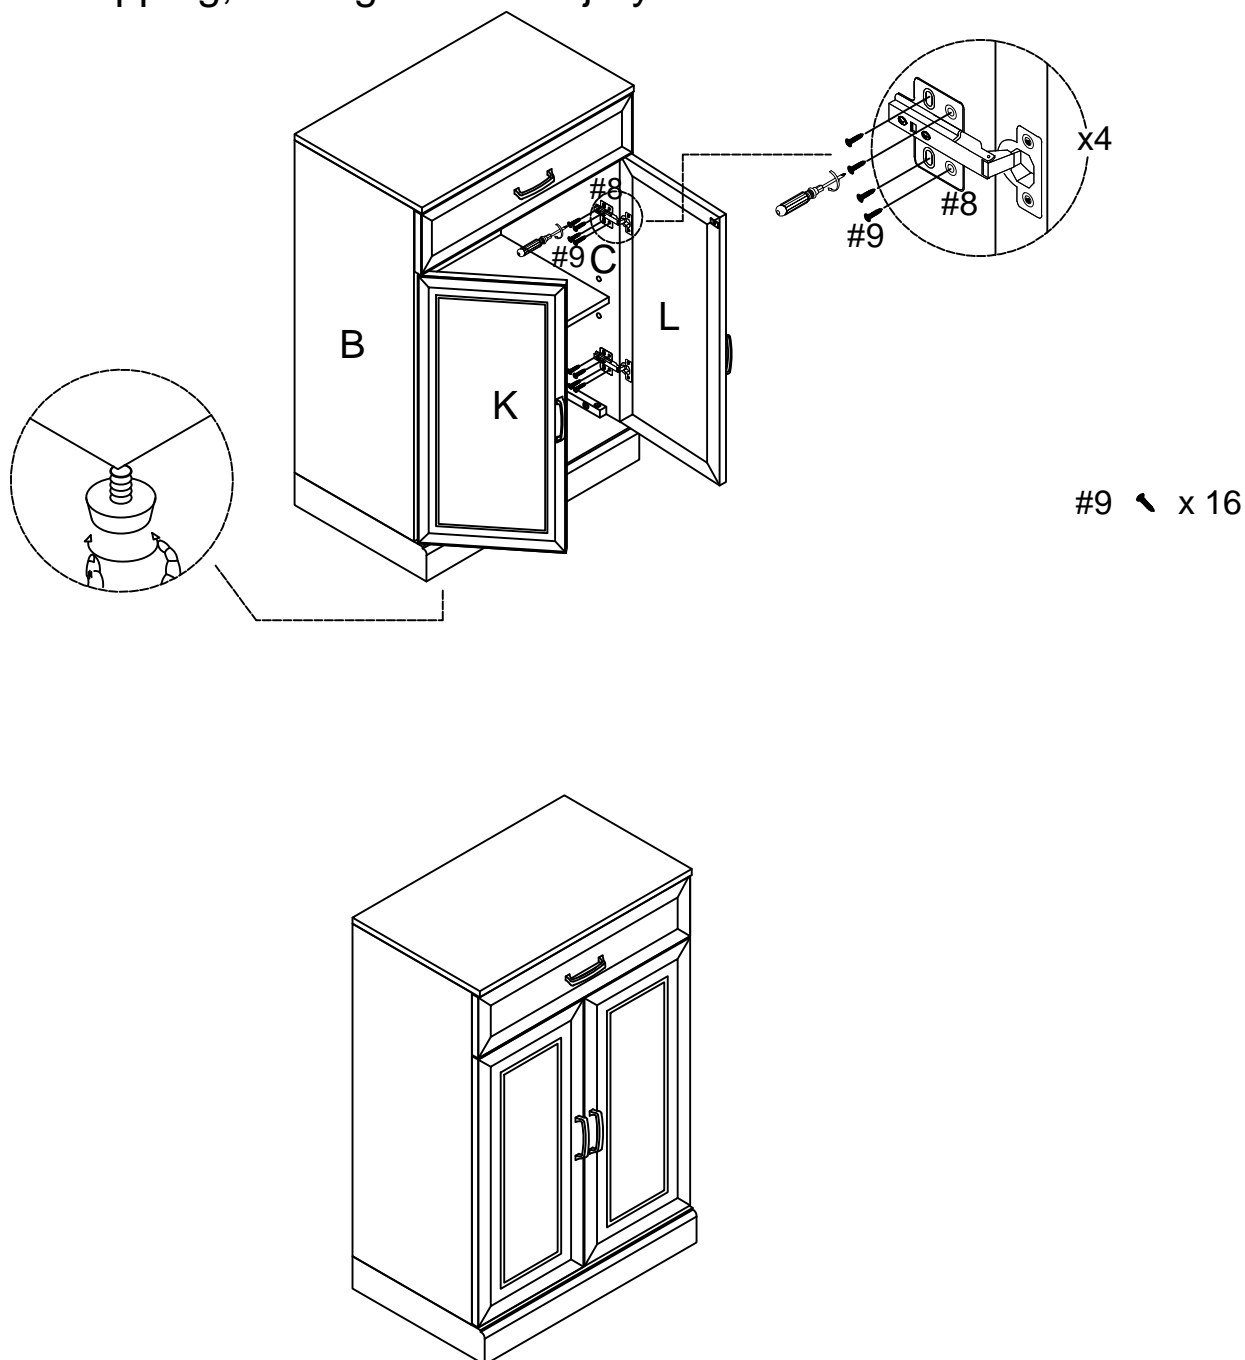NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

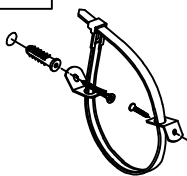Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.




#15	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC



SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

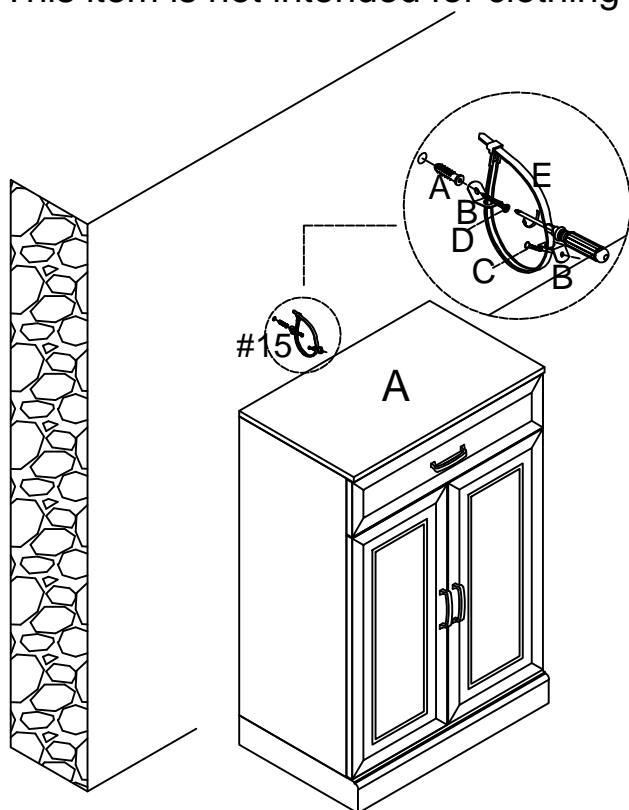Note: This item is not intended for clothing storage use.




⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover:
	<ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
This is a permanent label. Do not remove!	

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door.

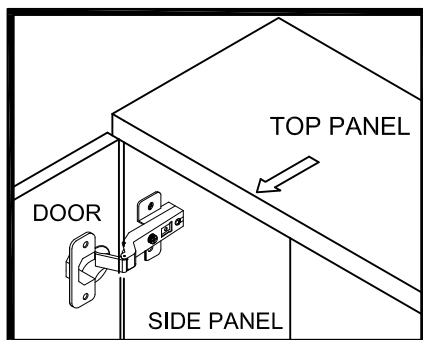


STEP 2

Adjust the gap between door panel and side panel

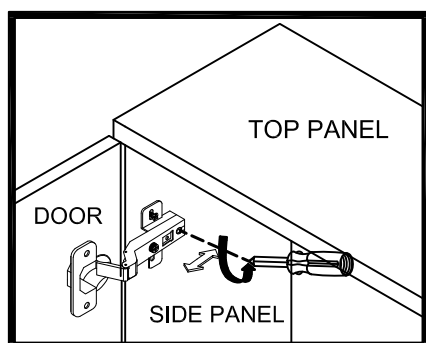


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

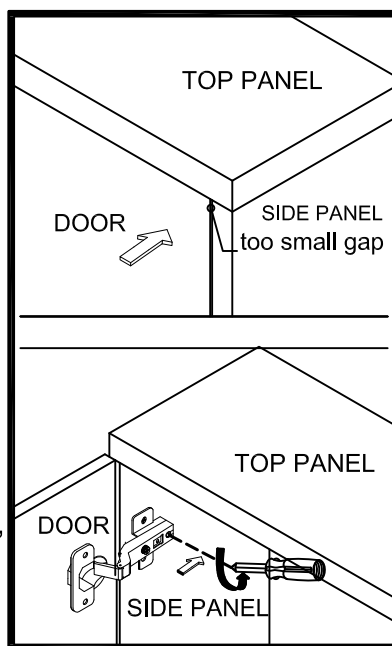

Push the hinge back a little.


STEP 2b MOVE DOOR OUT

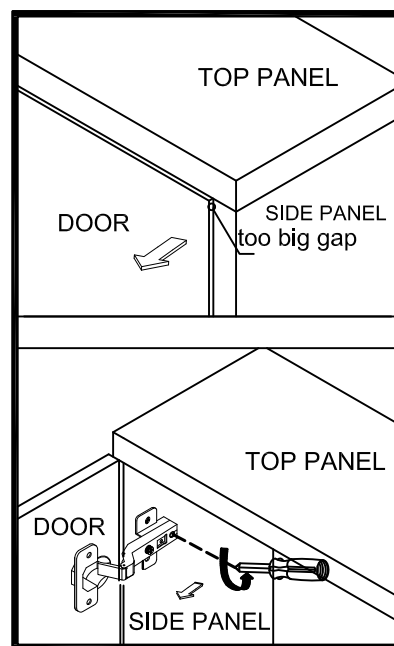

Pull the hinge forward a little.


STEP 3

To adjust the gap between two door

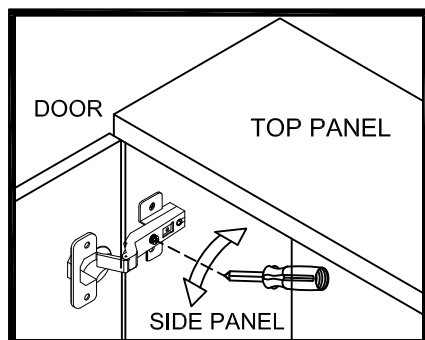


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

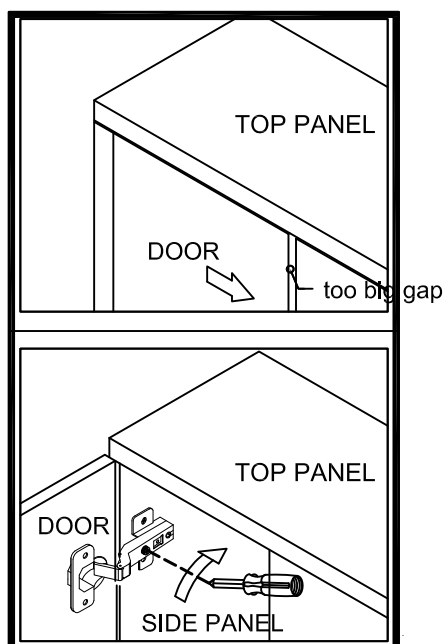

Turn the screw clockwise a little as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

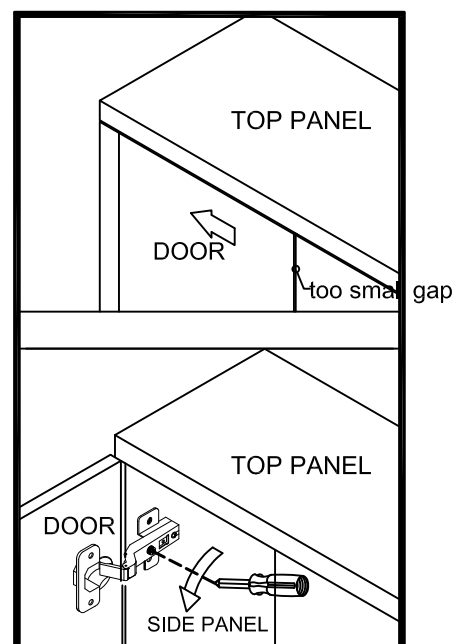

Turn the screw counterclockwise a little as shown to make the gap big.