
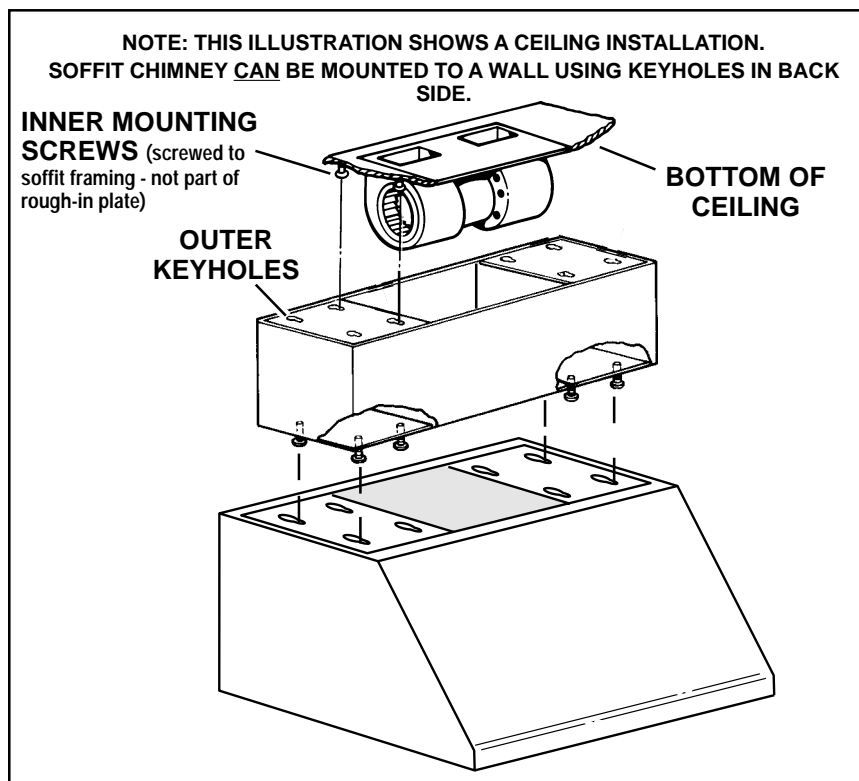


SOFFIT CHIMNEY INSTALLATION INSTRUCTIONS

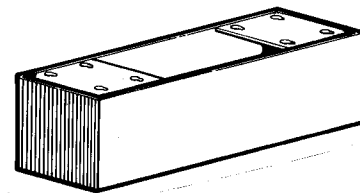

This Soffit Chimney takes the place of a soffit in vertically ducted or horizontally ducted installations.

1. Inspect the installation location.

Make sure the following items have been accomplished according to the instructions packed with the hood:

- ☒ The ceiling or wall has been properly framed and wall material finished.
- ☒ The rough-in plate has been installed (including ductwork & electrical wiring).
- ☒ The blower is securely attached to rough-in plate.
- ☒ The four (4) inner mounting screws are driven partially into framing.

2. Secure soffit chimney to ceiling or wall.

Lift soffit chimney into position and hang it from the four (4) inner mounting screws. Make sure screws are engaged in small end of keyholes and soffit chimney is against the wall. Tighten screws securely.

Drive four (4) additional mounting screws (packed with hood) through the small end of outer keyholes, through the ceiling or wall material, and into the framing.

NOTE

BECAUSE OF THE WEIGHT OF THE HOOD - MAKE SURE THAT THE OUTER MOUNTING SCREWS ARE DRIVEN INTO THE SOFFIT FRAMING AND NOT JUST THE WALL MATERIAL.

CAUTION

MAKE SURE THE HOOD MOUNTING SCREWS ARE ENGAGED HALFWAY INTO THE BOTTOM OF THE SOFFIT CHIMNEY BEFORE LIFTING THE HOOD INTO POSITION.

3. Attach hood to soffit chimney.

Lift hood into position and hang it from the eight (8) mounting screws in the bottom of the soffit chimney. Make sure screws are engaged in small end of keyholes and hood is against the wall. Tighten screws securely.

4. Refer to hood instructions.

Follow the steps in the hood instruction manual to finish the installation.

Begin with Step 3. under the "INSTALL HOOD" section on Page 9.

Warranty

This product is covered by the range hood warranty.