


Imperial Ventilation ~ Baffle Filter Installation



1

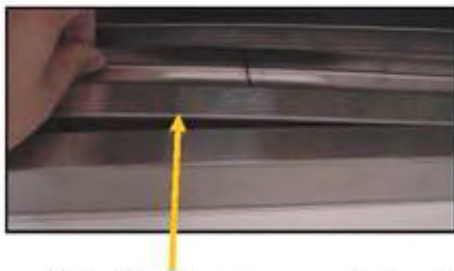

2 (Fits in slot towards back of unit)



3 (Fits at an angle above front panel light bar)



4



Completed Installation

INSTALLATION INSTRUCTIONS

1. **Parts:** 2 or 4 Baffle Filters (54" & 60" 4 Filters), 1 Grease Tray, 1 Center Panel
2. Insert Grease tray to the bottom/back of the hood. Grease tray slides in between steel strip.
3. Take one Baffle and insert the side without grease holes into the steel strips in the top/front of hood, **at an angle**, (**above light bar**) and push filter back into grease tray. Slide to one side. Take the other filter and repeat instructions and slide to opposite side.
4. Slide Center Panel between steel strips in the top/front and push back into grease tray. Handle should be to the front of the hood.