

5. Set up Mounting Brackets

- Turn countertop over and align sink with countertop. Decide location for mounting brackets.
- Mounting holes should be 1/2" from edge of sink.

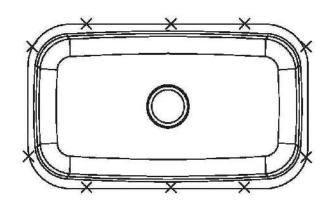


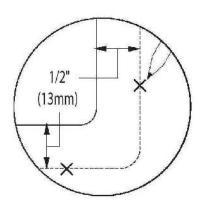

6. Drill Hole in Countertop


Drill 3/8" diameter x 1/2" deep hole in countertop.



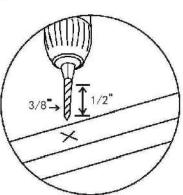


7. Install Anchors

Insert anchors into drilled holes and lightly tap with a hammer until flush.

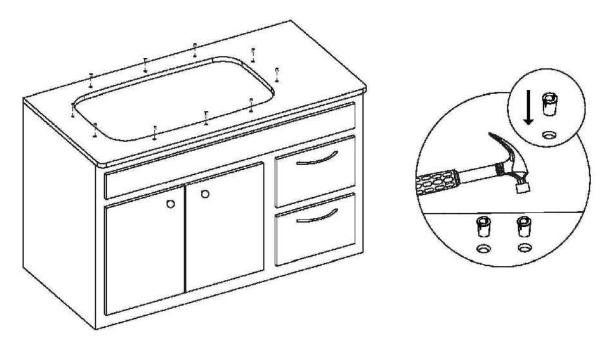

8. Secure Sink to Countertop

Use a bead of silicone (or preferred adhesive) around the rim of the sink.
Check the alignment of the sink to the cutout in the countertop. Place sink over cutout hole and press firmly.

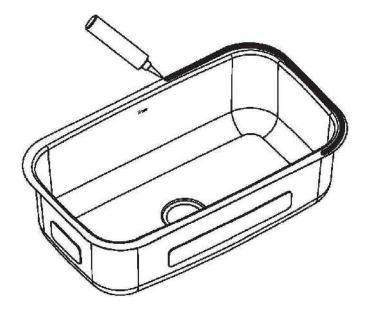




9. Attach Mounting Hardware

- Attach mounting hardware to secure bowl. Remove excess sealant from inside lip.
- Allow sealant to set for 30 60 minutes.

NOTE: Use acetone or rubbing alcohol to remove any excess sealant.

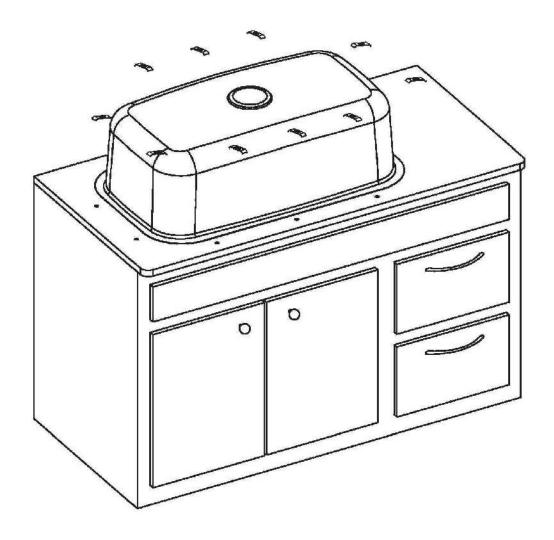



10. Install Plumbing Fixtures

- Connect drain to sink. Connect trap to drain. Connect water supply connections to faucet according to manufacturer's instructions.
- Run water into sink and check for leaks.




Maintenance

Clean your sink on a regular basis with warm soapy water. Rinse the sink after using cleaning products. Wipe the sink surface with a soft cloth to remove any liquid residue. Do not cut food directly on the surface of the sink. Do not leave sharp objects on the surface of the sink for an extended period of time. Do not use abrasive cleaning products, sanding tools, steel wool, or bleaching products



Kitchen Faucet Installation

Diagram and Parts List

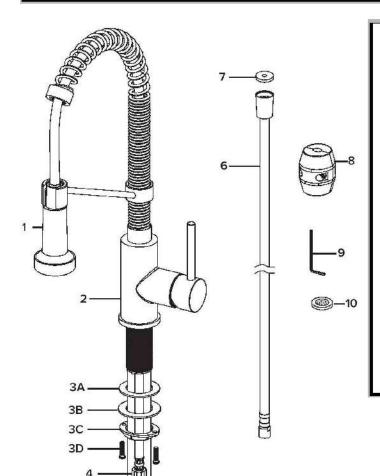


5A

- 1. Spray Head
- 2. Faucet Body
- 3. Mounting Hardware
 - A. Rubber Washer
 - B. Metal Washer
 - C. Mounting Nut
 - D. Mounting Screws
- 4. Supply Hose
- 5. Hot & Cold Waterlines
- 6. Hose
- 7. Washer
- 8. Weight
- 9. Hex Wrench
- 10. Washer (2.2GPM)

Please note: This faucet is designed with a 1.8 gpm flow rate in compliance with CEC standards. To adjust the flow rate to 2.2 gpm, replace the washer (7) with the 2.2 gpm washer provided in package. Work with your local jurisdiction to make sure you are in compliance prior to and modification. All modifications are done so at the end users discretion, Kraus is not liable for any indiscretions that may occur which lead to non-compliance.

Faucet Installation Procedure

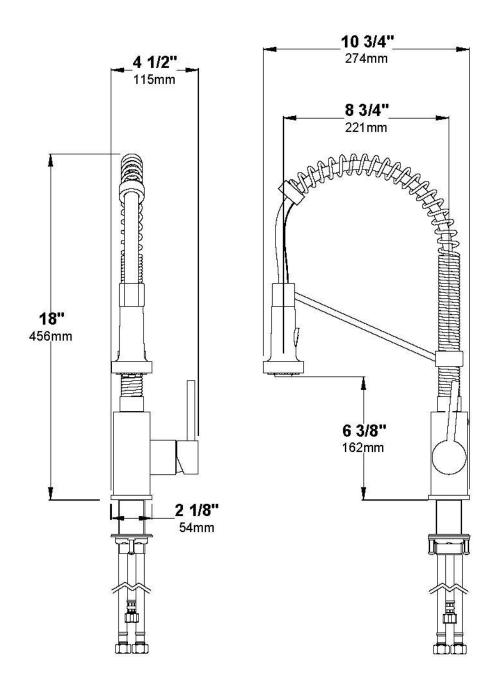


Installer Tip

Shut off main water supply before installing new faucet




1. Remove mounting hardware

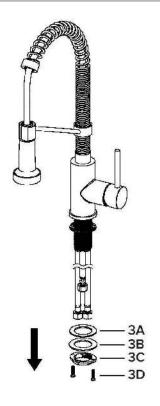

• Remove the mounting screws (3D), mounting nut (3C), metal (3B) and rubber washer (3A) from the mounting pipe.


2. Install faucet mounting hardware

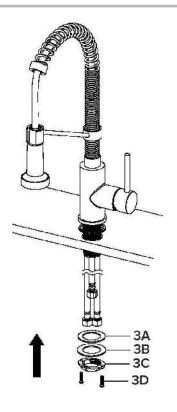

 Insert faucet body (2) into hole in countertop. Install mounting hardware (3A, B, C & D) from underneath the countertop.




3. Secure mounting hardware

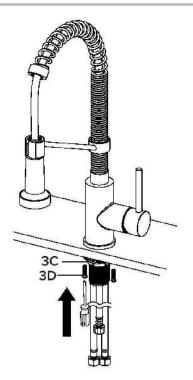


 Adjust direction of faucet body (2) so that the handle is on the right side of the faucet. Tighten mounting nut (3C) until snug. Tighten mounting screws (3D) with Phillips screwdriver until snug.

4. Attach spray hose and counterweight

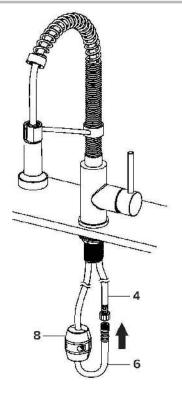


 Connect spray hose (6) to supply hose (4). Install weight (8) on lowest vertical point on spray hose (6).

5. Connect waterlines

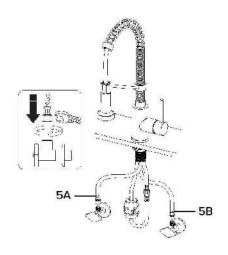

 Connect waterlines (5A&B) to angle stops. Tighten both ends of waterlines with a wrench until snug. Turn on hot and cold angle stops and check for leaks.


6. Flush spray hose

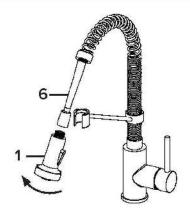

Remove spray head (1) from spray hose (6). Hold tip of spray hose
(6). Turn faucet on and let the water run for 60 seconds to flush any debris.

NOTE: Please make sure washer (7) is installed attaching spray head to hose


7. Check for leaks

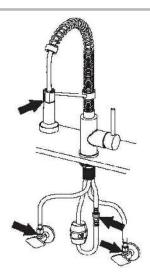

. Check for leaks at the connections. Retighten if necessary.



Replacement Parts

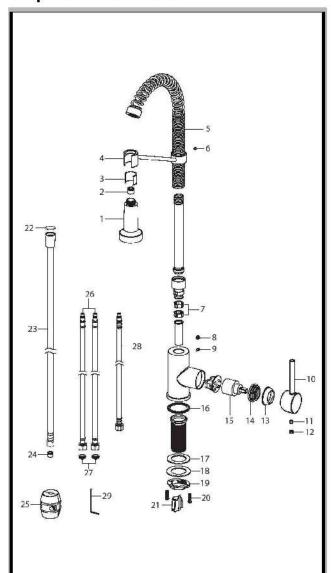

- 1. Spray Head
- 2. Check Valve
- 3. Hose Guide
- 4. Sprayer Holder
- 5. Spring
- 6. Set Screw
- 7. Sleeve
- 3. Cap
- 9. Set Screw
- 10. Handle
- 11. Handle Set Screw
- 12. Handle Button
- 13. Cartridge Cover
- 14. Locking Nut
- 15. Cartridge
- 16. Base O-Ring
- 17. Rubber Washer
- 18. Metal Washer
- 19. Mounting Nut
- 20. Mounting Screws
- 21. Protective Sleeve
- 22. Washer
- 23. Hose
- 24. Check Valve
- 25. Weight
- 26. Hot & Cold Waterlines
- 27. Filter Washer
- 28. Supply Hose
- 29. Hex Wrench

Care & Maintenance

- * To keep the product clean & shining, follow the steps below:
- 1. Rinse with clean water & dry with a soft cloth
- 2. Do not clean with soaps, acid, polish, abrasives or harsh cleaners
- 3. Do not use cloth with a coarse surface
- 4. Unscrew the aerator and clean when necessary
- * This installation manual is subject to change without further notice.



