



# Lydia Bathroom Wall Cabinet CF7004



## **PART LIST**

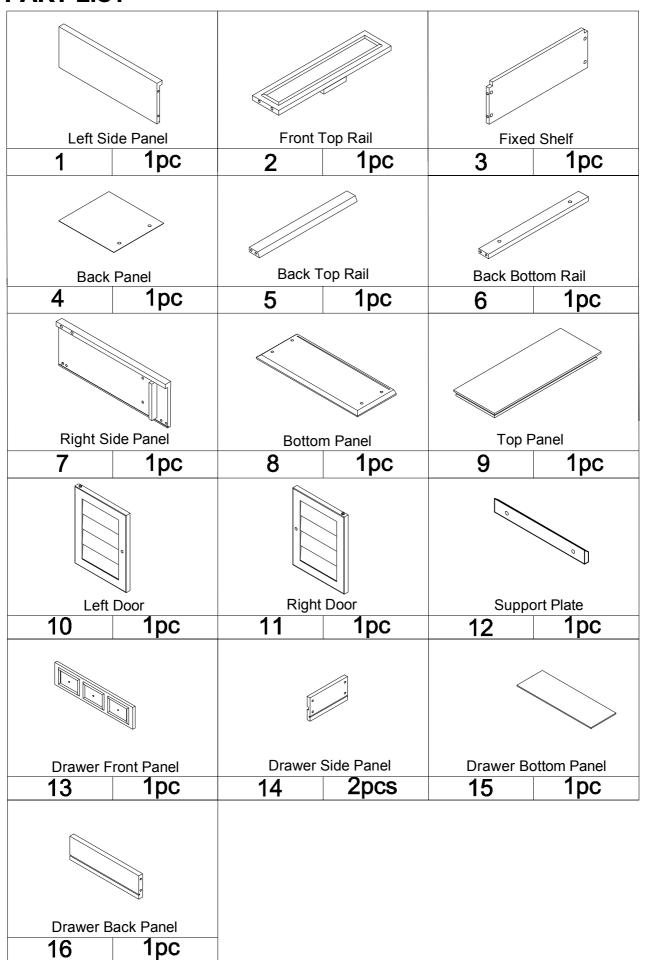

#### **HARDWARE LIST**

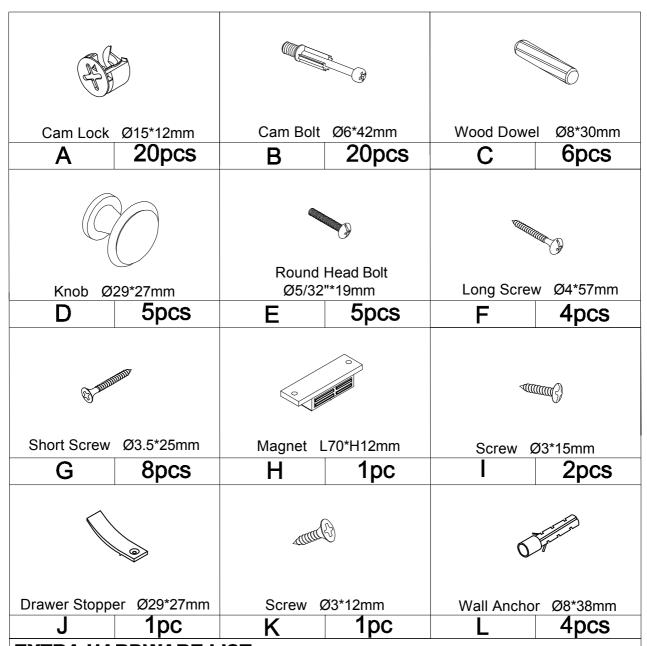

#### EXTRA HARDWARE LIST



AX2



© CX2




F X 1






### **ADDITIONAL TOOLS (** Not Provided)

Note: It is not recommended to use power tools during assembly. You may use power tools to assist in mounting the safety strap kit to the wall.



Phillips Head Screw Driver

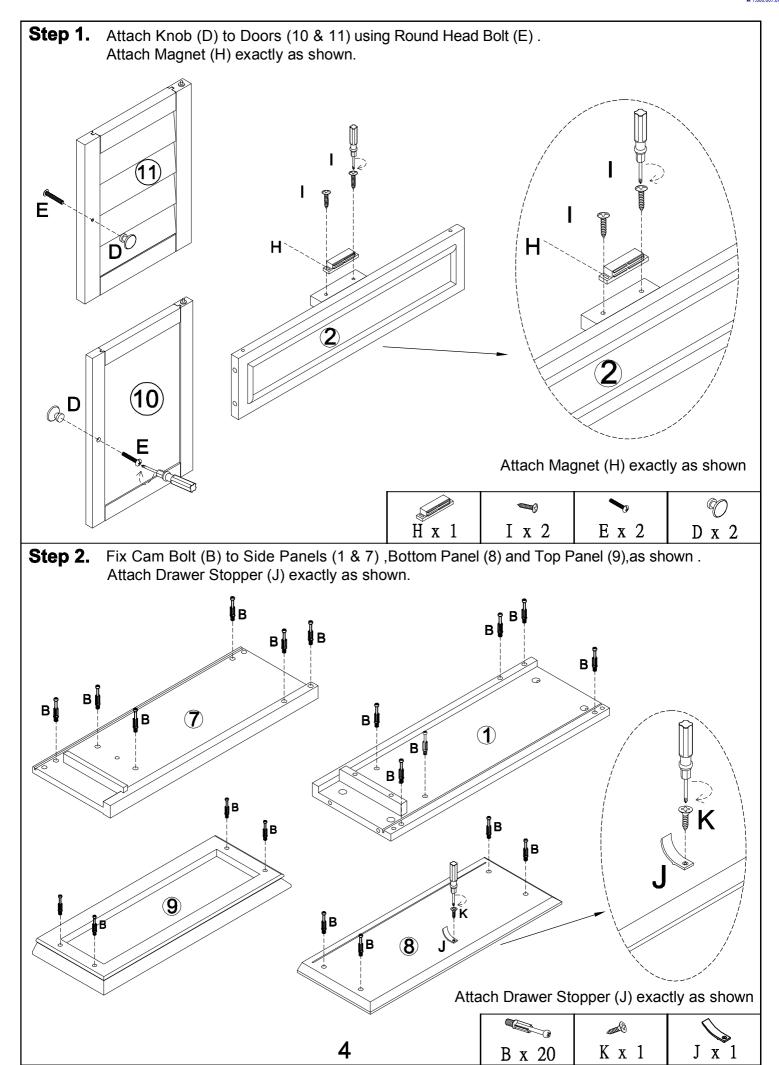


Step 3. Set Drawer Front Panel (13), Drawer Side Panels (14), Drawer Bottom Panel (15) and Drawer Back Panel (16) into place using Short Screw (G).


Attach Knob(D) to Drawer Front Panel (13) using Round Head Bolt (E).

G x 8 E x 3 D x 3


Step 4. Attach Rail (2 & 5 & 6) and shelf (3) to Right Side Panel (7) using Wood Dowel (C) and Cam Lock (A).


Set Left Side Panel (1) into place using Wood Dowel (C) and Cam Lock (A).

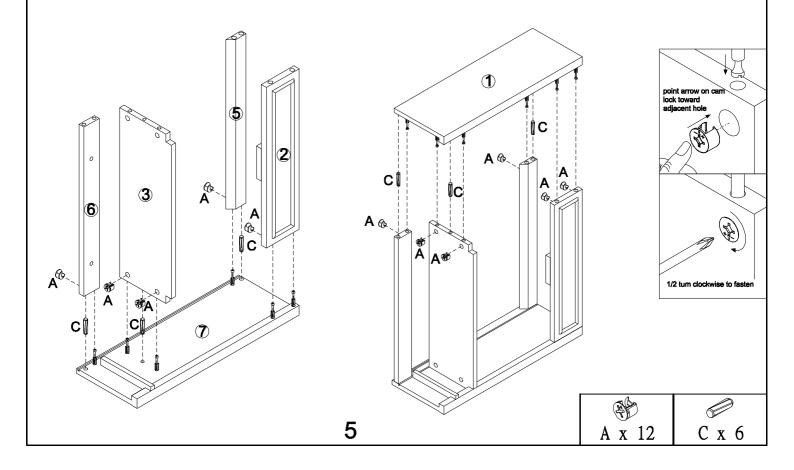


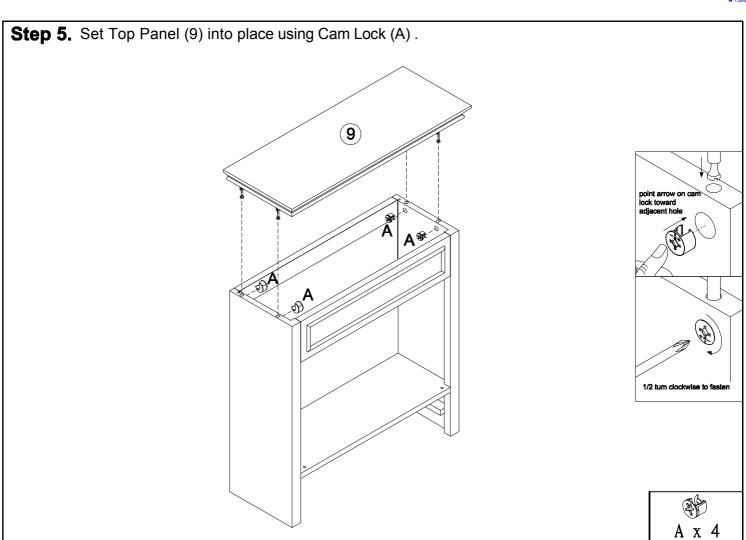

**Step 6.** Place Top Panel (9) to the ground and insert Back Panel (4) into cabinet . **Note:Insert Back Panel exactly as shown.** 

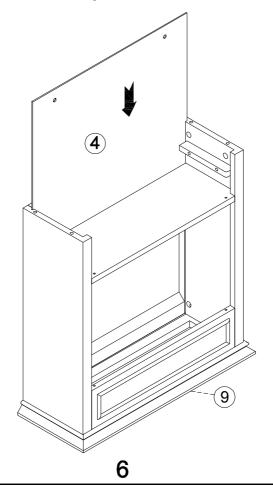


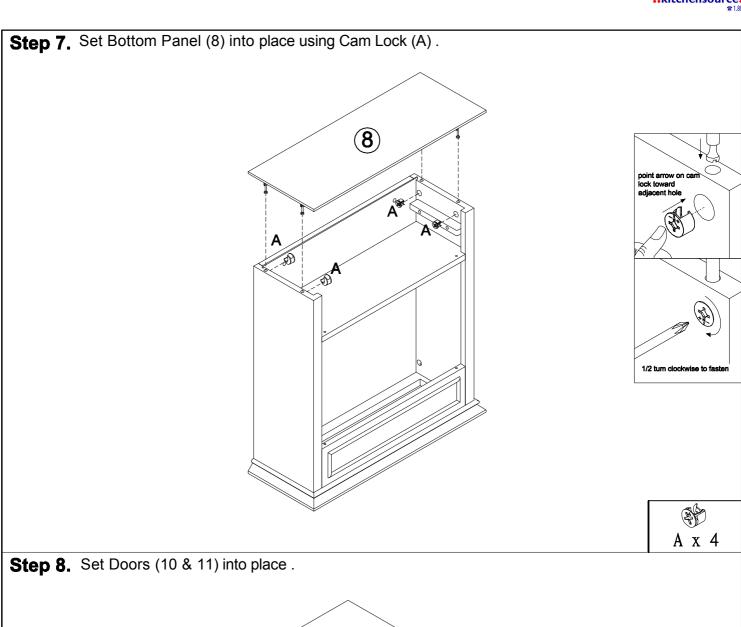

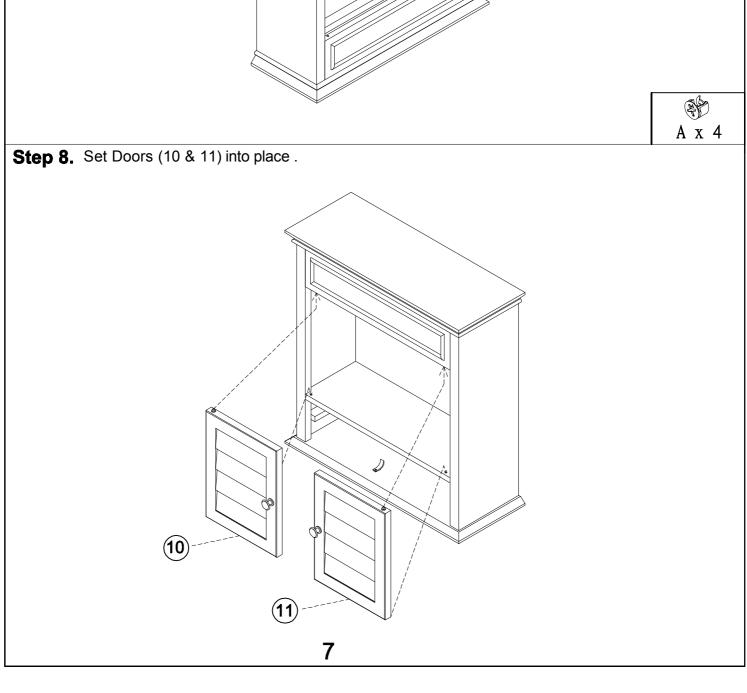

Step 9. Hold the Support Plate (12) in the desired location of the wall unit. This plate will be about 2-1/2" lower than the top of the wall unit. Making sure the Support Plate (12) is level, use a pencil to mark the anchor locations using the Support Plate (12) screw holes as a guide. We recommend using a leveler to make sure the Support Plate (12) is oriented correctly.

- -Drill two 11/32" holes in these marked spots and tap the Wall Anchors (L) into the drilled holes. Secure the Support Plate (12) to the Wall Anchors (L) with Screws (F). See Image.
- -Mount the completed unit onto the Support Plate (12). The back of the unit has a recessed area that will hook on to the Support Plate (12). Use a pencil to mark the 2nd set of anchor locations using the holes in the wall unit as a guide. See Image.
- -Remove the wall unit and drill two 11/32" holes at the pencil marks, and tap the Wall Anchors (L)into the holes.
- -Remount the wall unit and secure it to the Wall Anchors (L) with Screws (F). See image.

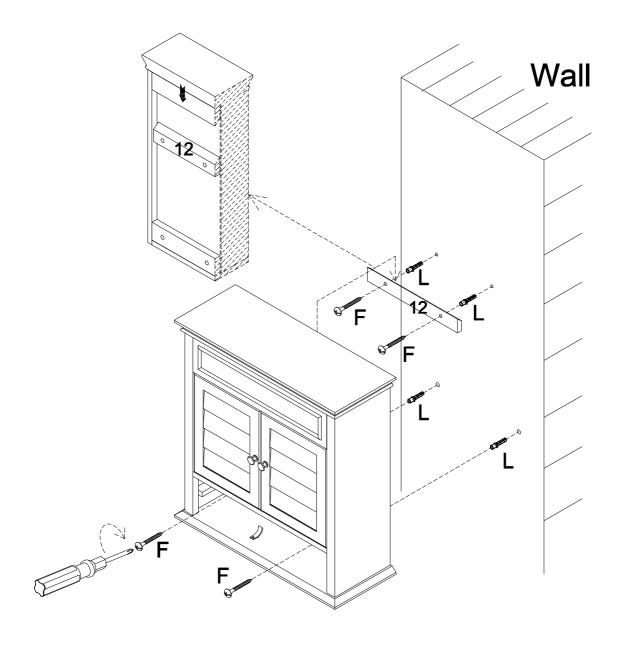





Step 10. Insert drawer into cabinet .

