

an **EefaCo.** Store  
1-877-275-9111

**A l i N E**<sup>™</sup>  
By Advance Tabco®

an **EefaCo.** Store  
1-877-275-9111

**A l i N E**<sup>™</sup>  
By Advance Tabco®

## Installation Instructions for SHD Series Drawers



### **CHECK FOR CONCEALED DAMAGE FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Drawers manufactured by **ADVANCE TABCO** are designed and constructed for storage. Applications may include storage of flatware, small utensils, etc. **ADVANCE TABCO** does not recommend product use for activities employing harsh and active chemicals.

Please consult factory regarding unusual applications. 08

**Contents:**

- (1) Outer Drawer Chassis
- (1) Inner Drawer Chassis
- (1) Stainless Steel Drawer Pan
- (4) 1/4-20 x 1/2" Bolts with Nuts

**Tools Required:**

- (2) 7/16" Open end Wrenches

**Step 1:**

Remove stainless steel Drawer Pan and Inner Drawer Chassis (**Figure 1**).

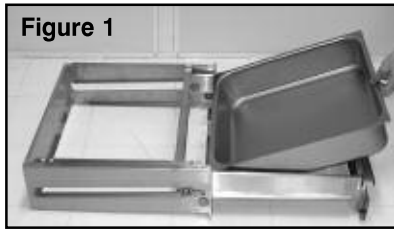


Figure 1

**NOTE:** Fully extend Inner Drawer Chassis. Then, remove stainless steel Drawer Pan by "tilting" pan upwards to clear "Safety Stop" (**Figure 2**).

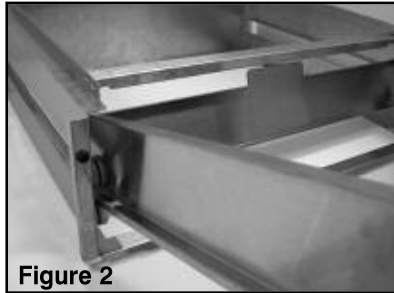


Figure 2

**Step 2:**

Install Outer Chassis to Work Table Drawer Angles under side provided of table top (**Figure 3**). Use 1/4-20 x 1/2" bolts and nuts to secure (**Figure 3a**).

**NOTE:** Outer Drawer Chassis mounts "between" work table Drawer Angles.

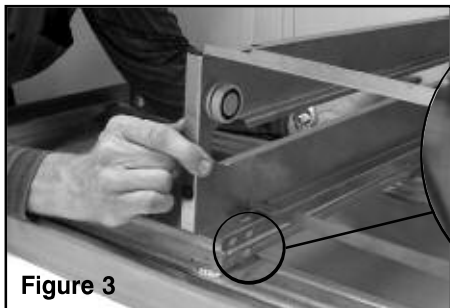


Figure 3


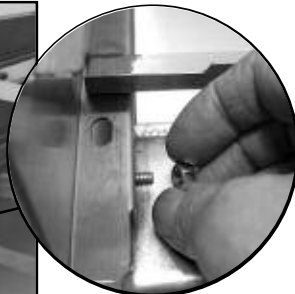



Figure 3a

**NOTE:**

When installing on 24" wide Work Tables, use "Front" set of mounting holes. When installing on 30" & 36" wide Work Tables, use "Rear" set of mounting holes (**Figure 4a & Figure 4b**).

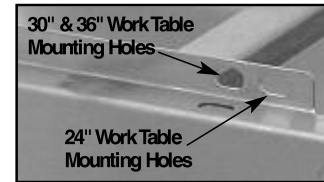

(**Figure 4a**)  
FRONT OF DRAWER SHOWN

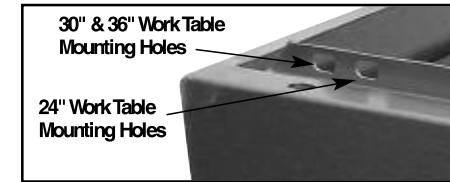

(**Figure 4b**)  
REAR OF DRAWER SHOWN

**Step 3:**

Install Inner Drawer Chassis (**Figure 5**).

**NOTE:** Align Bearing with Flange of Outer Chassis (**Figure 6**). Tilt Inner Drawer Chassis "up" to engage "Safety Stop".

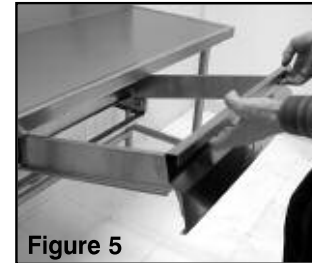


Figure 5

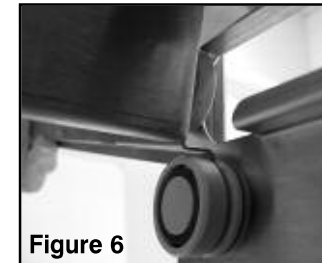


Figure 6

**Step 4:**

Position Inner Drawer Chassis to Full open "locked" position and insert stainless steel Drawer Pan (**Figure 7**).

